





**Because keeping you safe is our top priority...
You must read through the following care and use
instructions before using your new face shield.**

1 The NoCry face shield

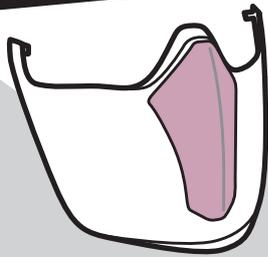


Protect your face with the NoCry face shield.

2 Cleaning your face shield

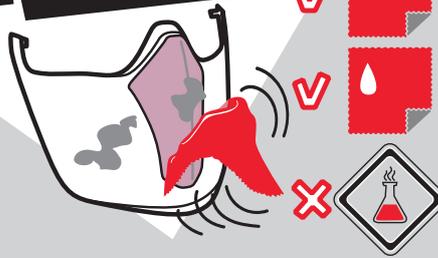


Clean the shield by using a dry or water-moistened soft cloth. Do not use chemicals.

3 Attention!

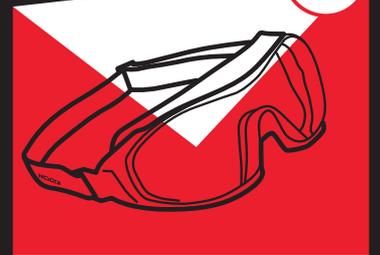


This face shield is only compatible with the NoCry 6X3 safety goggles.

4 Connect the shield to the goggles

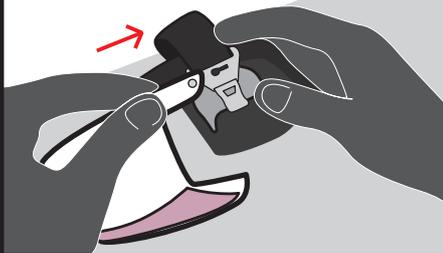


Line up the shield's fasteners with the opening in your goggles and gently push them in place.

5 Fit the goggles to the nosepiece

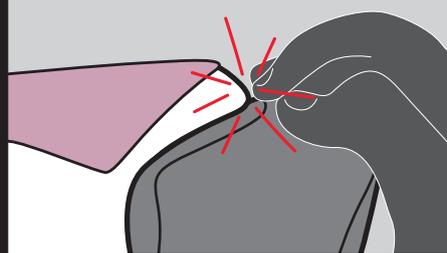


Hold the shield in one hand and the goggles in the other. Slot the nose of the goggles under the nosepiece and snap them in place.

6 Secure the shield in place

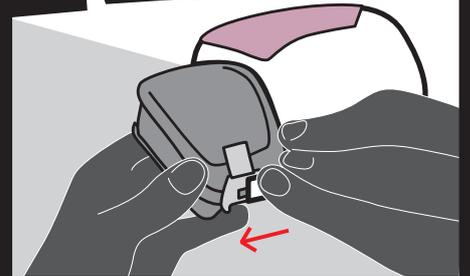

Gently slide each side up —one at a time— until it's snug against the top of the opening.

7 Adjusting the vent

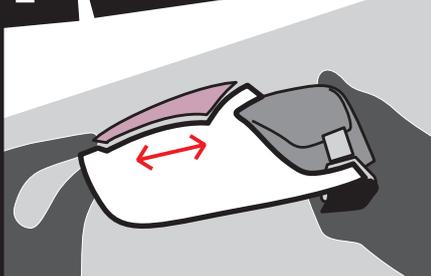

You can open the vent on the shield for extra airflow by sliding it up or down.

8 Carefully assess your working environment



Make sure that the shield is the most suitable means of protection from potential threats you are likely to be exposed to in your working environment.

9 Contact us



Feel free to contact us. We're always here to help.

HOW DO YOU LIKE YOUR NEW NOCRY FACE SHIELD?

Help customers just like you make better choices by sharing an honest review of your experience on or

Your feedback helps us serve you better and it helps others choose the best products.

To leave us a review on **Amazon** > go to **Orders** > **Write a product review**

To leave us a review on **Trustpilot** > **search NoCry** > **Write a review**