URB/N



BLUETOOTH Ca

USER MANUAL

Packed Box Content

· Smart Watch With Strap Magnetic Dock Charger

 Thank You Card · Warranty Card

Getting Started:

Download th URBAN Smart Fit App to sync



• Long Press the power button on your smart watch for 3-5 seconds

 Open the Urban Smart Fit App on your mobile phone and fills your personal details on the App

· Search for Revolt 02 on the app

(Make sure Bluetooth on your phone is switched on) · Click on Revolt 02 to connect and pair successfully.


• Turn your smart watch on/off by long pressing the power button for 3-5 seconds



JRBAN Revolt 02 can work with Da Fit App also.




Please charge your smart watch first before using it for the first time Use the magnetic charger provided in the box Use genuine URBAN 2-pin magnetic charger only



· Use only 5V/2A Adapter for

How to sync with URBAN Smart Fit App

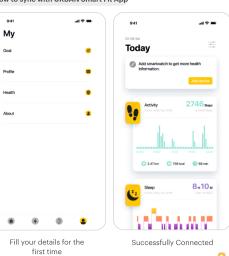

Charging URBAN Revolt 02



Revolt 02

Click on your device in the App Successfully Connected

Step 1 : After connecting the smart watch with URBAN Smart Fit App, you need to go to the Bluetooth settings of the phone and pair the watch with

The process of connecting the Bluetooth calling feature will be similar to the vireless earphones connection of your phone; The process of connection will

After the connecting with App, It will remind you to connect phone BT call

function by connecting mobile phone Bluetooth in phone setting menu.

your phone for Bluetooth calling and phone music function



Activating the Bluetooth Call Feature

be different for iOS and Android devices

How to connect

successful connection, the Bluetooth on your smart watch will light up, indicating connection is successful

"REVOLT 02"

Bluetooth setting list to

Bluetooth, It will show "REVOLT 02" in "MY DEVICES"

Device name Redmi Note 1

Audio-Revolt 02

AVAILABLE DEVICES O

Bluetooth list



with the App successfully, App see the device name "Audio will display "Pair with Audio - REVOLT 02" is in phone REVOLT 02" Please Pair it

Step 2: Now your smart watch is ready to be used for BT calling feature You can go to the dialer pad and start calling from your URBAN Revolt 02



Sports Modes

· If you want to add the other fitness activities click the (+) icon



- On standby swipe left on your smart watch to enter the access different exercise modes • Then select on the sports mode you want to start

- · Long press the screen for 3 seconds on standby to see the watch faces: swipe left and right to scroll through different watch faces
- You can download more watch faces from the ann and even cus as per your requirement















Voice Assistant

- To access Voice Assistant from your smart watch, Swipe 7 times towards right on standby
- Note: The phone need to be connected with Bluetooth and App for activating this feature



Add Apps to your Split Screen

Swipe left from main interface to "Add Components" interface and tap "+" icon to add new functions to main interface.



Swipe down on standby to view watch control center















Function Navigation

• This screen can be navigated by swiping left / right or swiping up/down.

• Flash Lights
•Theater Mode



Do not disturb

If turn on, phone calls and notifications will silent

Brightness Settings Power Save Mode

Adjust the brightness of the screen

If turn on, vibrations and quick view will be turned off, and brightness will be turned down

Menu Style Setting Tap to enter into menu style selections

Phone Call Mode Turn to enable watch can connect with phone Bluetooth











 Just swipe right on your smart watch to enter step count feature count, distance, and calories burnt over your phon via App.

To track and ensure good health you can monitor data like step







Swipe twice towards right on your smart watch to enter the sleep monitor feature on the smart watch.

• To track your data i.e. light sleep, & deep sleep analysis and number of hours



on your smart watch

Wait for 5 to 10 seconds to get the detailed analysis of you heart rate.






- Swipe four times towards right on your smart watch to enter the blood
- Wait for 5 to 10 seconds to get the detailed analysis of your blood pressure.



Swipe three times right on your smart watch to enter the heart rate feature

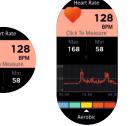



- pressure feature



Swipe six times towards right to enter the Weather Updates feature on your smart watch



undates for a week easier on your smart watch



Inbuilt Games

• Swipe five times towards right to enter the Spo2 feature on your smart watch • Swipe seven times towards right to enter the play games feature on your • Wait for 5 to 10 seconds to get the detailed analysis of your blood oxygen.

Main Functions

· Enter into breathing to take breathing and relax.

Breathing



Now, saving your favorite songs on your wrist is easy as smart watch comes with inbuilt memory to save songs



Exercise Records





Stop Clock / Alarm

 This helps to track the time frame for any given activity. · Set alarms and let your watch vibrate to remind you of the alarm



the camera of your phone to take photos.



• You can check the exercise records in exercise record mode.





• After watch connecting with App.Tap the shutter icon to remote control







• This sets a preset timer for the user to track and given time line



Physiological Cycle Reminder

Don't mark always on the calendar the smartwatch will remind



Message Notifications

 If you sync your smart phone with you can receive notifications straight from your wrist.





Watch Status Reminder

Drink Water Reminder If you set Drink Water Reminder function on App watch will remind you to drink water based on what you set via App.



Watchface Loading Reminder Watch will display "Loading" when you upload new watchface from App to watch.



About • Tap "About" to check watch version and QR Code.



• It is forbidden to throw this product into the fire to avoid an explosion. The battery life varies according to the environment and usage mode.

medical personnel first, in case if you are suffering from serious casualties,







gourban.in

 Daily maintenance of the watch and precautions The watch is not resistant to erosive liquids such a seawater, acidic and alkaline solutions and chemical reagents. Damage or defects caused by misuse or improper use are not covered under warranty

• Don't use detergents such a soap, hand, sanitizer or both foam for cleaning to avoid chemical residues from irritating the skin or corroding the devices.

• Company reserves the right to modify and improve any of the function.

Warning • This product is not a medical device. The watch and its application should not be used for diagnosis treatment, or prevention of disease. If you want to change your habits such as exercise and sleep, please consult qualified

Precautions for charging the smart watch