

URBAN
X5



User Manual

URBAN
X5



User Guide


Thank you for choosing the "Urban X5" developed by INBASE! to better use this product, please read the quick start guide carefully before use and properly manage it.

Product Specifications

Bluetooth Version	: 5.0V
Speaker	: 10mm Driver
Frequency Response	: 2-20KHZ
Sensitivity	: ≤-88dBm
Impedance	: 16Ω
Battery Capacity	: 400mAh
Charging Time	: 1.5hrs
Play/Talking Time	: Upto 40 hrs
Standby Time	: Upto 90 Days
Transmission Range	: Upto 10M
Colors Option	: Black

Product Information

1. Bullet silicone tips
2. ABS plastic front and back the metal cavity
3. Volume down / Next track
4. LED (Blue light / Red light)
5. Turn on / Turn off / Answer / End call / Reject call / Play / Pause
6. Volume up / Previous track
7. Necked line
8. TPE cable

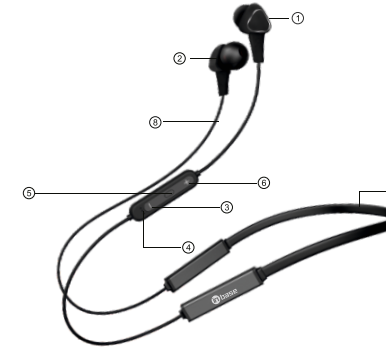

How to connect

1. Power on default bluetooth playback mode
2. Turn on the bluetooth the headset switch, turn on the default bluetooth mode.
3. Open the phone menu. turn on the bluetooth switch, and search for bluetooth devices;
4. Click "Urban X5" in the list of searched devices to connect is successful, you will hear a tone, that is, the connection is successfully paired.

How to use

Charging

1. Connect the charging port with any USB charging adapter computer USB Port.
2. Charging will start automatically with LED indicator turns red
3. The earphones are full charged when LED indicator turns blue

Note : Make sure the battery is full charged before putting the earphones away from storage .Charge the earphones at least once every 3 months when not using for a long time.

Pairing

- 1) Make sure the earphones and your bluetooth device are next to each other (within 10 meters).
- 2) The first time you use the earphone, press the multifunction button until the LED indicator flashes red and blue alternately. Now the earphones are in pairing mode
- 3) Activate bluetooth function on your phone and search for the nearby wireless connection: find "Urban X5" in the search results. Tap on the name to connect. Once connected, LED indicator flashes blue.
- 4) If you have paired your device with the earphones before, remove "Urban X5" from the bluetooth device list and pair again.

Note :

- 1) The wireless headset can remember the previously paired device
- 2) If the earphone cannot be paired with your Bluetooth device, press and hold "+" and "-" button for 5 seconds at any state of power on (red and blue lights flash twice at the same time) to clear the pairing history. Then restart the earphone for pairing.

Operation & Function

Magnetic Attraction	: The ear shell has a magnetic function to facilitate movement and prevent falling
Volume Increase	: Short press to play the next track long press the volume to increase
Volume Decrease	: Short press to play the previous track long press the volume to decrease
Next song / Previous song	: Short press the volume (+ / -) button
Play / Pause	: Long press the volume (+ / -) button
Power button	: 1. Press and hold the power button for 3 seconds, then turn it on and hear the power on tone. 2. Press and hold the power button for 3 seconds, then turn off the computer and hear the shutdown tone. 3. During music playback, short press to pause/play.

Important safety information

Don't remove or replace the Battery, including sensitive electronic components, including a battery, and can be damaged or cause injury if dropped, burned, punctured, crushed, disassembled, or if exposed to excessive heat or liquid. Don't use damaged batteries and electronic components.

Disposal and recycling information

Don't treat the product and battery as a household waste or into a here. When you decide to dispose of the product and its battery, please follow the local environmental laws to handle the battery to avoid an explosion.

Medical device interference

The product contains components and radios that emit electromagnetic fields and also contains magnets. These electromagnetic fields and magnets may interfere with pacemakers, delibrillators, or other medical devices.

Maintain a safe distance of separation between your

Consult your physician and medical device manufacturer for information specific to your medical device. Stop using product if you suspect it is interfering with your pacemaker, delibrillator, or any other medical device.

Listen Responsibly

To avoid hearing impairment, please make sure to turn down the volume of the music player before connecting the earphones. After putting the earphones into/onto the ears, turn up the volume gradually until to a comfortable listening level. Noise level is measured in decibels (db). Exposure to 85db or higher noise will lead to gradual hearing impairment. Please supervise your usage and the hearing impairment is a function of loudness against time. The louder the sound is, the shorter you can be exposed. The softer the sound is, the longer you can listen.



in base
INNOVATION DELIVERED

CE RoHS FC Recycle
Designed by inbase. all rights reserved
www.gourban.in