



MAINTENANCE INSTRUCTIONS: BLUESEAL REFILL

DO NOT REMOVE TRAP FOR REFILL

One 3 oz. refill will last for approx. 1500 uses. **No need to refill daily!!** See interval chart to the right.



- 1. Screw the *PortionAid* onto a *BlueSeal*[®] quart bottle.
- Squeeze bottle to measure out 3 oz. of *BlueSeal*[®] into the *PortionAid*.




3. Pour *BlueSeal*[®] directly into EcoTrap[®] towards back of urinal.

Task Time: 20 Seconds

BlueSeal[®] Trap Liquid Estimated Intervals


Approximate Users per Day per urinal	Monthly 3 oz. BlueSeal® Refills
1 - 75*	Monthly
76 - 150*	Twice a Month
151 - 225*	Three Times a Month
226 - 300*	Weekly
* Based on a 5 day work week.	

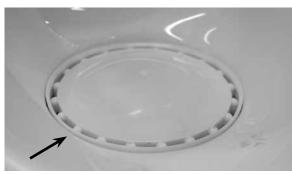

Incorrect Sealing (above rim)

Cleaning Instructions (Traditional):

- 1. Remove any foreign objects and other debris from base of urinal bowl.
- 2. Use only non-abrasive cleaners and a soft sponge/mop on urinal surfaces for cleaning.
- 3. Use cleaner on wet sponge, cloth, or mop. Then wipe clean all surfaces of urinal, especially the lower front.
- 4. Dry all surfaces with a soft cloth or soft rag.
- 5. Maintenance Video may be viewed at: www.waterless.com

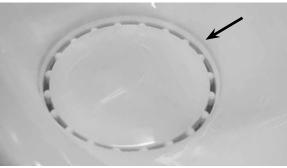

Correct Sealing (below rim)

Cleaning Instructions (Nviro-Clean™):

- 1. Remove any foreign objects and other debris from base of urinal bowl.
- 2. Spray Nviro-Clean[™] liberally on urinal surface starting at the top and working your way down to the plastic trap insert. Cleaning should take place once or twice a day or as washroom traffic dictates. DO NOT WIPE OFF OR SCRUB.
- 3. Do not use any other cleaners while using Enviro-Clean™.



4840 York Blvd | Los Angeles CA 90042 | www.CandLsupply.com Toll Free: (800) 458-2377 | Fax:(323) 258-6523 | sales@CandLsupply.com





MAINTENANCE INSTRUCTIONS ECOTRAP® EXCHANGE









REMOVE OR EXCHANGE EcoTrap[®] ONLY WHEN NEEDED, i.e. slow urine flow or pooling. The table below shows approximate intervals.

- 1. Have the *X-Traptor*[®] tool, new *EcoTrap*[®] a plastic bag and a deodorizer ready and on hand.
- 2. Insert *X-Traptor*[®] into trap slots and engage on knobs.
- While slowly pulling up, wiggle tool side to side to loosen *EcoTrap*[®].
 DO NOT PULL STRAIGHT UP! Once the *EcoTrap*[®] is removed, spray some deodorizer into the drain.
- 4. With *EcoTrap*[®] still on *X-Traptor*[®], pour liquid contents into the open drain hole of urinal.
- 5. Deposit used *EcoTrap*[®] in plastic bag. Disengage and remove X-Traptor[®].
- 6. Seal the plastic bag and discard in locally appropriate manner.
- 7. Loosen any sediment accumulation in drain hole with any long object.
- 8. Pour a full bucket, approx. 5 gallons, of preferably hot water into drain hole of urinal to flush sediments from waste line before inserting new *EcoTrap*[®].
- 9. Take new *EcoTrap*[°] and fill with water under faucet in sink. Then set *EcoTrap*[°] insert into trapway. **Push** *EcoTrap***[°] down**, <u>below</u> rim of trapway.
- 10. Add 3 oz. of BlueSeal[®]. Done!

TASK TIME: 3-4 Minutes

EcoTrap[®] Replacement Estimated Intervals

Approximate Users per Day per urinal	<i>EcoTrap</i> [®] Exchange
1 - 30*	Once a Year
31 - 60*	Twice a Year
61 - 90*	Three Times a Year
91 - 120*	Four Times a Year
* Based on 7000 uses per urinal and 240 days usage.	

4840 York Blvd | Los Angeles CA 90042 | www.CandLsupply.com Toll Free: (800) 458-2377 | Fax:(323) 258-6523 | sales@CandLsupply.com