

# RollEase®

## SafetyHold3™

Bead Chain or Cord Loop Tension Device

New stylish, clear device helps keep children safer by tying down loose window covering bead chain and cord loops. RollEase® ChildSafe™ technology is built into every SafetyHold3™ making bead chains and cords safer when installed properly.




### Safety Instructions:

A WCMA 5.2.4 Warning Tag (available from RollEase®) must be fastened to the loop or device prior to shipping.



The SafetyHold3 must be secured to the clutch or headrail to make the shade inoperable without purposeful action of installer.

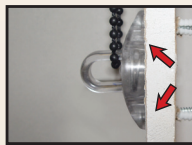

Use appropriate anchors when installing.

### Installation Instructions:

To ensure safety, SafetyHold3 must be installed properly following these five steps.




1 Thread bead chain (or cord) through base and around guide (flat side of base facing guide).



2 Push insert into guide until rounded edge is resting on the bead chain. (For cord, flip insert so opposite side with serrated edge is resting on cord.)



3 Squeeze guide legs while sliding spring over guide completely. (Be sure spring is all the way over the legs of the guide).

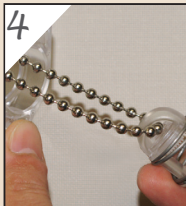

4 Slide base, flat side down, over curved end of guide.



5 Using screws provided, install tension device with maximum tension on the loop while still allowing ease of operation

### Patented Device:

RollEase offers this patented device for cord loops and bead chain loops. SafetyHold3 complies with the WCMA-ANSI standard 5.2.4 that requires a tension device to make the shade partially inoperable unless the device is installed.

The tension device is designed for continuous cord or bead chain loops that allows stop balls and/or connectors to pass through.

### Parts Included:



### Test Data:

- Meets WCMA standards for tension devices.
- Tested to ensure 10 year life of product.

### Order Information:

- RE0051203 (Carton of 10)
- RE0051303 (Bulk box of 250)



#### RollEase Headquarters

200 Harvard Avenue  
Stamford, CT 06902-6320 USA  
Office: 203.964.1573 / 800.552.5100  
Fax: 203.964.0513 Order Fax: 203.358.5865

#### RollEase West

7310 West Roosevelt Street, Suite 26  
Phoenix, AZ 85043 USA  
Office: 623.936.5818  
Order Fax: 623.936.5294