



User Manual & Quick Start

Compact Mini Ergonomic Keyboard

CONTACT US

⊕www.nomorepainergonomics.com.au info@nomorepainergonomics.com.au



Specifications

System requirements

- Windows 7, 2000, XP SP2, 10 or higher
- Mac OS X (10.28+)

Function Keys

To use the functions keys, simply press and hold the 'Fn' key while also pressing the desired functional key (listing below):

- F1 Open Media Player
- F2 Volume Down
- F3 Volume Up
- F4 Mute
- F5 Last Track

- F6 Next Track
- F7 Play/pause Track
- F8 Stop track
- F9 Home Page
- F10 Open Mail (windows only)
- F11 Lock keys (windows only)
- F12 Bookmark bar (windows only)



Other features



Wireless USB receiver



Down - Page Down



Quick Start

Installation

- 1. Connect the USB cord to your computer through any available USB port.
- 2. Wait for the computer to recognise your new keyboard.
- 3. Enjoy all the comfort the Compact Mini Ergonomic Keyboard has to offer!

Troubleshooting

A key is not responding

In this case it may be dirt or dust underneath the key.

 Gently remove the key, blow air in the space where the key sits, then place it back in its position.

The keyboard is not connecting to the computer

- Ensure the batteries are replaced with new batteries
- Unplug the USB cord and reconnect into the computer

If this does not fix the problem, please also try the following:

- Try a different USB port in the computer
- Try a different computer

If any of the above does not fix the issue, please contact us and we will be happy to assist.

Email: info@nomorepainergonomics.com.au


For Information About:

Warranty Policy Good Ergonomics

Other Products

Check our website: www.nomorepainergonomics.com.au



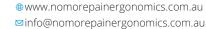



About us

No More Pain Ergonomics was established in 2013 to help people work comfortably and painfree. Since our establishment, we have helped over 10,000 people to work more comfortably and productively. By 2020 we plan to have helped over 100,000 people. Our vision is to create healthy, comfortable and productive workplaces through correct ergonomic setups.

Our Guarantee

We want to help people be more comfortable and eliminate their aches and pains. We stand by our products and their results, so much so that if your purchase doesn't resolve your aches or pains, simply send it back to us and we'll provide you with a full refund. That's the No More Pain Ergonomics promise!

All products can be returned to us within 30 days of purchase for either an exchange or full refund.

Please note:

Product must be in "as new" conditions and in the original packaging. Items considered to be subject to "wear and tear" or not in their original packaging will not be accepted for refund. A refund excludes any shipping or freight costs to customer and any shipping or freight costs of the product.

Warranty

We believe quality is an important part of our business and therefore strive to source and supply our clients with the highest-quality products on the market. Unfortunately, at times, our products can become faulty or stop working. However, rest assured that your product is covered by a full warranty. All of our products come with a minimum 12-month warranty from date of purchase. Should your ergonomic product become faulty or malfunction, simply lodge a warranty claim on our website and we will get in contact with you in order to find the best solution.

CONTACT US

- ⊕www.nomorepainergonomics.com.au⋈ info@nomorepainergonomics.com.au
- 123 Logan Rd Woolloongabba QLD 4102
- (07) 3103 3746

