



No More Pain
Ergonomics



Congratulations on your new

Folding Split Compact Keyboard

Product Contents:

- 1x Folding Split Compact Keyboard
- 1x Lightning cable

CONTACT US

www.nomorepainergonomics.com.au

info@nomorepainergonomics.com.au

Quick Start →

Quick Start

System requirements

- Windows 7, 2000, XP SP2, 10 or higher
- Mac OS X
- IOS 4.0 or higher
- Android 3.0 or higher

Windows

1. Connect the lightning cable to your computer through any available USB port to charge initially
2. Turn the keyboard power switch to 'on' (left side of keyboard)
3. Press the 'Connect' button (left side of keyboard) – Status indicator will flash blue
4. Open Windows Settings – Devices – Select 'Add Bluetooth or other device'. Click 'Bluetooth 3.0 Keyboard'.
5. Wait 3 seconds for the computer to configure the keyboard, the blue flash will turn off indicating it has successfully connected to the computer
6. Enjoy the all the comfort the Folding Compact Split Keyboard has to offer!

IOS & Android

1. Connect the lightning cable through any available USB port to charge initially
2. Turn the keyboard power switch to 'on' (left side of keyboard)
3. Press the 'Connect' button (left side of keyboard) – Status indicator will flash blue
4. Open 'Settings' – Bluetooth – Select 'Bluetooth 3.0 Keyboard'.
5. Wait 3 seconds for the computer to configure the keyboard, the blue flash will turn off indicating it has successfully connected to the computer
6. Enjoy the all the comfort the Folding Compact Keyboard has to offer!


Charging your Keyboard


1. The lightning indicator will flash red when it is low in battery
2. Insert the cord into an available USB Receiver port
3. The lightning indicator should light red to indicate charging
4. Once charged, the red light indicator will automatically turn off



Function Keys

To use the hotkeys/keyboard shortcuts, simply press and hold the blue 'Fn' key while also pressing the desired functional key (listing below).

Press the  + shortcuts, Easy as you think

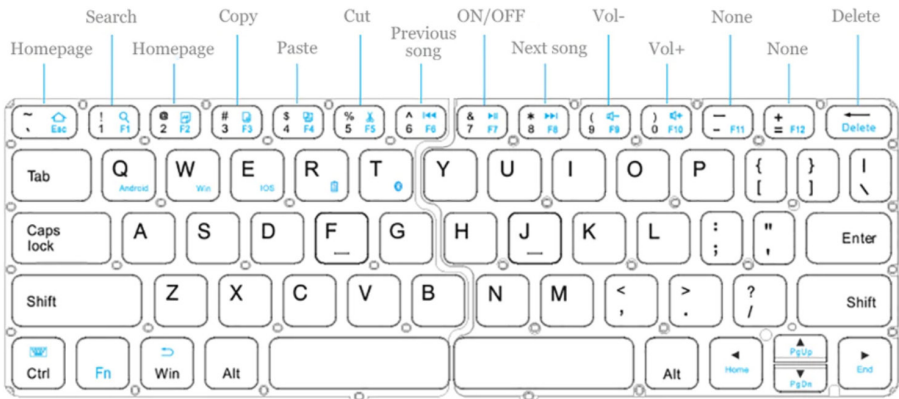

Specifications

Sleep Mode

The keyboard will turn on sleep mode after 10 minutes of inactivity to save battery life. To re-activate the keyboard, press any key and wait 3-5 seconds.

Three-In-One System

The keyboard has the ability to connect to multiple devices. To activate this function, press 'Fn' and either:

- Q – Android device
- W – Windows device
- E – IOS device

Device Details

- Working distance: up to 8 meters
- Bluetooth 3.0
- Batteries – 180mAh Lithium Polymer Batteries



Safety First

WARNING

To stop the risk of fire, damage to the keyboard, or electric shock; **Please DO NOT:**

- Place keyboard near electrical tools
- Place near a microwave
- Forcefully compress the keyboard
- Forcefully twist the keyboard
- Place near oil, chemical material or organic solvent

Maintenance

To protect the life of your keyboard – keep the battery fully charged and turned off to prevent the battery from over-discharging when the keyboard will not be in use for a long period. Ensure to charge you keyboard every 10 months.

For Information About:

Warranty Policy, Good Ergonomics, Other Products;

Check our website: www.nomorepainergonomics.com.au





About us

No More Pain Ergonomics was established in 2013 to help people work comfortably and pain-free. Since our establishment, we have helped over 10,000 people to work more comfortably and productively. By 2020 we plan to have helped over 100,000 people. Our vision is to create healthy, comfortable and productive workplaces through correct ergonomic setups.

Our Guarantee

We want to help people be more comfortable and eliminate their aches and pains. We stand by our products and their results, so much so that if your purchase doesn't resolve your aches or pains, simply send it back to us and we'll provide you with a full refund. That's the No More Pain Ergonomics promise!

All products can be returned to us within 30 days of purchase for either an exchange or full refund.

Please note:

Product must be in "as new" conditions and in the original packaging. Items considered to be subject to "wear and tear" or not in their original packaging will not be accepted for refund. **A refund excludes any shipping or freight costs to customer and any shipping or freight costs of the product.**

Warranty

We believe quality is an important part of our business and therefore strive to source and supply our clients with the highest-quality products on the market. Unfortunately, at times, our products can become faulty or stop working. However, rest assured that your product is covered by a full warranty. All of our products come with a minimum 12-month warranty from date of purchase. Should your ergonomic product become faulty or malfunction, simply lodge a warranty claim on our website and we will get in contact with you in order to find the best solution.

CONTACT US

🌐 www.nomorepainergonomics.com.au
✉ info@nomorepainergonomics.com.au
📍 123 Logan Rd Woolloongabba QLD 4102
☎ 1300 898 965

