

AIR
INNOVATIONS.



**CLEAN MIST® TOP-FILL
ULTRASONIC HUMIDIFIER**

Instruction Manual and Warranty Information

READ AND SAVE THESE INSTRUCTIONS

Contents

Safety Instructions.....	1
Unpacking / Specifications	2
Parts & Contents	3
Filling The Water Tank	4
Operating Instructions.....	5
Weekly Cleaning & Care / Storage	6
Troubleshooting.....	7
Other Great Products	8
Warranty	9



If you have a respiratory condition, please contact your physician prior to use.

FCC STATEMENT

Potential for Radio/Television interference

This device complies with Part 18 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 18 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. The product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the product on or off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and the receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS: Failure to follow all the instructions may result in electrical shock.

⚠WARNING

- This appliance has a polarized plug (one blade is wider than the other) as a safety feature. If the plug does not fit fully into the outlet, reverse the plug. If it still doesn't fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature.
- Before using the humidifier, extend the cord and inspect for any signs of damage; **DO NOT** use if the cord has been damaged.
- Keep cord away from heated surfaces and out of the way, where it cannot be stepped on or tripped over.
- **NEVER** use in an environment where explosive gases are present.
- Place humidifier on a stable level surface; **DO NOT** place on carpet, next to heating vents, under direct sunlight, in high temperature areas, or near computers and electronic equipment.
- **DO NOT** place the the humidifier directly on wood furniture or other surfaces which could get damaged by water.
- **DO NOT** direct the mist against a wall or home appliances.
- **NEVER** operate without water in the Tank; **DO NOT** use anything other than room temperature tap or distilled water.
- **DO NOT** touch the water in the Base during operation.
- **DO NOT** expose or immerse the Base in water when cleaning.
- **DO NOT** pour water into the base through the Air Outlet during cleaning and filling.
- **NEVER** block the Air Outlet or intake or cover the unit when it's in operation
- **DO NOT** use any attachments not provided with the unit.
- Discontinue use if humidifier makes loud noises or has a strange smell.
- **DO NOT** attempt to repair or adjust the unit; servicing must be performed by professional or qualified personnel.

CAUTION

- Only operate when fully assembled; only use as intended and described in this manual.
- Keep out of reach of small children.
- Always insert plug securely into the power source.
- Unplug the unit and empty the Water Tank and Base before carrying/moving.
- Only unplug when the humidifier is turned off; ensure hands are dry.
- Always turn off the unit before removing, emptying or filling the Water Tank.
- Perform regular maintenance of the Ultrasonic Nebulizer; **NEVER** scrape Nebulizer with a hard or sharp object.
- Dry the unit completely before storage; store in a cool, dry place.
- Do not drop, hit or otherwise subject this product to excessive shock.

No More Dry Air

Thank you for choosing the Air Innovations® – Clean Mist® Top-Fill Ultrasonic Humidifier and congratulations on taking this important step in improving the quality of air in your home or office.

This Humidifier uses Ultrasonic Technology to create humidity instantaneously, while working silently to erase the discomforts of dry air.

Unpacking



Remove the humidifier from the box.

Remove all external and internal packing (refer to page 4.).

*Follow directions to fill and operate the humidifier.

Specifications

Product Model	Power Consumption	Rating Voltage	Tank Capacity	Dimensions	Weight
MH-419	30W	110-120V~60Hz	4.5L / 1.2G	8"W x 7.67"D x 12"H	3.86 Lbs.

Parts & Contents



Water Tank



Top View



Water Reservoir / Base

- | | |
|----------------------------|--------------------------|
| 1. Water Tank | 7. Mesh Filter |
| 2. LED Light | 8. Water Window |
| 3. Water Reservoir / Base | 9. Air Inlet |
| 4. Power/Mist Control Knob | 10. Ultrasonic Nebulizer |
| 5. Water Tank Cover | 11. Water Sensor Float |
| 6. Mist Outlet | 12. Water Sensor |

Filling The Water Tank

⚠️ **WARNING:** If you have **hard tap water**, we recommend using **ONLY** filtered or distilled water.

For first use:



1

Remove the Water Tank from the Base.



2

Remove the foam insert located above the Water Sensor Float.



3

Replace the Tank with the Mist Outlet facing forward.



4

Fill the Tank with clean, cool water. Do not allow water to enter the Mist Outlet.

About White Dust

Use of high mineral content water may cause a white mineral residue to accumulate on surfaces in the room near the humidifier. The mineral residue is commonly called “white dust” and is caused by minerals suspended in the water. The higher the mineral content (or, the harder your water is), the greater the potential for white dust. The dust is not caused by a defect in the humidifier. To reduce white dust we recommend using filtered or distilled water.

Operating Instructions




ON / OFF

Plug into a standard (120V AC) electrical outlet. Turn the Mist Control Knob clockwise to turn the unit ON. The LED Light will illuminate blue. To turn OFF, turn the Mist Control Knob counterclockwise until you hear a click and the light turns off.

MIST OUTPUT

The unit will turn ON with the lowest mist setting. Turn the Mist Control Knob clockwise to increase the mist output and turn the Mist Control Knob counterclockwise to decrease.

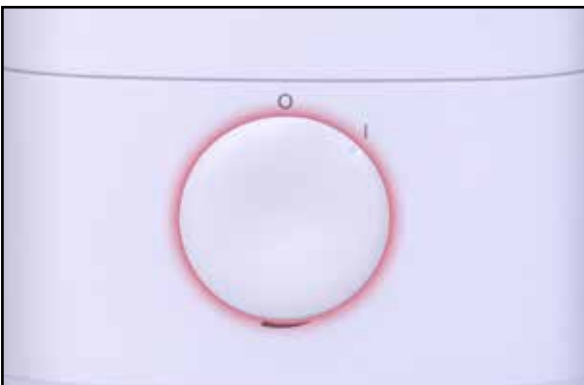

LOW WATER

When the tank is out of water the LED Light will turn from blue to red and the automatic safety shut-off will turn the Ultrasonic Nebulizer OFF. You may hear the fan for a few seconds, this is normal.

Weekly Cleaning & Care

We recommend thoroughly cleaning the humidifier at least once a week.

To Clean the Tank

Remove the Water Tank and empty the water. Clean and wipe the Tank with a soft damp cloth. If necessary a mild cleaning solution may be used. The Mesh Filter Screws onto the base of the Tank. To clean, remove the filter, rinse with water and replace.



To Clean the Base

Empty the water from the Base, pouring away from the Air Inlet. Wipe with a soft cloth.

To remove any scale or build-up in the Base or on the Ultrasonic Nebulizer, pour a 50/50 mixture of vinegar and lukewarm water onto the surface, then soak for five minutes. Clean with the provided brush and rinse. Note: Never submerge the base in water or any liquid.



To Clean the Surface

Clean the surface of the humidifier with a clean, soft, damp cloth as often as needed.

Storage

1. Follow all cleaning instructions prior to storage.
2. Dry all parts, including the inside of the Water Tank and the Water Reservoir.
3. Preferably store in its original box, in a dry place away from high temperatures.

Troubleshooting

Problem	Solution
Weak or no mist output.	<p>The water in the unit is too cold: Replace with cool but not cold water or set output to High and wait 10-15 minutes.</p> <p>The surface of the Ultrasonic Nebulizer is dirty: Clean Ultrasonic Nebulizer. (see pg. 6)</p> <p>Ultrasonic Nebulizer is not working: See Warranty.</p>
White dust is forming on nearby furniture.	<p>Hard tap water may deposit a certain amount of dust. To reduce white dust, we recommend filtered or distilled water.</p>
Water is leaking.	<p>Humidifier is not on a level surface: Place on level surface.</p>
Condensation is forming around humidifier or windows.	<p>Mist output level is too high for room size: Decrease the mist output.</p>
Missing parts.	<p>Call us toll free at: 844-600-1370, Monday thru Friday 8:30am to 5pm EST.</p> <p>Please reference model: MH-419</p>



Try These Other Great
Products For Your **Life!**



Available at: www.ForLifeProducts.com, www.Air-Innovations.com, www.Pursfection.com, www.RejuvenateProducts.com



Pursfection



Rejuvenate 

Make it **NEW** Again!



1-YEAR WARRANTY - MH-419

AIRINNOVATIONS®

Air Innovations® Clean Mist® Top-Fill Ultrasonic Humidifier comes with a 1-year manufacturer's warranty. If this unit should become defective within 1-year from the date of purchase, or if you have any questions or comments or regarding replacements for any of our products, please contact us directly at:

Call us toll free at: 844-600-1370
Monday thru Friday 8:30 AM to 5:00 PM EST.
Visit us on the web at: www.Air-Innovations.com
e-mail us: sales@air-innovations.com

Or write us:

Great Innovations, LLC
Att: Quality Assurance Dept.
2301 SW 145th Ave.
Miramar, FL. 33027 USA

Please fill out the warranty card and
mail back to the above address.
Or, register your warranty online today.
Simply go to:
www.Air-Innovations.com

NAME _____
ADDRESS _____
CITY _____
STATE _____ ZIP _____
TELEPHONE _____
E-MAIL _____
DATE OF PURCHASE _____
PLACE OF PURCHASE _____

Please check here if you would not like to receive any solicitations from our company

THIS UNIT COMES WITH A 1-YEAR WARRANTY SUBJECT TO THE FOLLOWING CONDITIONS:

In the first year, all repairs will be performed free of charge or the unit will be replaced. This warranty is not transferable, it is valid only for the original purchaser. This warranty will be voided if the unit is subjected to unauthorized repair or impact damage. If you have any questions please call toll free: 844-600-1370. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

AIR INNOVATIONS.



Air Innovations® ©2020 Great Innovations, LLC. All Rights Reserved. US & International Patents Pending. Printed in China.

