

CLEAN MIST™ SMART HUMIDIFIER™
TABLETOP & FLOOR STANDING WITH REMOTE CONTROL & MOOD LIGHT

**Instruction Manual and Warranty Information** 

## Contents

Safety Instructions	1
Jnpacking / Specifications	2
Parts & Contents	3
Filling The Water Tank	4
Operating Instructions	5
Neekly Cleaning & Care / Storage	6
Troubleshooting	7
Other Great Products	8
Narranty	9



If you have a respiratory condition, please contact your physician prior to use.

#### FCC STATEMENT

Potential for Radio/Television interference

This device complies with Part 18 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 18 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. The product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the product on or off, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the product and the receiver.
- · Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the
  user's authority to operate the equipment.

## SAFETY INSTRUCTIONS

Prior to using the appliance, read through the instructions for complete use and keep in a safe place for later reference.

- MARNING: DO NOT use outdoors. Only use as intended and described in this manual.
- WARNING: DO NOT expose or immerse the Base in water or other liquids.
- Before using the appliance, extend the cord and inspect for any signs of damage. WARNING: DO NOT use if cord has been damaged.
- WARNING: Keep cord away from heated surfaces and out of the way, where it cannot be stepped on or tripped over.
- WARNING: ALWAYS place humidifier on an elevated firm, flat, level surface where it's not easily knocked over. (e.g. on a table, chest, cabinet, etc).
- WARNING: DO NOT place the appliance directly on the carpet, next to a heating vent, under direct sunlight, high temperature areas, near computers or sensitive electronic equipment.
- WARNING: DO NOT place the appliance directly on wood furniture or other surfaces which could get damaged by water.
- MARNING: DO NOT use any attachments not provided with the unit.
- ⚠ WARNING: NEVER use the appliance after a malfunction, after it has been dropped or damaged in any other way.
- Only operate when fully assembled.
- Keep out of reach of children. Close supervision is necessary when this appliance is used by or near children, elderly or disabled persons.
  - ⚠ WARNING: NEVER drop or insert any object into any opening.
- WARNING: DO NOT block any air outlets or intakes.
- ♠ WARNING: NEVER cover the appliance when it's in operation.
- WARNING: To unplug turn controls to the "OFF" position, then remove the plug from the outlet. Ensure your hands are dry.
- WARNING: ALWAYS unplug and EMPTY the Water Tank when not in use for a long period of time.
- WARNING: ALWAYS turn off or unplug before removing, filling or emptying the Water Tank.
- MARNING: DO NOT wash, adjust or move without first unplugging the unit.
- <u>MARNING:</u> DO NOT touch the water or any other part in the Base during operation.
- MARNING: NEVER operate WITHOUT water in the tank.
  - **WARNING: DO NOT** use hot water in the tank.
- WARNING: ONLY use water in the tank, never use any additive such as essential oils, eucalyptus, water conditioners, etc... in the water.
- WARNING: DO NOT move appliance with water inside the tank. In this case remove the Water Tank and empty the Water Reservoir prior to moving.
- WARNING: DO NOT attempt to repair or adjust the unit. Servicing must be performed by professional or qualified personnel.
- MARNING: Discontinue use if unit makes loud noises or has a strange smell.
- Perform regular maintenance of the Ultrasonic Nebulizer.
- MARNING: DO NOT direct the mist against a wall or other home appliance.
- WARNING: DO NOT pour water into the Base through Air Outlet during cleaning and filling.
- WARNING: DO NOT rinse Base under faucet.
- ⚠ WARNING: DO NOT immerse the Base in water.
- ⚠ WARNING: NEVER scrape the Ultrasonic Nebulizer with a hard or sharp object.

## **Battery Disposal:**

⚠ WARNING: DO NOT dispose of batteries in fire. Improper handling/disposal of batteries may cause batteries to explode or leak. Please dispose of batteries responsibly by throwing away batteries in a proper trash receptacle per township ordinance.

# No More Dry Air

Thank you for choosing the Air Innovations® – Clean Mist™ Smart Humidifier™ Tabletop & Floor Standing With Remote Control and congratulations on taking this important step in improving the quality of air in your home or office.

The Air Innovations® – Clean Mist™ Smart Humidifier™ uses Ultrasonic Technology to create humidity instantaneously, while working silently to erase the discomforts of dry air.

# Unpacking

1





Remove the Remote Control and Dual Directional Mist Nozzle from the top of the packaging.

2





Carefully remove the Extension Nozzle and humidifier from the box by pulling the Base of the unit (Do not take the unit out of the box by pulling the tank).

3



Remove the plastic bag from the humidifier.

\*Follow directions to fill and operate the humidifier.

# Specifications

Proudct Model	Power Consumption	Current	Rating Voltage	Tank Capacity	Dimensions	Weight
MH-701C	30W	0.4A	110-120V~60Hz	6.5L / 1.7 Gallon	8.25"W x 8.25"D x 33" H	3.83 Lbs.

## Parts & Contents









- 1. Dual Directional Mist Nozzle
- 2. Extension Nozzle
- 3. Handle
- 4. Water Tank
- 5. Water Window
- 6. Mood Light
- 7. Base
- 8. Control Panel
- 9. Remote Control (requires (1) 3V Lithium Battery included)

- 10. Air Outlet
- 11. Water Sensor
- 12. Ultrasonic Nebulizer
- 13. Water Reservoir
- 14. Cleaning Brush15. Ceramic Filter
- 16. Tank Cap
- 17. Bottom Tank Handle

# Filling The Water Tank

MARNING: Always unplug the unit before removing the Water Tank.

⚠ WARNING: DO NOT touch the water in the Base.

**WARNING: NEVER** fill the Water Tank from the top of the unit. Follow Water Tank filling instructions in #4.



Remove Extension Nozzle and Dual Directional Mist Nozzle prior to filling the Water Tank.



Lift the Handle on top of the Water to remove the humidifier from the Base.



Make sure the handle is snapped back into place, then turn the Water Tank upside down and remove the Tank Cap by turning it counter clockwise.



Filling the Water Tank:
Use clean, cool, tap water.

\( \text{NWARNING: DO NOT} \) use extremely cold water, since it may temporarily reduce the mist output.
\( \text{NWARNING: NEVER fill with hot/warm water or use additives as this could damage the unit and void the warranty. \( \text{NWARNING: NEVER fill with hot/warm water or use additives as this could damage the unit and void the warranty. \( \text{NWARNING: If you have hard tap water STOP using tap water and use ONLY filtered, distilled, cold boiled or bottled water.



Replace the Tank Cap by firmly turning clockwise until tight. Turn the Water Tank upright and check the Tank Cap for leaks. If any water drips, remove the Tank Cap and retighten. WARNING: DO NOT place Water Tank on the humidifier Base if the cap is leaking.



When replacing the Water Tank on the Base, lift the handle up and align the notches on the front of the Water Tank and Base. Ensure the tank is firmly seated.







Attach the Dual Directional Mist Nozzle or Extension Nozzle & Dual Directional Mist Nozzle together to the top of the Water Tank. To easily control the direction of the mist simply separate the Dual Directional Mist Nozzle and position as desired-see photo above.

Extension Nozzle – To convert this unit from a Tabletop unit to Floor unit simply remove the Dual Directional Mist Nozzle from the top of the Water Tank. Place the unit on your desired floor area and insert the Extension Nozzle into the Top of the Water Tank. Then place the Dual Directional Nozzle on the top of the Extension Nozzle. WARNING: Be sure the unit is unplugged and turned OFF when changing the Nozzles

# Operating Instructions

⚠ WARNING: DO NOT operate the humidifier without water in the tank.


MARNING: NEVER lift the tank off the Base while the unit is operating.






Getting Started – Plug in to a standard (120V AC) electrical outlet. The digital clock on the LED Display will flash 4 times. Then, showing the current time, the unit enters a standby mode. To change the time in the standby mode: Press the "Clock" button for about 3 seconds-you will hear a beep and the hour will flash. Press the "Hr/Min Set" button to change the hour; quickly press the "Clock" button once more. The minutes on screen will flash, again press the "Hr/Min Set" button to change the minutes. The set time flashes for 3 seconds and then is saved automatically.

**ON/OFF** – From standby mode, press the "On/Off" button once and the "Operating" indicator will turn on and the current ambient humidity will be displayed. Mist may not appear immediately; allow up to 15 minutes for the water in the tank to transfer to the base. Timer Functions: The Delay Start and Auto-Off buttons allow you to set the humidifier to turn ON and OFF automatically as desired.

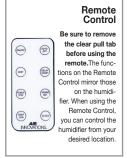







Auto-Off – The Auto-Off feature allows you to run the humidifier now and set it to turn OFF at a specific time automatically. To use, press the "Auto-Off" button once; you will see 0:00 illuminated on the display. The hour will flash-press the "Hr/Min Set" button to change the hour, quickly press "Auto-Off" again and the minutes will flash, use the "Hr/Min Set button to change the minutes. The set time flashes for 3 seconds and is saved automatically. The LED Display will read "Timer" "Auto-Off". To check the set time, press the "Auto-Off" button. To use the unit in Manual Mode you will need to clear the Auto-Off setting, to do so press the "Auto-Off" button for about 3 seconds, until you hear a beep. NOTE: You can use the Delay Start and Auto-Off functions together on this fully programmable LED Display to program the humidifier to turn ON and turn OFF at your desired times



Mist Output – When you turn the unit ON, it will default to the lowest mist setting. Pressing the "Mist" button will increase the output. Press once for Medium, twice for High, three times for Supreme, four times for the Turbo Setting. Pressing the Mist button a fifth time will bring the unit back to Low. NOTE: Turbo setting is intended for those wanting a more powerful mist and works best while the Extension Nozzle is being used. The Turbo setting will operate for 40 minutes and will then go to the Supreme Mist Setting. User must wait 20 minutes before Turbo setting can be used again.



Humidistat – By using this feature the humidifier will automatically monitor and control the humidity level according to your desired setting. Once the desired humidity level is reached the mist will shut OFF until the humidity drops below the setting and then the mist will turn back ON automatically to maintain the humidity level desired. To set this feature press the "Humidistat" button to your desired setting. Settings range from 40%-95% RH (Relative Humidity) in 5% RH increments. A 40%-60% Relative Humidity is recommended. Once you set your desired humidity, the number will blink three times and then the display will revert back to the Relative Humidity. To view the set humidity level, press the Humidistat button great according to your desired humidity. To view the set humidity level, press the Humidistat button great according to you set your desired humidity. To view the set humidity level, press the Humidistat button great according to you set your desired humidity. To view the set humidity level, press the Humidistat button great humidity level.



Beep/Dim – Default function: the humidifier is factory set to beep when changing settings and to alert when the humidifier is out of water; also the LED Display and Mood Light are set to be illuminated. To disable one or more of these settings: Press "Beep/Dim" once to disable all sound ("Beep Off" on the display will flash 3 times and then will remain on the display to indicate the sound is OFF); press the button twice to turn the LED Display OFF; press a third time to turn the Mood Light OFF. Pressing the "Beep/Dim" button a fourth time will bring the unit back to the default function.



Low Water – When the tank is out of water the "Waterless" indicator will appear on the display; you will hear 3 beeps and the automatic safety shut-off will turn the Ultrasonic Nebulizer and unit OFF. NOTE: You can disable the beep by pressing the "Beep/Dim" button once; re-enable by pressing the button three more times.

# Weekly Cleaning & Care

MARNING: Before cleaning always turn power off and unplug the unit from outlet. WARNING: DO NOT rinse Base under faucet. To clean, wipe the Base with a soft cloth. WARNING: DO NOT use any solvents or aggressive cleaning agents. Keep water away from the Air Outlet. MARNING: DO NOT tamper with the Water Sensor.

**About White Dust** -Use of high-mineral content water may cause a white mineral residue to accumulate on room surfaces near the humidifier. The mineral residue is commonly referred to as "White Dust". The higher the mineral content (the harder your water), the greater the potential for White Dust. The White Dust is not caused by a defect in the humidifier, but is due only to minerals suspended in the water from your tap. **MARNING**: If you have hard tap water **STOP using tap water and use ONLY** filtered, distilled, cold boiled or bottled water to minimize the White Dust residue.

**Tank Cleaning -** Remove the Rotating Mist Nozzle from the top of the Water Tank then remove the Water Tank from the unit. Turn the tank upside down, unscrew the Tank Cap and drain any water from the tank. Wipe the tank with a soft damp cloth then rinse it with warm water inside and out.

Base Cleaning - Gently wipe the Base with a soft damp cloth.

White Dust Cleaning - If mineral deposits "White Dust" are evident around the Ultrasonic Nebulizer and Water Sensor, clean these surfaces with a soft cloth and a small amount of undiluted white vinegar. If necessary, mix a solution of 50% white vinegar and 50% water and fill the Base with enough solution to cover the Ultrasonic Nebulizer (a). Allow it to soak for an hour and then use the provided brush to gently loosen buildup on the Ultrasonic Nebulizer (b). Put 1 cup of water in the Base and wipe clean with a soft cloth.

**Ceramic Water Filter Cleaning -** Remove the Water Tank from the humidifier Base. Remove the Tank Cap (c) and rinse Ceramic Filter thoroughly with tap water (d), then replace on Water Tank.

**Surface Cleaning -** Clean all surfaces of the unit with a clean damp soft cloth.

MARNING: When emptying the Water Reservoir on the Base, make sure that the water is poured away from the Air Outlet (e). If water is poured into the outlet it may damage the humidifier.






Replacing The Remote Control Battery - Push the tab to the left of the battery tray towards the right to unlock the tray. (f) While the the tab is pushed, pull out the battery tray. (g) Remove the battery from the tray and replace it with a new 3.5 volt lithium battery (CR2025) with the positive side facing up. (h) Insert the tray back into the bottom of the remote contol until it locks in. (i)











⚠ WARNING: NEVER leave water inside the tank for several days.

Leave the tank cap partially loosened to prolong the life of the cap.

4. Preferably store in its original box, in a dry place away from high temperatures.

5. Follow all cleaning instructions after long periods of storage.

# Storage

## Troubleshooting



#### **PROBLEM:** Power Light is OFF

#### **POSSIBLE CAUSES**

- a. Unit is not plugged in
- b. No power at outlet

#### **POSSIBLE SOLUTIONS**

- a. Plug in power cable
- b. Check circuits, fuses, or try a different outlet
- c. Press the POWER button to turn

the power on

#### PROBLEM: Weak or No mist output

## **POSSIBLE CAUSES**

- a. No water in tank
- b. Unit is not level
- c. White Dust on Ultrasonic Nebulizer and/or Water Sensor
- d. Blower not operating
- e. Water temperature is too low
- f. Ultrasonic Nebulizer is not operating

#### **POSSIBLE SOLUTIONS**

- a. Fill tank with water and wait 10 15 minutes
- b. Place unit on level surface
- c. Clean humidifier per instructions
- **d.** Ensure there is enough water in Base to activate Water Sensor
- e. Set output to High and wait for
  - 10 15 minutes
- f. See Warranty

#### **PROBLEM: Peculiar Odor**

#### **POSSIBLE CAUSES**

- a. If new unit
- b. Dirty Water Tank or old water in tank
- c. Minerals in well water or hard water

#### POSSIBLE SOLUTIONS

- a. Gently wipe the Base with a soft damp cloth
- Empty old water and clean Water Tank per instructions
- Use filtered, distilled, cold boiled or bottled water

## PROBLEM: White Dust on unit or nearby furniture

#### **POSSIBLE CAUSE**

a. Hard water used

#### POSSIBLE SOLUTION

Use filtered, distilled, cold boiled or bottled water

## PROBLEM: Condensation forms around humidifier or windows

### **POSSIBLE CAUSES**

- a. Mist output is set too high for the room size
- b. Direction of Rotating Mist Nozzle

## **POSSIBLE SOLUTIONS**

- a. Decrease the mist output
- b. Change direction of the Rotating Mist Nozzle

#### **PROBLEM:** Water is leaking

#### **POSSIBLE CAUSES**

- a. Tank Cap is not properly attached
- b. Water Tank is not properly seated
- c. Unit is not on level surface

#### POSSIBLE SOLUTIONS

- a. Follow #5 on page 4 "Filling the Water Tank"
- b. Follow #6 on page 4 "Filling the Water Tank"
- c. Place on level surface

### PROBLEM: Remote control does not work

#### **POSSIBLE CAUSE**

a. Battery may be low or needs to be replaced

## **POSSIBLE SOLUTION**

a. Replace battery



# Try These Other Great Products For Your Life!



Available at: www.ForLifeProducts.com, www.Air-Innovations.com, www.Pursfection.com, www.RejuvenateProducts.com



# Pursfection









































## 1-YEAR WARRANTY - MH-701C



Air Innovations<sup>®</sup> Clean Mist™ Smart Humidifier™ Tabletop & Floor Standing With Remote Control comes with a 1-year manufacturer's warranty. If this unit should become defective within 1-year from the date of purchase, or if you have any questions or comments or regarding replacements for any of our products, please contact us directly at:

Call us toll free at: 844-600-1370
Monday thru Friday 8:30 AM to 5:00 PM EST.
Visit us on the web at: www.Air-Innovations.com
e-mail us: sales@air-innovations.com

Or write us:

Air Innovations
Att: Quality Assurance Dept.
2301 SW 145<sup>th</sup> Ave.
Miramar, FL. 33027 USA

Please fill out the warranty card and mail back to the above address. Or, register your warranty online today. Simply go to: http://www.Air-Innovations.com

NAME	
ADDRESS	
CITY	
STATE	ZIP
TELEPHONE	
E-MAIL	
DATE OF PURCHASE	
PLACE OF PURCHASE	

## THIS UNIT COMES WITH A 1-YEAR WARRANTY SUBJECT TO THE FOLLOWING CONDITIONS:

In the first year, all repairs will be performed free of charge or the unit will be replaced. This warranty is not transferable, it is valid only for the original purchaser. This warranty will be voided if the unit is subjected to unauthorized repair or impact damage. If you have any questions please call toll free: 844-600-1370. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Please check here if you would not like to receive any solicitations from our company

