




INFINITY 105

THERMAL MONOCULAR
TM105

QUICK START GUIDE

- Press and hold the power/calibration button for 3 seconds to power on the device.
- Adjust the diopter focus until the image on the screen is clearly visible.
- Press the power/calibration button for 2 second to engage sleep mode – short press to disengage sleep mode.
- Short press the power/calibration button when unit is on to calibrate the device.
- Short press the brightness button to adjust screen brightness.
- Short press the zoom button to toggle magnification from 2.3x to 9.2x.
- Short press the color pallet/menu button to change color pallets.
- Long press color pallet/menu button to access more function settings.
- Long press the power/calibration button until red status bar fills completely to fully power down the device.

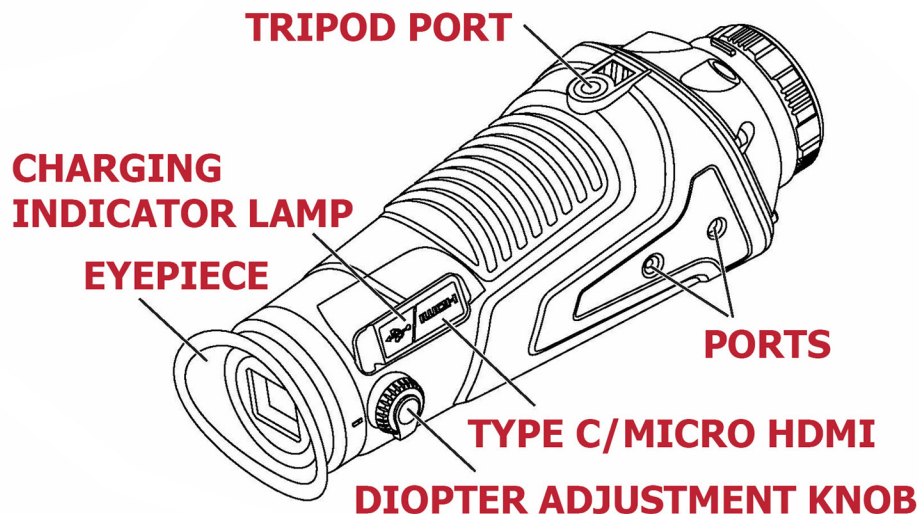

HELPFUL HINTS

- **Thermal does not work through glass. The glass will reflect the thermal image.**
- **Always make sure to turn the device completely off when not in use.**
- **Completely power down the device before removing or changing out the battery.**
- **When cleaning the thermal sensor, do not scrub with chemical solvents. Scrubbing the lens frequently may damage the coating of the lens and avoid touching the surface of the lens as acid materials on skin can damage the coating.**

