



nuvoe



Pod Instruction Manual



Safety First

Please read and understand the following prior to operating Nuvoe Pod and its Magnetic Anchor.

Improper operation may cause injury.

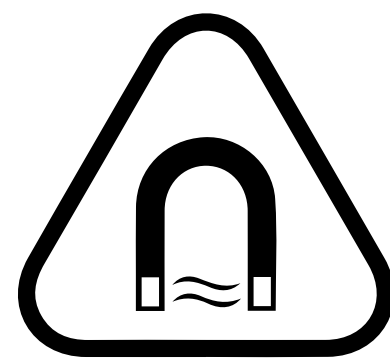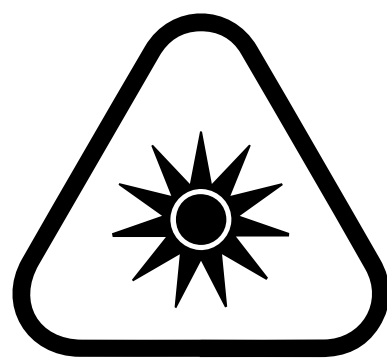

This Product is not suitable or intended for use by children

This Product contains small parts and may be hazardous to small children, especially children under 5 years of age. Keep this Product and any dangerous equipment including those with batteries or magnets out of the reach of small children.

Caution: Ultraviolet radiation

Do not look directly at the ultraviolet light. Direct ultraviolet light can irritate eyes and skin or may otherwise be potentially harmful. Press the button at any point to stop ultraviolet radiation.


Caution: Neodymium magnets

The Product contains powerful magnets and should be handled with care. Where a Magnetic Anchor is included with the Product, it should be affixed directly to a refillable water bottle to prevent injury to yourself, others or damage to itself or property.

Caution: Glass

This Product contains glass. Do not use the Product if the glass lenses are damaged or cracked.

What's in the Box?

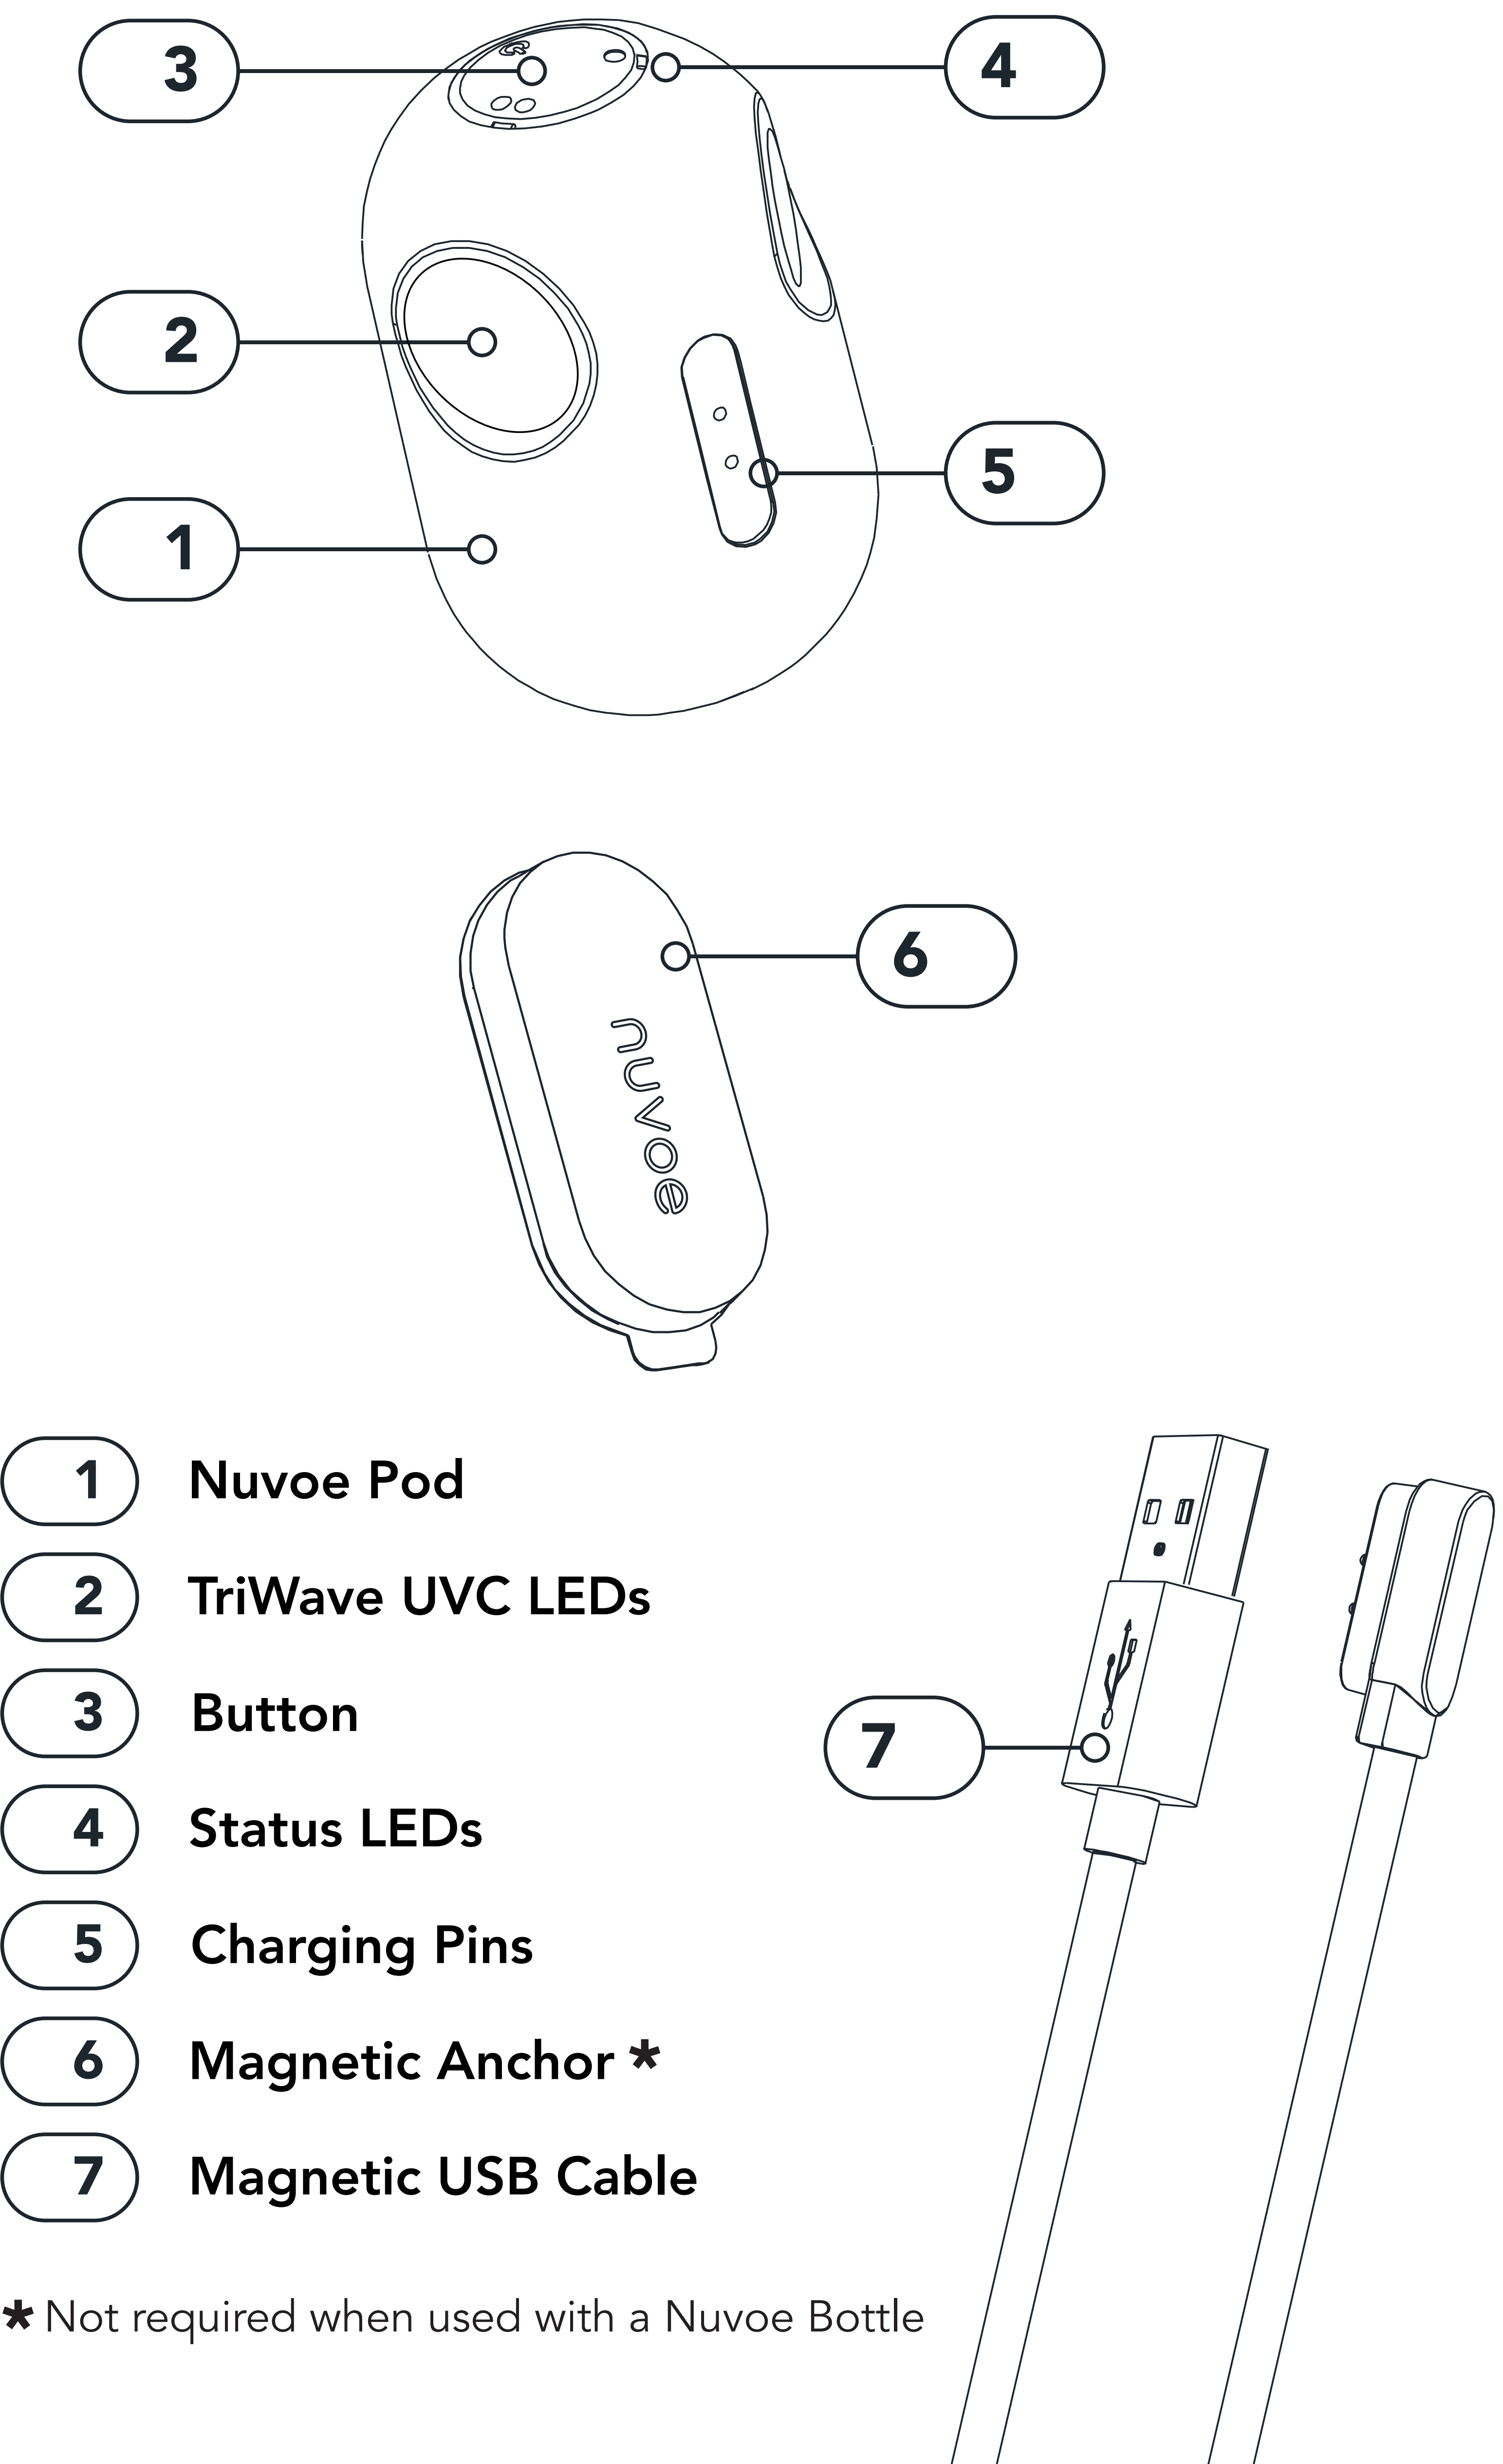



Upgrade your bottle*

Mount the Magnetic Anchor **halfway up** **your refillable water bottle** (sold seperately).

Ensure the bottle surface is clean and dry before removing the Anchor's release liner.

Press the Anchor onto the bottle firmly and hold for 10 seconds for a strong bond.

You only need to do this once.

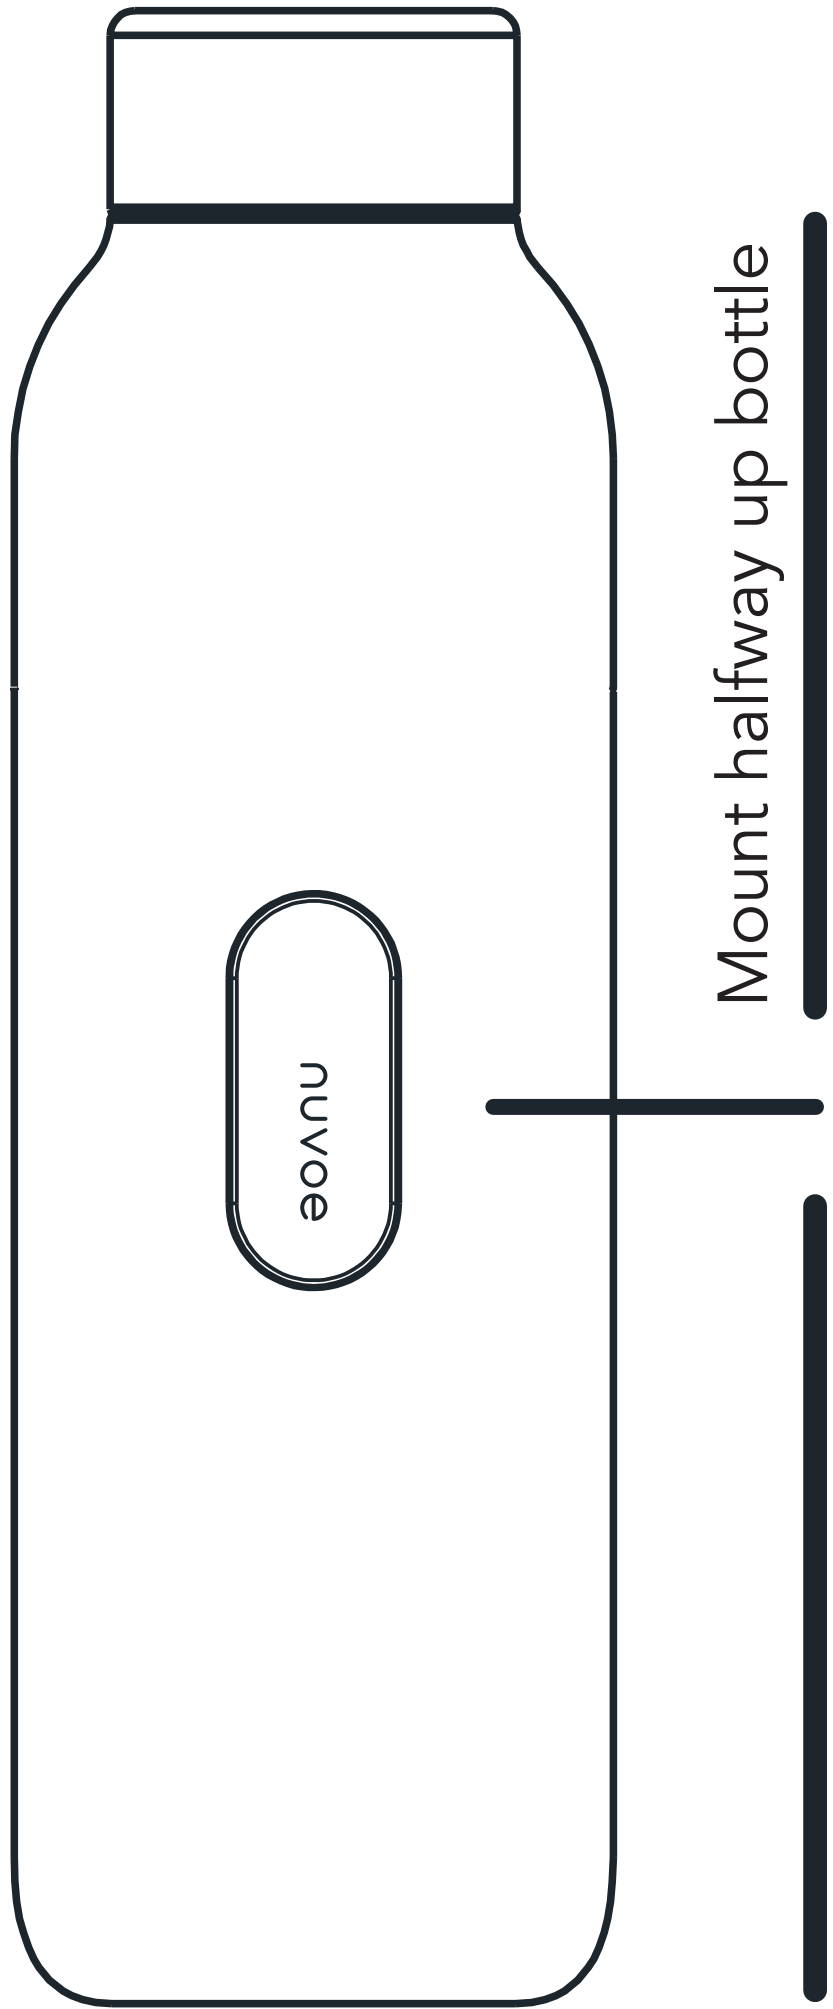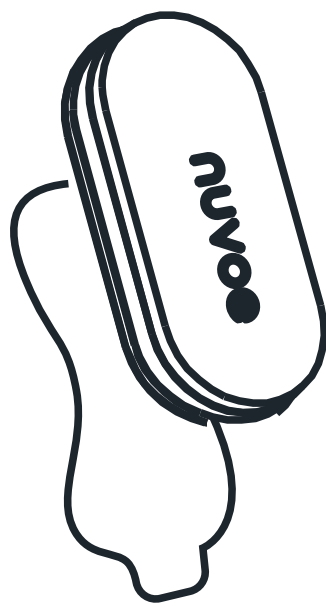

* Not required when used with a Nuvoe Bottle


Charge your Pod

The Nuvoe Pod comes from the factory ready to use - but we do suggest fully charging before first use.


To charge, simply attach the USB-A charging cable to your computer or any USB-A wall charging adapter - then snap the magnetic cable onto the charging pins on the back of the Pod. The magnets will align the cable.

Do not use any other USB cable with the Nuvoe Pod.


Make sure your Nuvoe Pod is dry before charging.

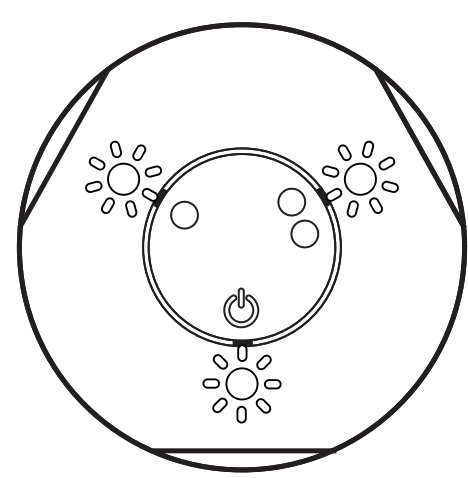

Three white flashing Status LED's
Charge Me!

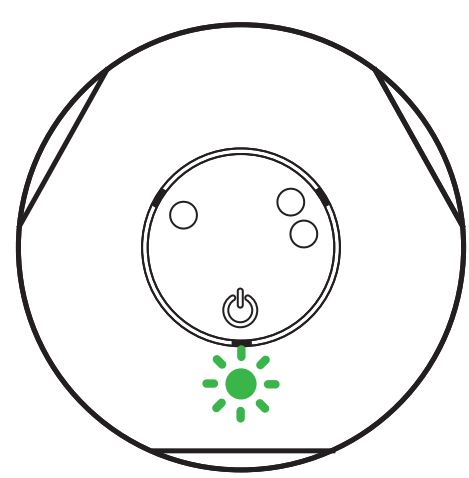

Flashing green LED
Charging

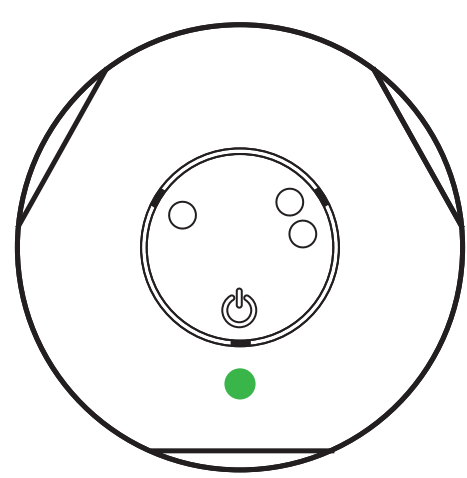

Solid green LED
Fully Charged



Using the Button

The Button has three user actions.



Status Check

A **single click** of the button tells you which mode your Nuvoe Pod is in (see next page).

It will illuminate the corresponding Status LED.



Select Mode

Press and hold the button for about 2 seconds until the Status LED jumps to the next position.


Repeat as needed.



Manual Start


Double click the button to manually start a TriWave cleaning cycle.

Manual Start can **only be activated from Timer Mode.**

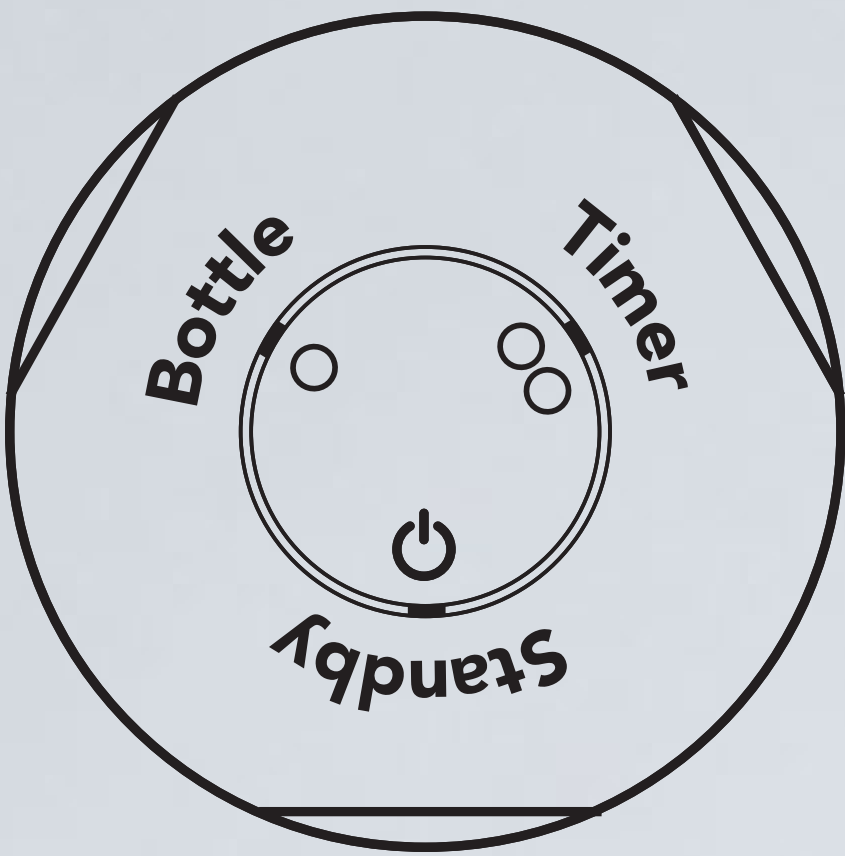

3 modes of operation






3 user actions

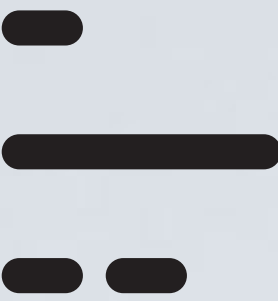

Which Mode?

Bottle

Shake to activate Pod inside your refillable bottle, for water purification on-demand.

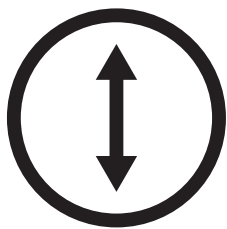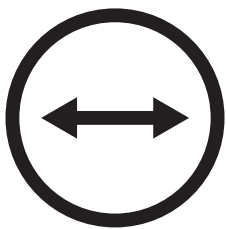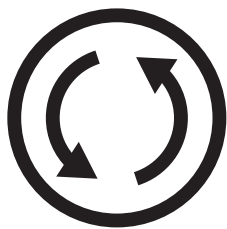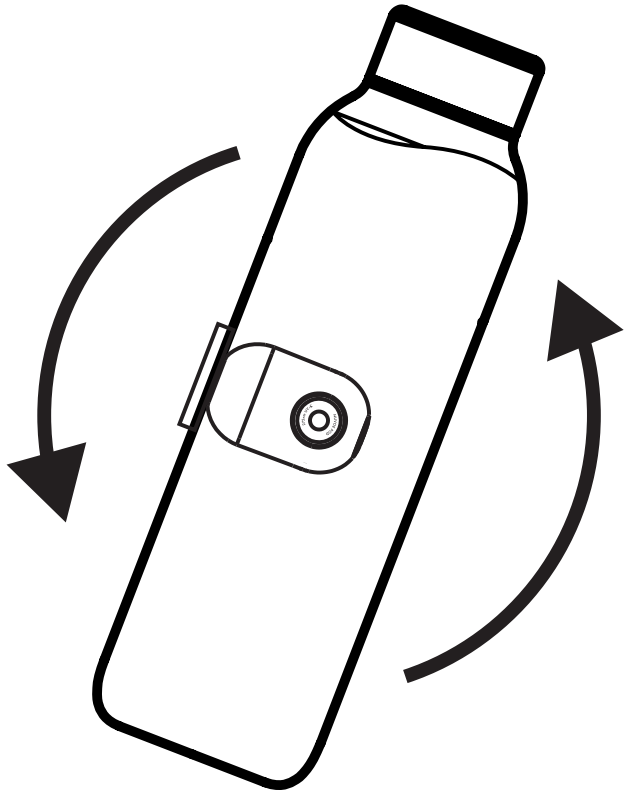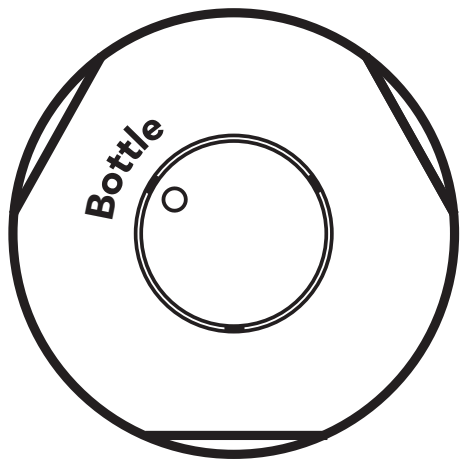


Every time you refill, **shake in a twisting motion** until you **hear the tone** - this starts a 1-minute TriWave cleaning cycle. A tone will signal the end of the TriWave cleaning cycle and indicating that your water is now purified.

To activate a 3-minute **Deep Clean** cycle - shake continuously until you hear the **second, faster tone**. A tone will also signal the end of cycle.


In Bottle Mode, Pod automatically turns on every 2 hours for 5 seconds to prevent bacterial growth, keeping your bottle fresh.

Timer


Automatic activation - so you can leave your Pod to clean water containers that can't be shaken.

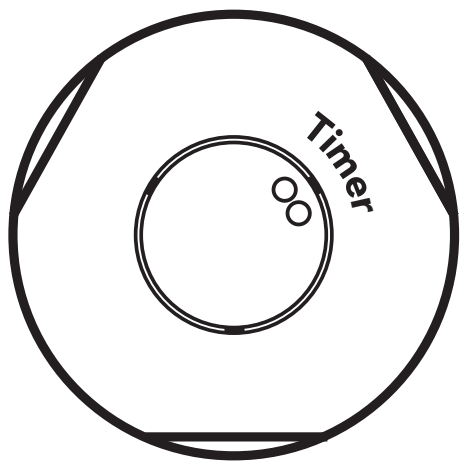


TriWave will automatically turn on every hour for 10 seconds.

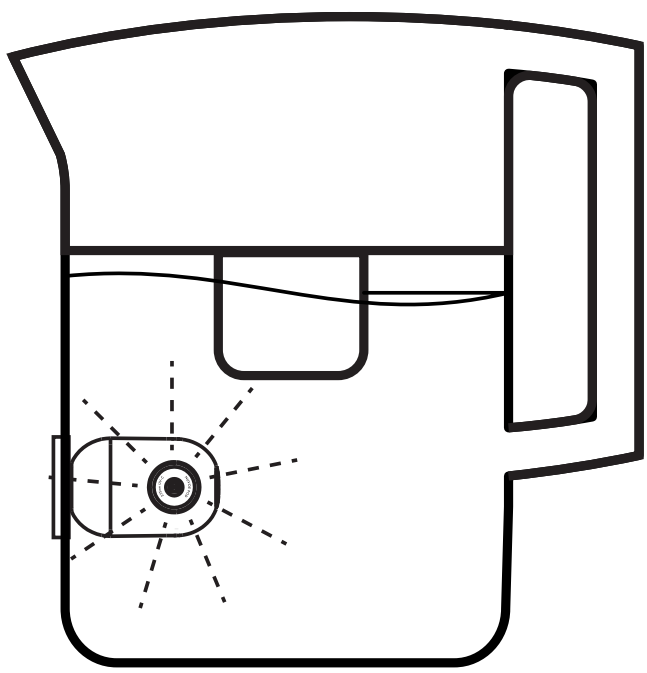

Filter Pitchers

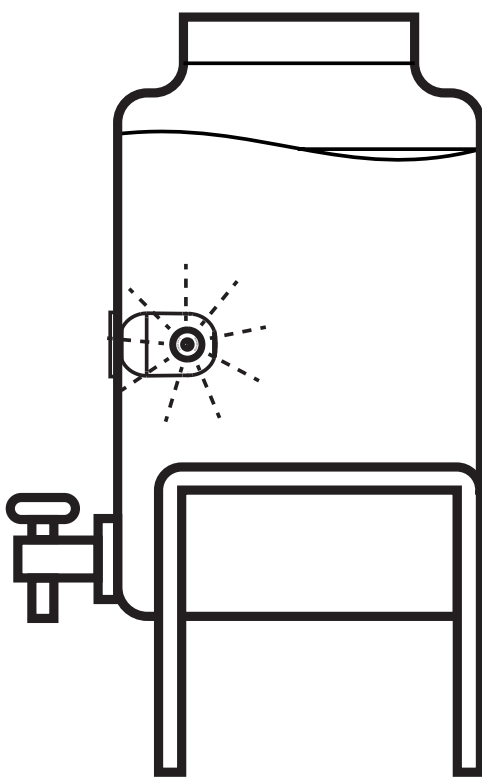


Water Dispensers

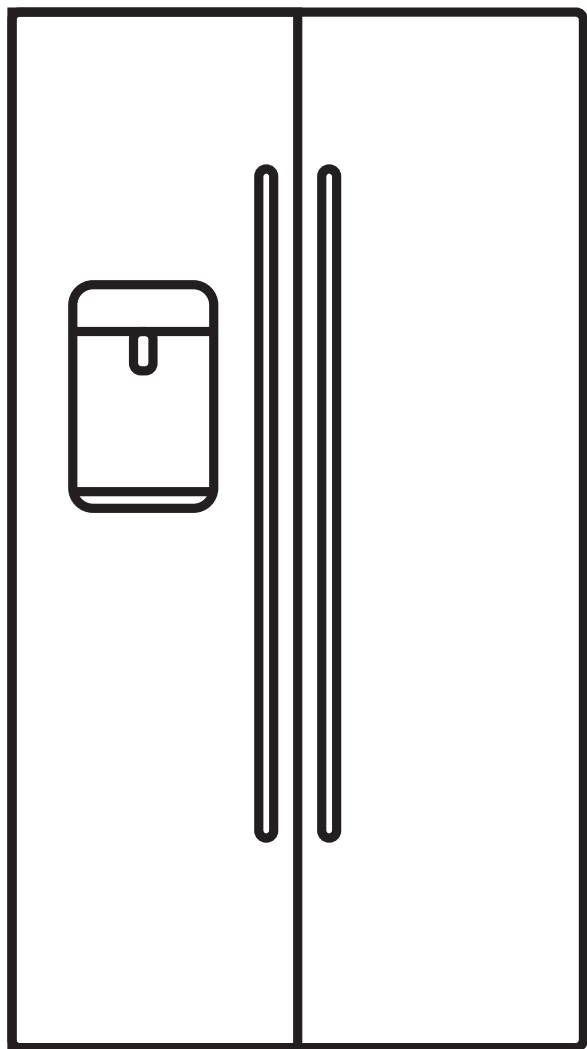


Refrigerator with
water chiller

Standby

Puts your Pod to sleep when not in use or when handling outside of a bottle or water container. TriWave never turns on in this mode.

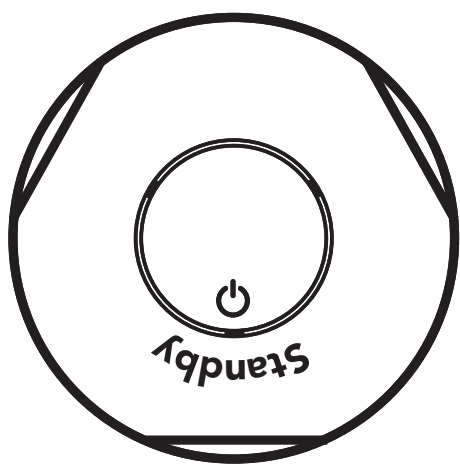

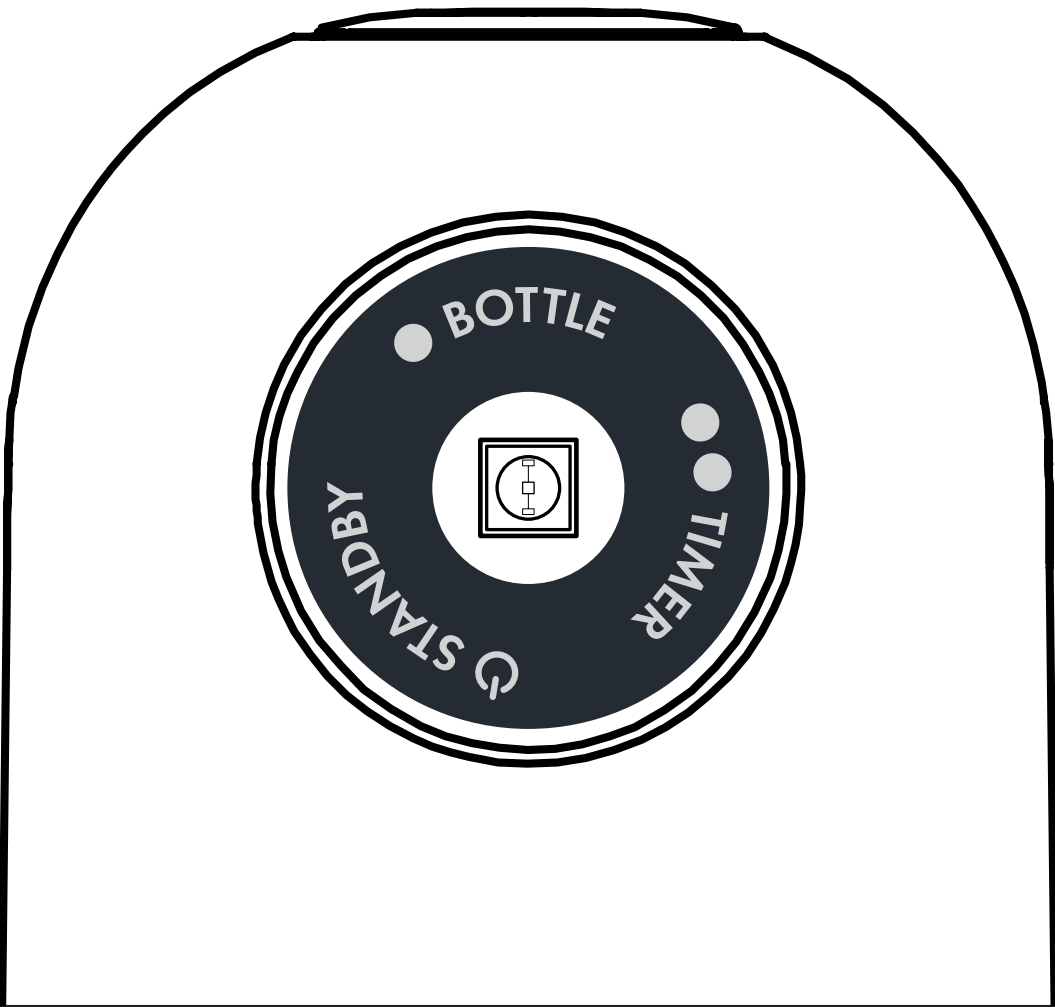

Hint

Never forget what the symbols on the button are for... the modes are printed on the lens!

Cleaning Cycles

	How to activate	What it does	When to use
Bottle Mode			
Standard Clean	Shake till you hear the first tone.	1-minute TriWave cleaning cycle.	Use every time you refill your bottle with water from the tap.
Deep Clean	Shake continuously till you hear the second, faster tone.	3-minute TriWave cleaning cycle.	Use when traveling and unsure of the water quality. Ensure water is clear and free flowing.
Auto Clean	Automatic	5 second TriWave cycle every 2 hours.	Nuvoe automatically cleans your bottle and purifies your water preventing any bacterial growth in your bottle.
Timer Mode			
Standard Clean	Automatic	10 second TriWave cycle every hour.	When your water receptacle is too large to shake.
Manual Start	Select Timer Mode and double-click the Button.	3-minute TriWave cleaning cycle.	Put your Pod into a tin a and sanitize anything. Keys, phone, toys etc.

Maintenance

Clean the outside of your Pod with a clean, moist cloth. Never use any chemical cleaning agents. Nuvoe Bottle is suitable for handwashing with mild detergent only, and is not dishwasher compatible.

Disposal

Nuvoe Pod contains a rechargeable lithium-ion battery and must be disposed of correctly. Do not remove the battery or attempt to open the product. **Do not dispose of in fire or allow any exposure or contact with fire.**

Dispose of the Product containing the battery in accordance with applicable law.

Where possible, contact your local town or city officials for information regarding the safe disposal of the Product containing the battery.

For EU customers or where safe disposal options are limited, contact support@mynuvoe.com for battery retrieval.

Disclaimer

Your use of the product is at your own risk. It is understood that you are voluntarily using it with full knowledge that there are inherent and/or associated risks in doing so, and you assume and accept any and all risks that may be associated with or that arise out of possession or use of the product, including but not limited to, the risk of property damage or loss, and/or serious injury (including shock or death).

Neither Nuvoe, nor its retailers assume responsibility or liability for any injuries or damages, physical or otherwise, resulting, directly or indirectly, from the use or possession of this product. Nuvoe reserves the right to revise this publication and to make changes from time to time in the contents thereof without obligation to notify any person of such revision or changes. The Product model may be changed for improvements without notice at any time at the discretion of Nuvoe.

You agree to these terms upon purchase and operation of the Product.

For complete information on limited product warranties, disclaimer or warranties, limitation of liability, release and indemnity, please see the Nuvoe website at mynuvoe.com

