

vive®



AIR PURIFIER

Owner's Manual
LVA2027WHT

vivehealth.com

OVERVIEW

We are constantly answering questions and recording helpful videos to make using your Vive Air Purifier as easy as possible. Check out the included QR codes and video links to help you through the process.



To see all of the FAQ's in one place visit vhealth.link/354

WHAT'S INCLUDED

- (A) Air Purifier unit
- (B) Air filter
- (C) Base
- (D) Power Cable



REPLACING THE AIR FILTER



Want to watch us do this instead?

Check out our video here: vhealth.link/b2v

1. Remove all packaging.
2. Ensure the machine is unplugged before installing or replacing the air filter.
3. Turn the air purifier upside down, and turn the base in the direction of the arrow marked "OPEN."



4. Remove the base and filter from the housing.




5. Remove the packaging from the filter.
6. Install new filter into the housing so it fits straight and balanced into place.
7. Reinstall the base, turning in the direction of the arrow marked "CLOSE."

NOTE: When the lamp rings flash red, this indicates that it is time to replace the air filter.

OPERATING THE AIR PURIFIER



For a video demonstration,
check out vhealth.link/mio

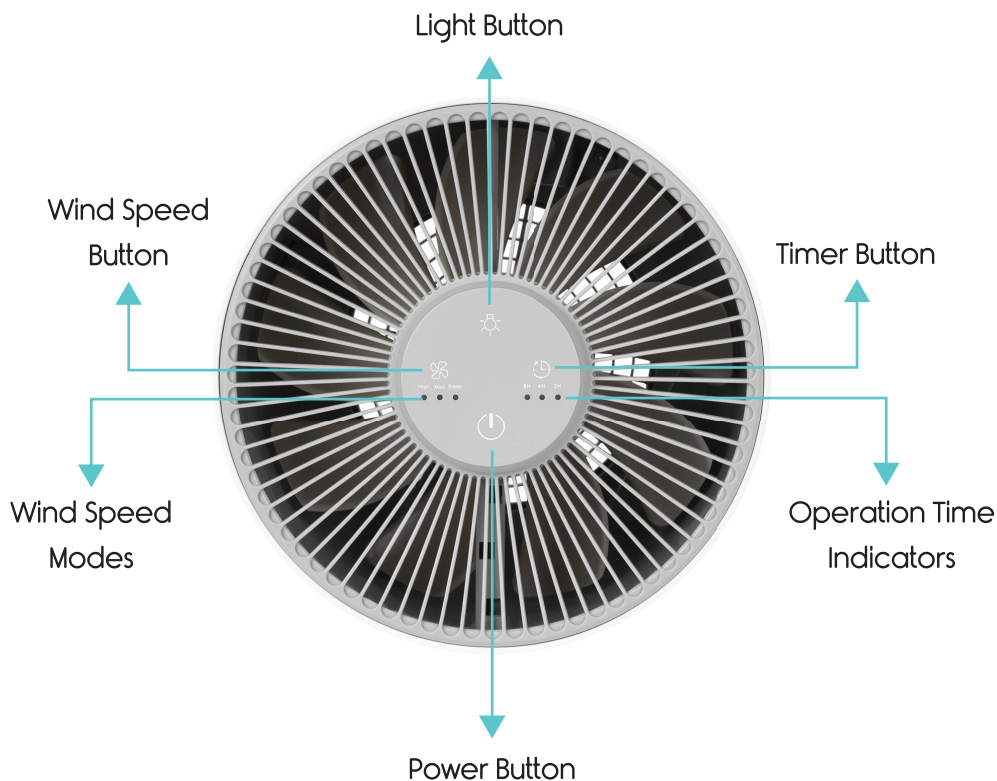

Turn the Unit On/Off

Plug the unit into a power socket, an audible buzzer will sound for approximately 1 second. To turn the unit on or off:

1. Touch the power button to turn on the machine. The buzzer will sound once and the MID mode wind speed indicator lights will turn on.
2. To turn the unit off, simply press the power button again. The buzzer will sound and the machine and indicator lights will turn off.

Set the Wind Speed

1. With the unit turned on, press the wind speed button. The buzzer will sound.
2. Press the wind speed button successively to adjust for SLEEP, MID, and HIGH modes.

NOTE: To operate in SLEEP mode, select it by pressing the wind speed button and wait 5 seconds. The lights will turn off and the air purifier will continue to run in sleep mode. Press any button to light up the display.

Set the Timer

1. With the unit turned on, press the timer button successively to set an operation time of 2 hours, 4 hours, or 8 hours.
2. To set for continuous operation, press the timer button enough times so that number of indicator lights are on for the 2H, 4H, or 8H modes.
3. In timer mode, the machine will begin a countdown as the end of the session comes to a close. When the time is up, the fan will stop and all indicator lights will turn off.

NOTE: Touch the timer button and the night light will be white gradient for approximately 3 seconds.

Set the Night Light Color

1. Press the light button when the unit is in standby state, the buzzer will sound and the light ring will cycle between blue, cyan, green, yellow, orange, red, and purple. When you find the color you like, press and hold the night light button for a moment and your color will be set.
2. Press the light button again and the LED light will turn off.

CARE

- Ensure the machine is powered off and unplugged.
- Use a soft cloth with neutral cleanser to clean away any dust or debris from the surface of the machine and air inlet/outlet.
- Store in a cool and well-ventilated space.
- Run the machine for a few minutes periodically to keep it in good working condition.

WARNINGS

- To avoid electric shock and fire, do not allow water, liquid, or any flammable detergent to get into or to clean the product.
- Do not spray insecticide, perfume, or other flammable spray around the product.
- Before connecting the power supply, check whether the voltage of the product is consistent with the local power supply voltage.
- This product cannot replace normal ventilation, daily dust collection, or oil pumping when cooking.
- Ensure the product is used in condition of a stable and horizontal level.
- Leave at least 30cm of space at the back and sides of the product, and at least 50cm of space above the product when in use.

- Ensure both the filter and its cover are properly installed prior to use.
- Do not insert fingers or other things into the air outlet/inlet.

SPECIFICATIONS

Model	LVA2O27WHT
Size	195mm x 195mm x 388mm
Net Weight	2 kg
Adapter	Input: 100V - 240V 50Hz/60Hz; Output 24V 1.2A
Power	23W
CADR	130m ³ /h
Coverage Area	≤ 16m ²



GOT MORE QUESTIONS?

Our customer service team would love to help! Feel free to connect with them by phone, e-mail, or chat on our website.

 service@vivehealth.com

 1-800-487-3808

 vivehealth.com