


# REMOTE

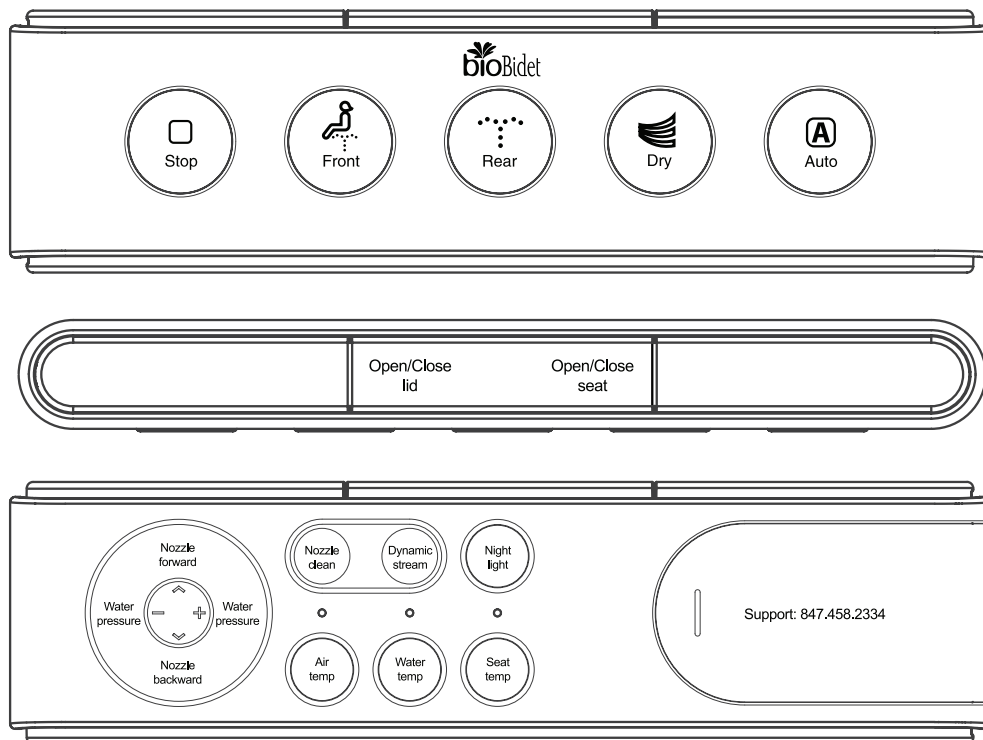

## STOP

Stops all functions



## FRONT WASH

Activates a front wash



## REAR WASH

Activates a rear wash



## WARM AIR DRYER

Activates the warm air dryer



## AUTO CLEAN

Activates a pre-programmed wash and dry cycle



## OPEN/CLOSE LID & SEAT

Adjust the water pressure to your liking



## ADJUSTABLE WATER PRESSURE

Adjust the nozzle position forward or backward



## ADJUSTABLE NOZZLE POSITION

Adjust the nozzle position forward or backward



## NOZZLE CLEAN

Press to extend the nozzle for manual cleaning



## DYNAMIC STREAM

Activates a wash that quickly alternates between hot and cold water



## LED NIGHT LIGHT

Turn the night light on/off



## ADJUSTABLE SEAT TEMP.

Adjust the heated seat to your liking



## ADJUSTABLE WATER TEMP.


Adjust the warm water temperature



## ADJUSTABLE AIR TEMP.

Adjust the warm air dryer temperature

# QUICK GUIDE

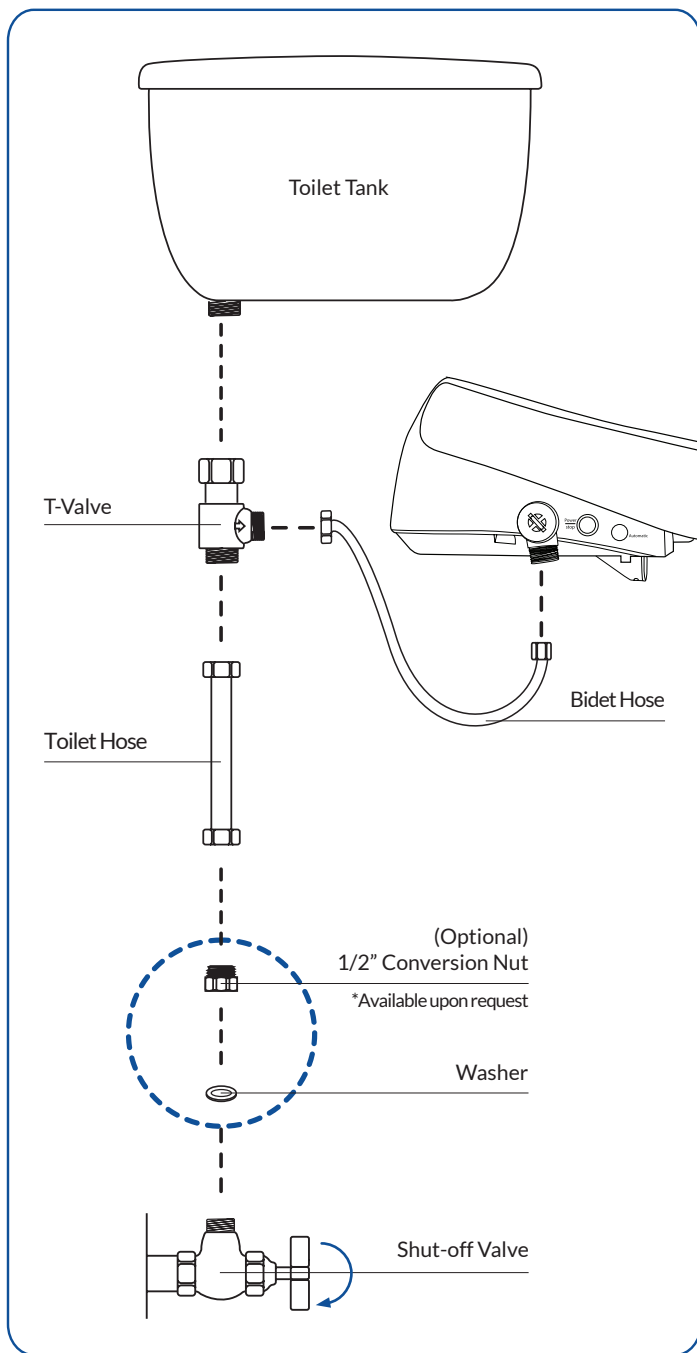

## 1. Turn Off Water


Turn off the water shut-off valve. Drain the toilet tank completely by flushing the toilet. Unscrew the hose connected to the toilet tank.

## 2. Remove Seat & Lid

Remove mounting bolts to release existing the toilet seat from the toilet.


## 3. Install Catch Plate

Insert the rubber anchors into the mounting holes. Place the catch plate and guides over each mounting hole. Insert the mounting screws through the bolt guides, catch plate, and rubber anchors. Fasten the catch plate to the toilet tank.

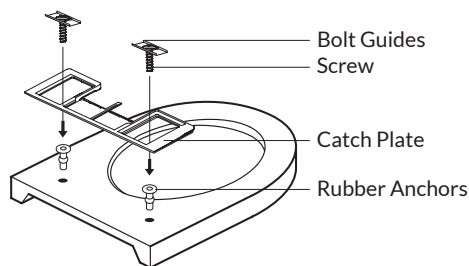

## 4. Attaching the Discovery DLS

Slide the bidet seat all the way on to the catch plate until you hear a click.

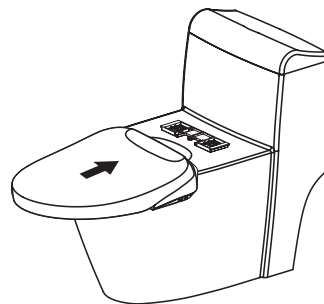

## 5. Connect the Water Hose

Install the t-valve on to the toilet tank. Ensure the rubber gasket is properly seated inside the t-valve.

Connect the provided toilet hose to the water shut-off valve and t-valve. You may also use your existing toilet hose.

Connect the bidet hose to the bidet seat and t-valve. Open the water shut-off valve. Check for any leaking or dripping.

Plug the power cord into a 120V power outlet.



Questions?  
Contact our support team!

847.458.2334  
support@biobidet.com  
www.biobidet.com