

24 Piece Hot Towel Cabinet With Sterilizer (SKU16180)



SKIN+ACT

Toll Free: 1.800.418.0830

www.skinact.com
www.spaandequipment.com

International: 818.834.6640

NOTICE

No part of this document may be photocopied, reproduced, or translated into any other language without prior written consent of Spa and Equipment/SkinAct.

The information in this document is subject to change without notice at any time and should not be construed as a commitment by Spa and Equipment/SkinAct.

Spa and Equipment/SkinAct assumes no responsibility for any errors that may be in this document, nor does it make expressed or implied warranty with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Spa and Equipment/SkinAct shall not be liable for incidental or consequential damages arising out of the furnishing, performance, or use of this document and the program material which it describes.

SKIN+**ACT**

Toll Free: 1.800.418.0830	www.skinact.com www.spaandequipment.com	International: 818.834.6640
---------------------------	--	-----------------------------

WARNING – UV MODELS ONLY


- This towel warmer with ultraviolet (UV) lamp operates only when the door is fully closed.
- If the door is open, UV radiation may be harmful to people.
- Never look directly at the UV lamp and never operate the unit with the door open.

IMPORTANT NOTES

- Wring towels well before placing them in the towel warmer. They should be slightly damp, not dripping wet, to avoid excess water inside the cabinet.
- Do not overfill the cabinet. Leave space between the towels and the inner walls so the warm air can circulate.
- For models with UV lamp: always close the door completely before use to avoid exposure to UV rays.
- For models with UV lamp: the UV lamp turns on and off automatically during normal operation as controlled by the internal temperature system.


SAFETY PRECAUTIONS

- Connect the unit only to a properly grounded (earthed) outlet.
- Warming time may be longer on very cold or freezing days.
- After each use, empty and clean the drip tray.
- UV lamp repairs must be performed only by Essential Med Tools or an authorized service center.

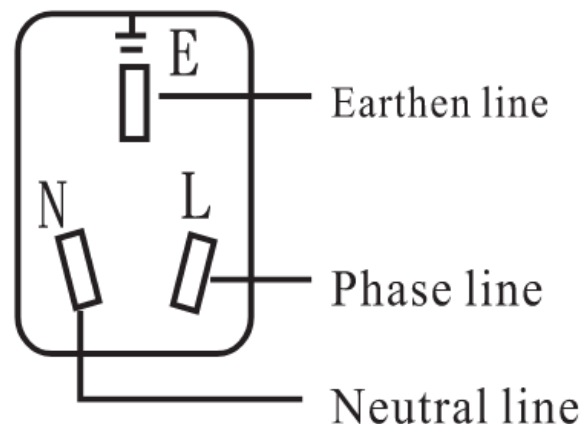

- Immediately switch OFF and unplug the unit if any abnormal condition occurs, such as:
 - Unusual noise
 - Burning smell
 - Excessive temperature
 - Presence of smoke
- Any internal repair must be performed by a licensed electrician and/or EMT.
- This product is not designed for use by children. Keep it out of reach of children.
- Repair or replacement of the power cord must be performed only by a licensed electrician.

PARTS LIST

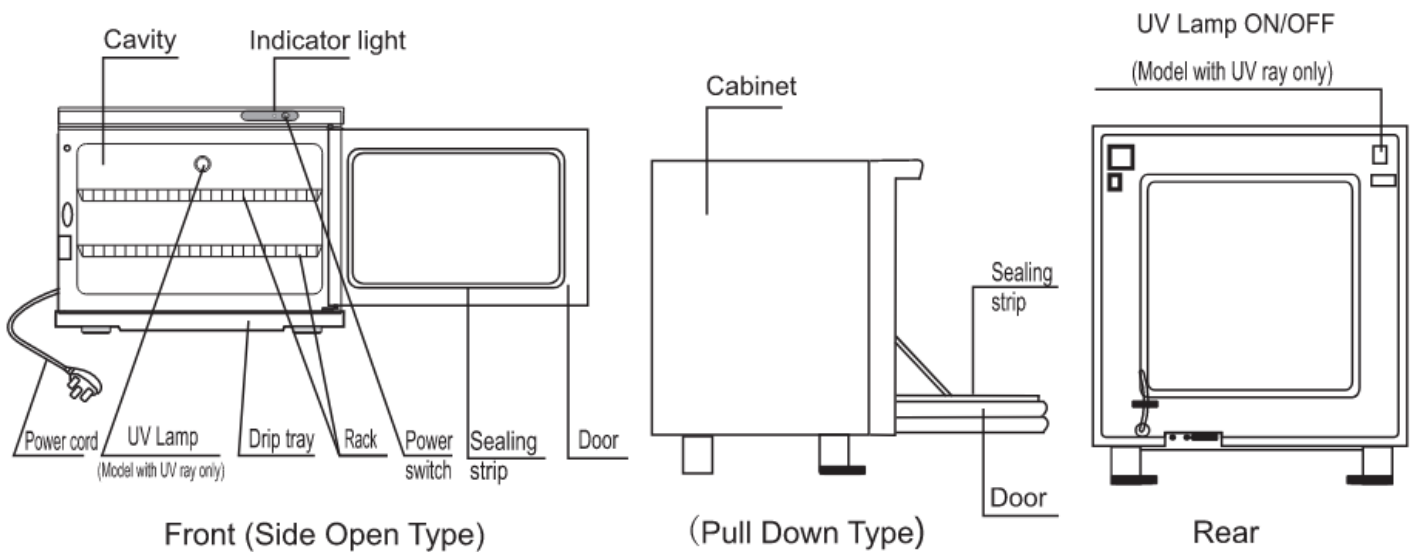

SPECIFICATIONS

- Model Name: SKU16180
- Feature: With UV Lamp
- Power Supply: 120 V ~ 60 Hz
- Power Input: 180 W
- Capacity: 18 L
- Warming Temperature: 158°F – 175°F (70°C – 80°C)
- UV Lamp Life: ≥ 1000 hours
- Heater Life: ≥ 3000 hours
- Rack Capacity: 80–96 wet towels or up to 20 facial towels
- Net Weight: 13.2 lb
- Product Size (H $\times$ W $\times$ D): 14.0" $\times$ 17.7" $\times$ 11.2"

USER GUIDE

- Place the towel warmer on a stable, level surface and plug it into a properly grounded outlet.
- Wring towels so they are damp but not dripping, place them evenly on the rack, and close the door completely.

Heating with UV Sterilization

- Press the ON switch. The indicator light will turn on.
- Press the UV Lamp ON switch located at the rear of the unit to start UV sterilization while warming the towels.

Heating without UV

- To warm towels without UV, leave the UV switch in the OFF position while the main power switch is ON.

Door Safety (UV Models Only)

- The UV lamp automatically turns OFF when the door is opened.
- The UV lamp automatically turns ON again when the door is closed, provided the UV switch is in the ON position.

Turning OFF

- Press the OFF switch. The indicator light will turn off and the towel warmer will stop operating.
- Set the UV switch to OFF when UV is not required and unplug the unit if it will not be used for an extended period.

TROUBLESHOOTING

Symptom	Possible Cause	Solution
Not working	Plug not fully inserted or damaged	Check and reinsert plug; repair if needed
	Temperature controller failure	Replace temperature controller
	Power cord damaged	Replace power cord
UV lamp not working (<i>UV models only</i>)	Door switch failure	Replace door switch
	UV lamp burned out	Replace UV lamp
No heating	Heater failure	Replace heater
	Temperature controller failure	Replace temperature controller

If the problem persists after performing the steps above, disconnect the unit and contact Essential Med Tools or a licensed service technician. Do not attempt further repairs yourself.