

# Sugar Bench



## Models

Model No.	Product Size	Charging
SPSB-54	54in x 18in x 18in	None
SPSB-54-POW	54in x 18in x 18in	1 USB port
SPSB-66	66in x 18in x 18in	None
SPSB-66-POW	66in x 18in x 18in	1 USB port

## Options

- USB charging port
- International power configurations

## Features

- Full Spectrum LED Light
- Capacitive Touch Sensors
- 40 interactive light programs,
- Plug and play setup
- Heavy duty floor levelers
- Universal Power, 110 - 220 VAC, 6ft Power cord
- Cord plugs to the floor outlet under product or to wall outlet
- Translucent non-porous white solid surface resin top
- Laminate, base, standard finish is fog



## Installation Guidelines

Place the Sparkle Sugar Benches in the desired location and plug the power cord into into a grounded electrical outlet that receives 110-220 VAC power. Install the floor outlet below product to hide power cord in the product's hollow interior. On start up, the product will automatically calibrate to the ambient conditions. This process lasts approximately 10 seconds and is indicated by a series of flashing patterns. When complete, the first interactive light program will be displayed and the surface will respond to touch.



**LIGHT** up the Room


## Care & Maintenance

Spray the top and side surfaces with a multi-surface cleaner and wipe using a soft cloth. Recommended cleaners include Fantastik household cleaner, and Formula 409 household cleaner. For disinfecting Sani-Cloth® AF3 Germicidal Disposable Wipes, Steris Coverage Plus® and Clorox Healthcare® Hydrogen Peroxide Cleaner Disinfectant Wipes are also recommended. Do not use strong acidic or solvent based cleaners, such as methyl chloride or acetone.

Superficial scratches on the top surface only can be removed by rubbing a wet #7448 Scotch Brite pad in a circular motion until the scratches disappear, followed by spraying with a multi-surface cleaner and wiping dry with a soft cloth. Never use abrasive cleaners on the laminate sides, which will dull or damage the finish.

## Dimensions

### SPSB-54 | SPSB-54-POW

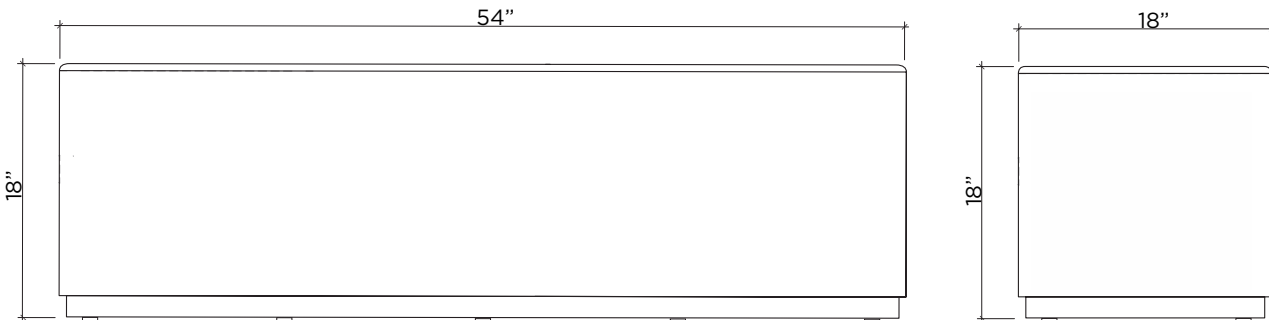

### SPSB-66 | SPSB-66-POW

