


Instructions Manual of

PROFESSIONAL TOOL STERILIZER

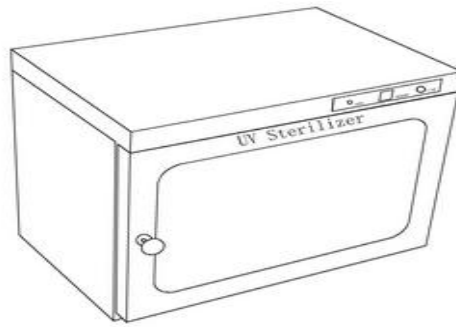

● **Features**

This professional UV tool sterilizers are ideal for sterilizing tools and accessories in beauty Spa , hair salons, and nail salons. Easy and convenient to operate, efficiently kill most of the germs on your tools and accessories.

● **Technical Specification**

Rated Voltage	220V/240V/120V
Rated Frequency	50HZ/60HZ
Rated Input Power	8W
UV Wave Band	220~275nm
Suggested time of Disinfection	5~20 minutes
Servicing life of UV Lamps	5000 hours

▲ **Warning!**

Close the door before starting the unit, to avoid UV leakage. UV light is hazard to your health, please don't expose yourself directly to the UV lights.

● **Operating Instructions**

1. For first time usage, please clean the cabinet and the metal basket thoroughly. Make sure the cabinet and basket is completely dry before operation.
2. Put the tools that need disinfection into the cabinet on the baskets, then close the door.
3. Connect the power supply
4. Turn on the POWER switch on the right side of the cabinet. The LCD timer will illuminate and the default time setting is 5 minutes
5. Press once the "Start" button, the UV lamp will turn on, and the digital timer will start to count down.
6. To adjust the time setting, press the "Start" button and hold for 3-4 seconds, the LCD timer will flash, then press again the "Start" button to set the desired time. Each press will increase the time by 5 minutes.
7. When the unit beeps and the timer counts down to "0", it indicates the disinfection is completed.

● **Maintenance**

1. When cleaning the unit, use wet cloth or towel, with neutral detergent; do not use acid, alkaline or corrosive or poisonous detergents.
2. After usage of the unit, disconnect the power line. If the unit will not be used for a long time or needs maintenance, please make sure the power is disconnected.
3. Don't open the unit unless by professionals