



KELLER INTERNATIONAL, LLC

1431 LAKE RD, HAMLIN NY 14464


Info@kellerinternational.com

T: 1-800-578-8772 • F: 1-585-964-8093

KELLER4SALON.COM

Facial Steamer with Magnifying Lamp TD201 – TD206



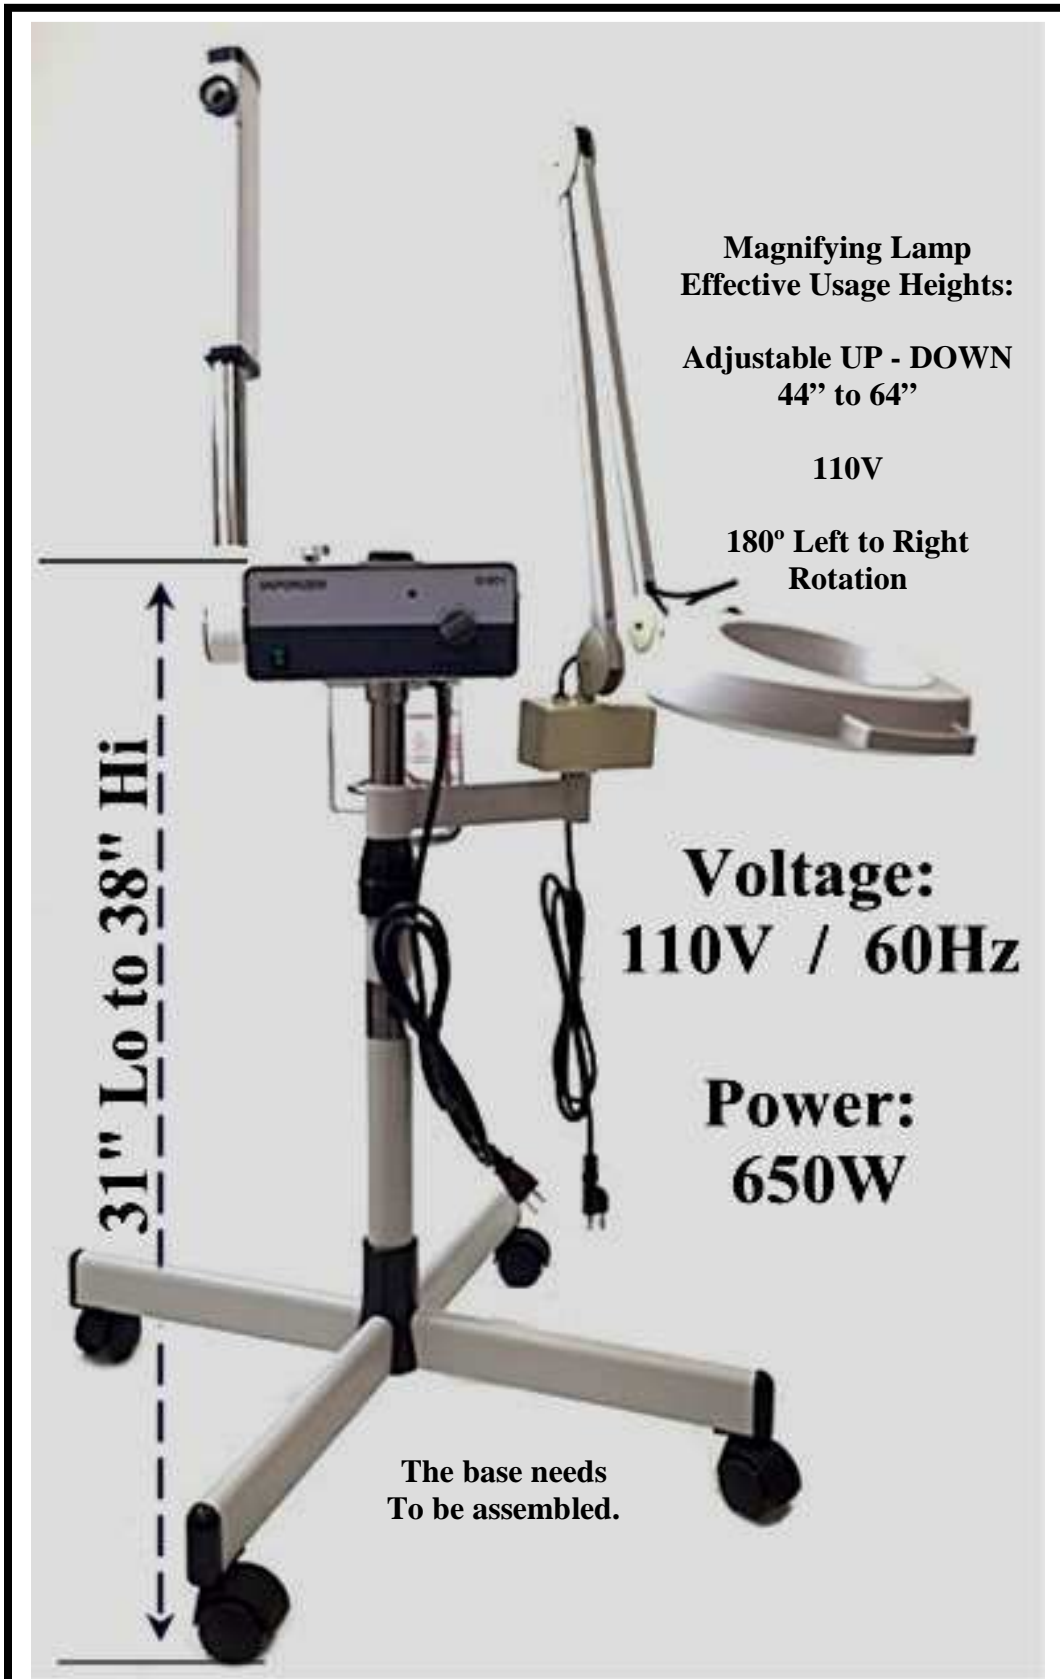

**Magnifying Lamp
Effective Usage Heights:**

**Adjustable UP - DOWN
44" to 64"**

110V

**180° Left to Right
Rotation**

**Voltage:
110V / 60Hz**

**Power:
650W**

31" Lo to 38" Hi

**The base needs
To be assembled.**

- Ships in 2 boxes – either by ground or freight – depending on the amount of products ordered.
- Steamer weighs 35 pounds; Magnifying Lamp weighs 10 pounds.




- Turn Timer Dial Clockwise to start the Timer.
- Maximum thirty (30) minutes in 1 minute increments.
- Timer ticks until finished and then dings to alert that timer is off.



Glass Water Jar Gasket






Glass Water Jar Installed

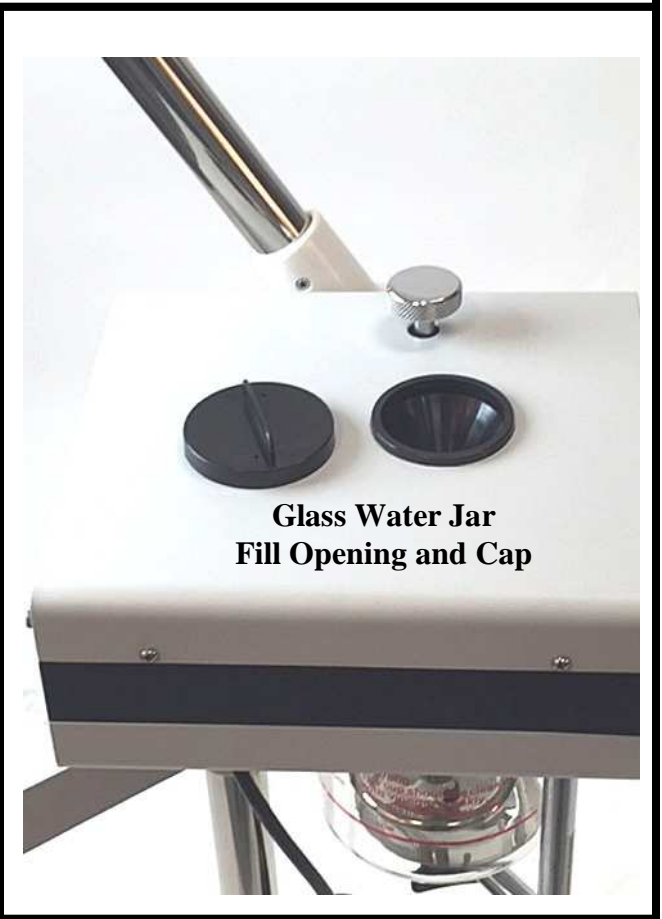


Glass Water Jar Fill Opening and Cap

- Use ONLY Filtered or Distilled Water – NO TAP WATER.
- Cover Fill Opening with the Cap when done adding water.

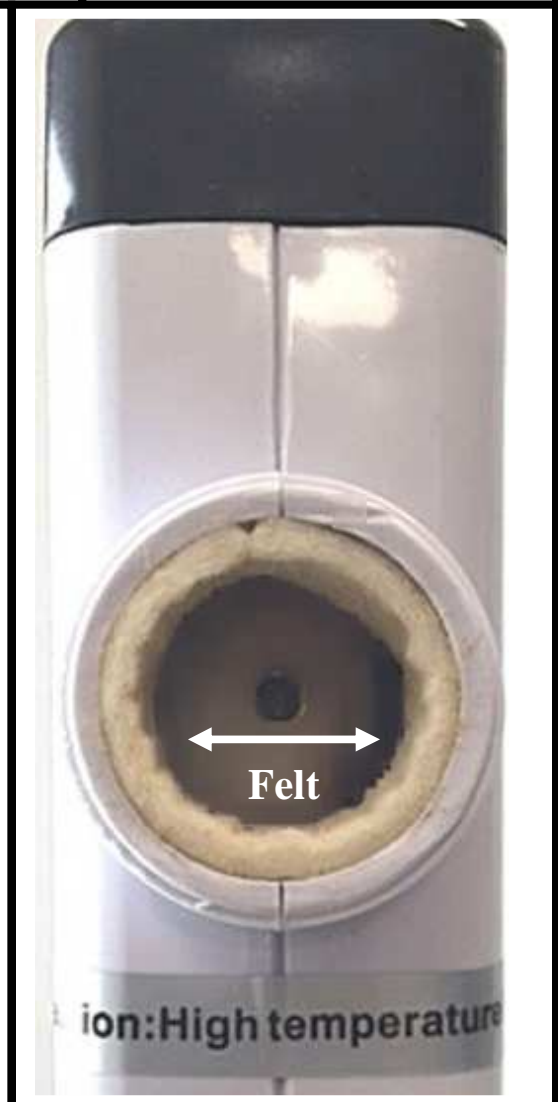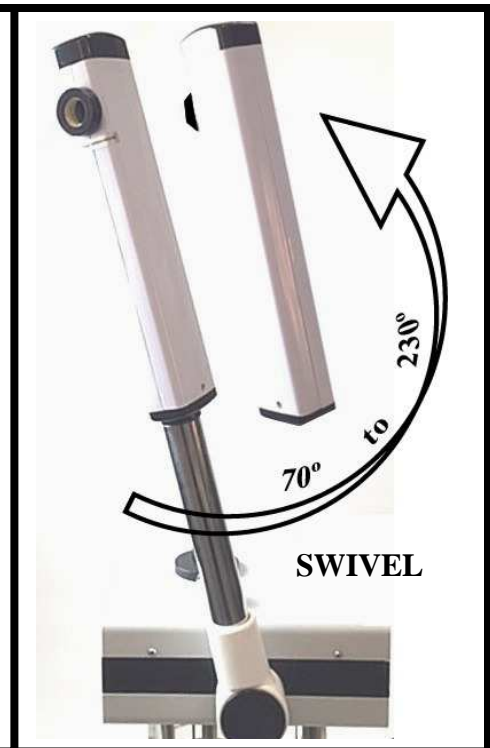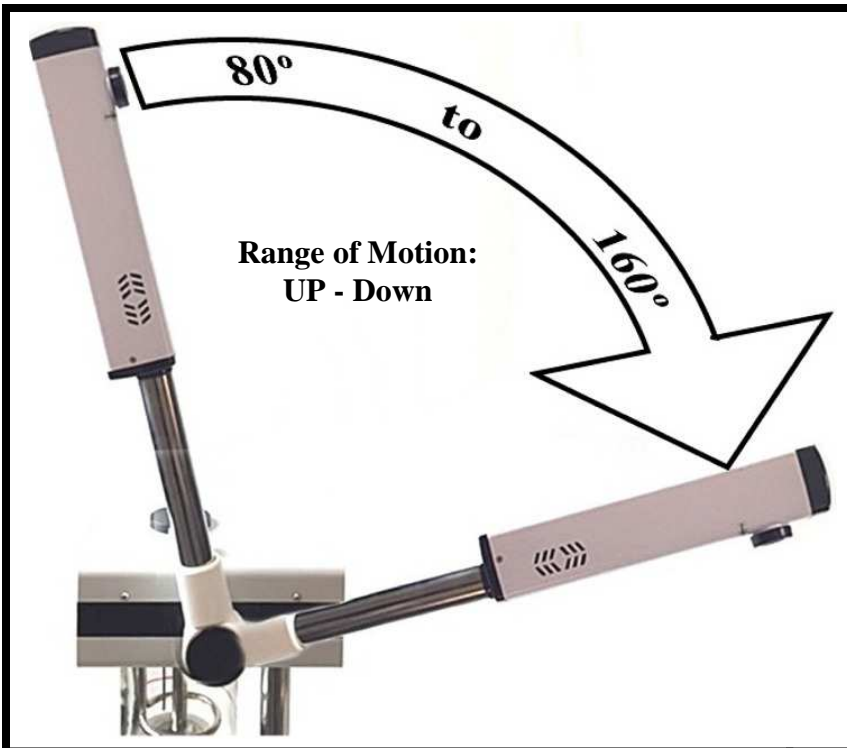

**Low
Water
Sensor**

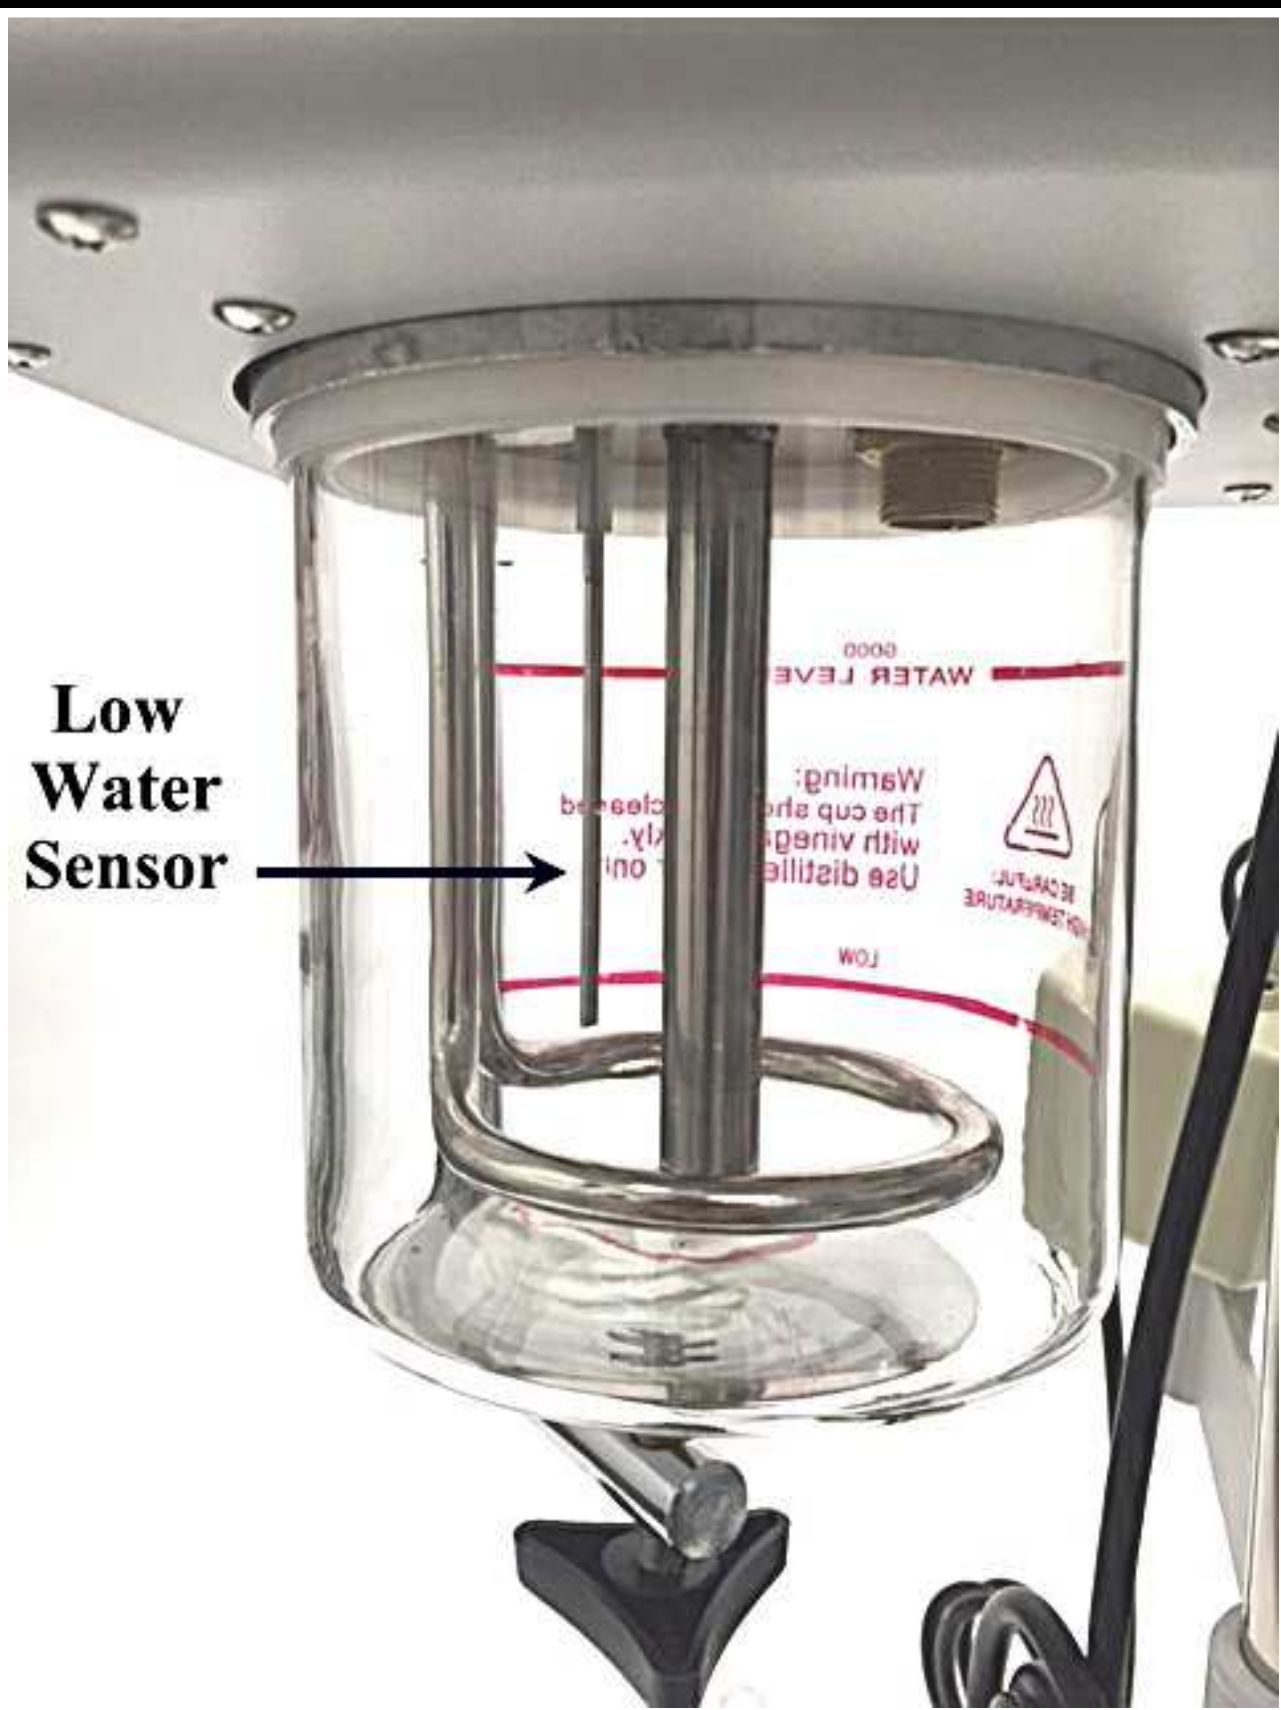

- **Low Water Sensor – automatic shutoff if the water in the Glass Jar goes below the Bottom Red Line.**
- **Low Water Sensor - Steamer will not power up without water in the Glass jar.**



- **Magnifying Light provides magnification (5X) and Glare Free Light.**
- **Magnifying Light can also be used as a Soothing Light Source in a dark room.**
- **Protect the client's eyes with eye pads if the Magnifying Lamp is placed directly over the clients face.**