




LINX ARES comes with 1 year limited warranty  
www.LinxVapor.com

# LINX ARES

USER MANUAL

## IN THE BOX

- 1 Linx Ares Atomizer
- 1 750mAH Linx Ares Battery
- 1 Linx Ares Battery Sheath
- 2 Linx Ares Glass Mouthpiece
- 1 Glass Jar
- 1 USB Charger
- 1 Atomizer Cap
- 1 Mouthpiece Cap
- 1 Cleaning Brush

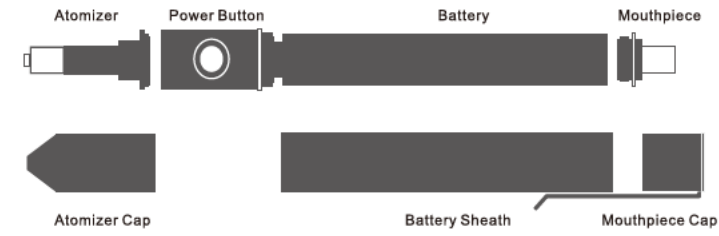

## CHARGING

1. Unscrew atomizer from battery.
2. Screw the USB Charger on battery and plug into a viable USB power outlet.
3. The LED light on the charger glows red while charging, and turns green once fully charged. Full charging takes 2 - 3 hours.

Battery will flash white 10 times when depleted. Charge the battery fully before next use.

## LOCKING / UNLOCKING

Press Power Button 5 times quickly to turn the device on or off. The button will blink 5 times.

Device will flash 10 times and automatically shut off if left idle for 1 minute.

## TEMP SETTING

1. Press Power Button 3 times quickly to choose from low and high temperatures, respectively, 900°F and 1100°F (482°C and 593°C).
2. The light flashes once when low temperature is selected, and twice when high temperature is selected.

## VAPING

1. Place the Ares Atomizer rod into concentrate.
2. Inhale while holding the Power Button.
3. Release the Power Button to stop heating.

If Power Button is held down for 15 seconds, the battery will enter standby mode to prevent overheating. This is signified by the button blinking white 3 times. After one minute in standby mode, device will flash 10 times and power off.

## CLEANING

1. Completely disassemble the Linx Ares into parts.
2. Use Isopropyl alcohol and Q-tips, swab all surfaces and air paths.
3. Use Ares Cleaning Brush to clean air hole in the power button section.
4. Do not submerge Linx Ares battery in any liquid.
5. Allow all components to completely dry.
6. Reassemble the Linx Ares.



## SAFETY WARNING

Please read the following safety recommendations carefully before using the Linx Ares:

The atomizer of the Linx Ares gets very hot while use! Do not touch the atomizer during use and for at least 1 minute after use.

This vaporizer is only intended for use with concentrates.

Do not use near any flammable materials.

Improper use of the Linx Ares voids the warranty and could cause damage or physical harm.

## LEGAL DISCLAIMER

Do not allow children, women who are pregnant or breast feeding or those with a life threatening illness to use this device. VGO LLC and its affiliates are not responsible for any damage or personal injury caused by inappropriate, incorrect or irresponsible use of the device. The Linx Ares is not a medical device and is not intended to diagnose, cure, treat or prevent any disease or other conditions. If you have any health problems, consult your doctor before using the Linx Ares. The Linx Ares is not intended to administer medicinal or illegal products of any kind, doing so voids the warranty. Any illegal use of this device could subject the user to severe fines, penalties, and/or imprisonment under the law of local jurisdiction.



**18+**  
**ONLY**