

# 570 TOTAL ALKALINITY FRESH TEST PROCEDURE



The 570 Total Alkalinity test procedure utilizes the **STANDARD STRIP METHOD** using the eXact iDip® 570 Smart Photometer System®. For tips on achieving best accuracy, and additional information regarding features of the eXact iDip® 570 photometer and the eXact iDip® app, please refer to the eXact iDip® Smart Guide. You can download a copy on our website at exactdip.com. **Test procedures can vary from test to test. Read full instructions and watch instructional video within the app.**

## YOU WILL NEED

- eXact iDip® 570 photometer
- Your smartphone/tablet with the eXact iDip® app installed
- (1) eXact® Strip Micro Total Alkalinity (Part No. 486680)
- Water sample for rinsing and testing


## 1 SELECT CUSTOMER

- Select **'Customers'** from the Home screen.
- Choose customer from list  
**OR** Tap **'Add customer from contacts'** and choose customer from your contacts list  
**OR** Tap **'+'** to create a new customer

Android users: If no address is found, tap "No addresses found"

c. Verify customer has been selected

*Note: To take full advantage of the GPS and Data Storage features, each test result must be linked to a contact. Individual users may select their contact listing.*

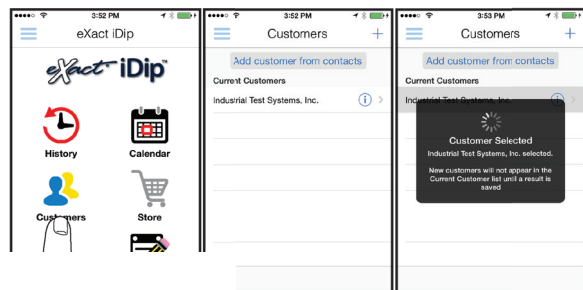


b

c


## 5 SELECT TEST

Tap **'SELECT Test'** at the top and select **570 Alkalinity, Total Fresh AL #486680**. The eXact iDip® 570 photometer and eXact iDip® app will both display the test selection for Total Alkalinity.

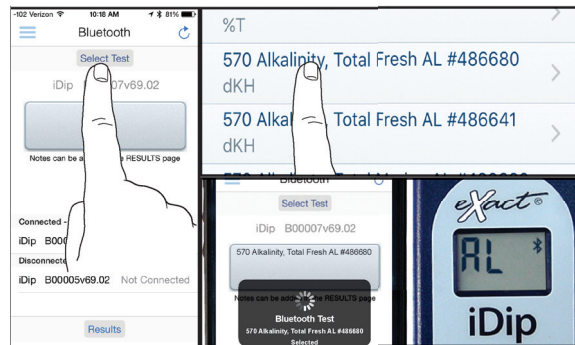

## 6 FILL CELL

Before testing, rinse CELL and clean with brush thoroughly. Finally, rinse the cell 3 times with the water sample to be tested, then **FILL** cell to capacity to begin test (refer to video in app).

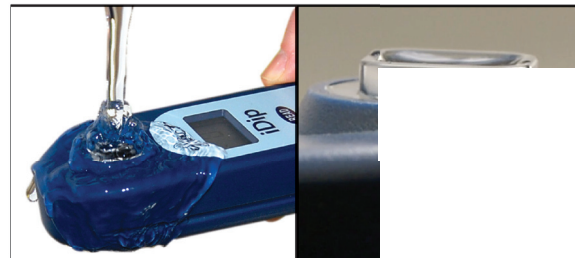

## 7 CAP CELL AND ZERO ME

Place the Cell Cover onto the CELL and eXact iDip® 570 photometer display reads zero. Photometer is ready for testing.



## 8 REMOVE STRIP

Remove one eXact® Strip Micro Total Alkalinity (Part No. 486680) and set in a dry, convenient place. Replace cap on bottle.



2




## 2 TAP ON

to power on the eXact iDip® photometer.

## 3 TOUCH TEST


Tap on the 'Bluetooth Test' icon in the app.

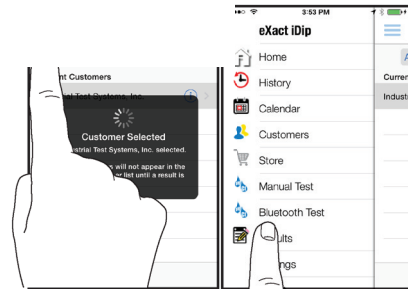

## 4 CONNECT EXACT IDIP

The eXact iDip® app will automatically connect to the most recently used eXact iDip® photometer. If not, select your eXact iDip® from the bottom of the screen.

*Note: Always connect your eXact iDip® photometer via the Bluetooth® connection within the app. If you experience an issue connecting your device, check that your smartphone/tablet's Bluetooth® is turned on and your device is compatible.*

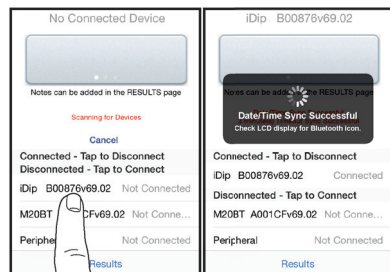


**READ**

Use a gentle constant back and forth motion (2 strokes per second) until the timer displays "1". Remove and discard the strip.



## 10 CAP CELL AND READ RESULTS

Place the Cell Cover onto the CELL and **READ** result displayed as Total Alkalinity. NOTE: If result is "HI", then value is >200ppm. If a value is required, proceed to step 11. Otherwise, proceed to step 12.

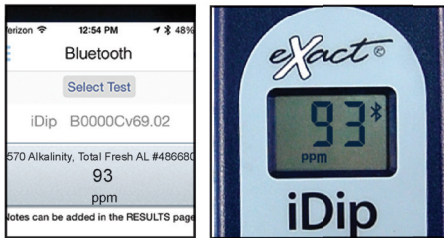


## 11 AL RANGE EXTENDER

If result from step 10 is "HI", and a value is required, **YOU WILL NEED** to purchase eXact® Strip Micro AL Range Extender (Part No. 486665). If you already have AL Range Extender strips, proceed to step 12.


## 12 REMOVE STRIP

Remove one eXact® Strip Micro AL Range Extender (Part No. 486665) and set in a dry, convenient place. Replace cap on bottle. Replace cap on bottle.

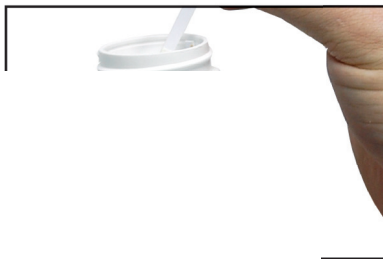


**READ**

Countdown and simultaneously **DIP** touching the bottom of the cell. motion (2 strokes per second) and discard the strip.

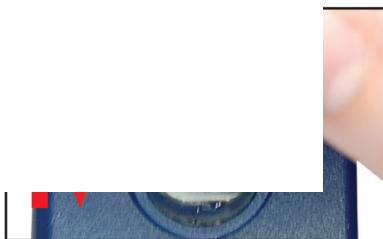


## 14 CAP CELL AND READ RESULTS

If result is still "HI" repeat steps 12-13 until a value is obtained. Count how many AL Range Extender strips were used. Each strip adds 130ppm to the final result. For example: After dipping one AL Range Extender strip the result reads 93ppm. The final result would be calculated as 223ppm (130 + 93 = 223). This value can be added as a Note by tapping on the result in the Results section.

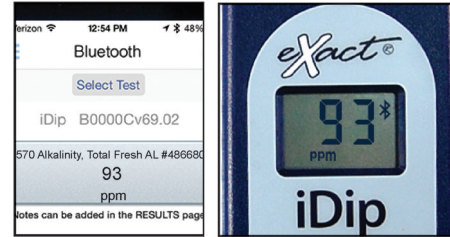

## 15 CLEAN CELL WITH BRUSH

After testing, rinse CELL immediately and clean with brush to remove reagents which coat the CELL wall.

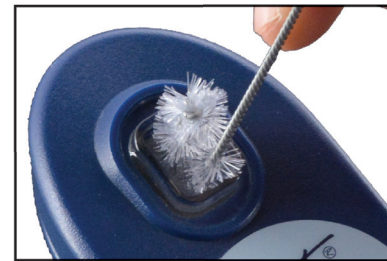

### TIPS

- Due to the strip slitting process, you may find one or two strips that are noticeably smaller or larger in width than the normal strips in the bottle. These should be discarded. Using these strips may give unreliable results.
- Always fill the CELL to capacity (4mL).
- Be careful while dipping the strip (step 9). Do not spill the sample from the CELL.

### MANAGE YOUR RESULTS

Save, send, and share results instantly using the eXact iDip® app. For step-by-step instructions, refer to the eXact iDip® Smart Guide. You can download a pdf copy on-line at [exactidip.com](http://exactidip.com).

