

570 TOTAL HARDNESS LOW TEST PROCEDURE

The 570 Total Hardness Low test procedure utilizes the **STANDARD STRIP METHOD** using the eXact iDip® 570 Smart Photometer System®. For tips on achieving best accuracy, and additional information regarding features of the eXact iDip® 570 photometer and the eXact iDip® app, please refer to the eXact iDip® Smart Guide. You can download a copy on our website at exactidip.com. **Test procedures can vary from test to test. Read full instructions and watch instructional video within the app.**

YOU WILL NEED

- eXact iDip® 570 photometer
- Your smartphone/tablet with the eXact iDip® app installed
- (1) eXact® Strip Micro Total Hardness Low (Part No. 486630)
- Water sample for rinsing and testing
- Result from Total Alkalinity test

SELECT CUSTOMER

- a. Select 'Customers' from the Home screen.
- b. Choose customer from list


OR Tap 'Add customer from contacts' and choose customer from your contacts list

OR Tap '+' to create a new customer

Android users: If no address is found, tap "No addresses found"

c. Verify customer has been selected

Note: To take full advantage of the GPS and Data Storage features, each test result must be linked to a coniact. Individual users may select their contact listing.

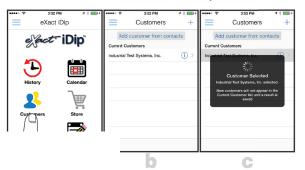

ZERO/ON

ICT IDIP® 570

o power on the eXact iDip® 570 photometer.

OOTH TEST

= and select 'Bluetooth Test' from the



CONNECT EXACT IDIP® 570

The eXact iDip® app will automatically connect to the most recently used eXact iDip® 570 photometer. If not, select your eXact iDip® 570 from the bottom of the screen.

Note: Always connect your eXact iDip® photometer via the Bluetooth® connection within the app. If you experience an issue connecting your device, check that your smartphone/tablet's Bluetooth® is turned on and your device is compatible.



5

SELECT TEST

Tap '**SELECT** Test' at the top and select **570 Hardness, Total Low Fresh THL** (if this is not visible, purchase the test from the Store). The eXact iDip® 570 photometer and eXact iDip® app will both display the test selection for Total Hardness Low.



FILL CELL
Before testing


Before testing, rinse CELL and clean with brush thoroughly. Finally, rinse the cell 3 times with the water sample to be tested, then **FILL** cell to capacity to begin test (refer to video in app).



If Total Alkalinity value is greater than 220ppm, purchase eXac Strip Micro THH Conditioner and proceed to step 7a on back

CAP CELL AND ZERO ME

Place the Cell Cover onto the CELL an eXact iDip® 570 photometer display reameter is ready for testing.

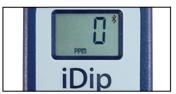



570 TOTAL HARDNESS LOW TEST PROCEDURE


REMOVE STRIP

Remove one eXact® Strip Micro Total Hardness Low (Part No. 486630) and set in a dry, convenient place. Replace cap on bottle.



READ

countdown and simultaneously **DIP** touching the bottom of the cell. motion (2 strokes per second) and discard the strip.

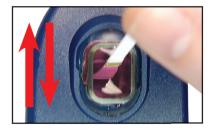

CAP CELL AND READ RESULTS

Place the Cell Cover onto the CELL and **READ** result displayed as Total Hardness (as CaCO₃).





CLEAN CELL WITH BRUSH

After testing, rinse CELL immediately and clean with brush to remove reagents which coat the CELL wall.



THH CONDITIONER

If Total Alkalinity is greater than 220ppm, **YOU WILL NEED** to purchase eXact® Strip Micro THH Conditioner (Part No. 486666). If you already have THH Conditioner strips proceed to step 7b.

7b

REMOVE STRIP

Remove one eXact® Strip Micro THH Conditioner (Part No. 486666) and set in a dry, convenient place. Replace cap on bottle.



7 C DIF

DIP STRIP

DIP the eXact® strip for 20 seconds in the sample, gently touching the bottom of the cell. Use a gentle constant back and forth motion (2 strokes per second) until the timer displays "1". Remove and discard the strip.



7d

CAP CELL AN

Place the Cell Cover eXact iDip® photome ready for testing. Pro



ZERC/ON

TIPS

- Due to the strip slitting process, you may find one or two strips that are
 noticeably smaller or larger in width than the normal strips in the bottle. These
 should be discarded. Using these strips may give unreliable results.
- Before running test, verify that the pH of the sample is approximately 7. If not, then adjust the pH to 7.
- Total Alkalinity must be in the range of 1-70ppm (as CaCO3).
- Before running test unlock Hardness, Total Low test by purchasing in the Store.
- This test is good for drinking water, pool water, tap water and not good for samples made with DI or Distilled water.
- To obtain optimal accuracy when testing in direct sunlight, use the Cell Cover when zeroing and reading the sample.
- It is recommended to use the Cell Cleaning Brush with water to clean the CELL after each test to remove reagents which coat the CELL wall.
- Be careful while dipping the strip (step 9). Do not spill the sample from the CELL.

MANAGE YOUR RESULTS

Save, send, and share results instantly using the eXact iDip® app. For step-by-step instructions, refer to the eXact iDip® Smart Guide. You can download a pdf copy on-line at exactidip.com.



