

570 PH TEST PROCEDURE

The 570 pH test procedure utilizes the **STANDARD STRIP METHOD** using the eXact iDip® 570 Smart Photometer System®. For tips on achieving best accuracy, and additional information regarding features of the eXact iDip® 570 photometer and the eXact iDip® app, please refer to the eXact iDip® Smart Guide. You can download a copy on our website at exactidip.com. **Test procedures can vary from test to test. Read full instructions and watch instructional video within the app.**

YOU WILL NEED

- eXact iDip® 570 photometer
- Your smartphone/tablet with the eXact iDip® app installed
- (1) eXact® Strip Micro pH (Part No. 486639-II)
- · Water sample for rinsing and testing

SELECT CUSTOMER

- a. Select 'Customers' from the Home screen.
- b. Choose customer from list


OR Tap 'Add customer from contacts' and choose customer from your contacts list

OR Tap '+' to create a new customer

Android users: If no address is found, tap "No addresses found"

c. Verify customer has been selected

Note: To take full advantage of the GPS and Data Storage features, each test result must be linked to a contact. Individual users may select their contact listing.

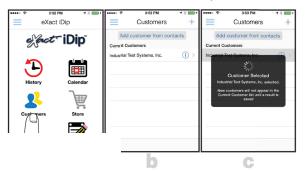




CT IDIP® 570

to power on the eXact iDip® 570

OOTH TEST

= 'and select 'Bluetooth Test' from the

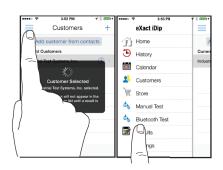


4

CONNECT EXACT IDIP® 570

The eXact iDip® app will automatically connect to the most recently used eXact iDip® 570 photometer. If not, select your eXact iDip® 570 from the bottom of the screen.


Note: Always connect your eXact iDip® photometer via the Bluetooth® connection within the app. If you experience an issue connecting your device, check that your smartphone/tablet's Bluetooth® is turned on and your device is compatible.

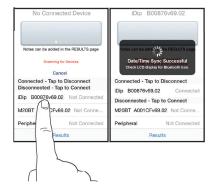

5

SELECT TEST

Tap '**SELECT** Test' at the top and select **570 pH PH**. The eXact iDip® 570 photometer and eXact iDip® app will both display the test selection for pH.

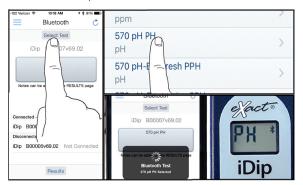

6

FILL CELL

Before testing, rinse CELL and clean with brush thoroughly. Finally, rinse the cell 3 times with the water sample to be tested, then **FILL** cell to capacity to begin test (refer to video in app).



CAP CELL AND ZERO METE

Place the Cell Cover onto the CELL and pre eXact iDip® 570 photometer display reads meter is ready for testing.







REMOVE STRIP

Remove one eXact® Strip Micro pH (Part No. 486639-II) and set in a dry, convenient place. Replace cap on bottle.








countdown and simultaneously **DIP** touching the bottom of the cell. motion (2 strokes per second) nd discard the strip.



CAP CELL AND READ RESULTS

Place the Cell Cover onto the CELL and **READ** result displayed as



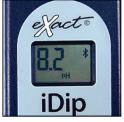

WITH BRUSH

ELL immediately and clean with brush to ich coat the CELL wall.



- Due to the strip slitting process, you may find one or two strips that are noticeably smaller or larger in width than the normal strips in the bottle. These should be discarded. Using these strips may give unreliable results.
- It is recommended to clean the cell thoroughly, with water and the brush provided, before running this test.
- Requires water sample with a Total Alkalinity minimum of 20ppm.
- For best accuracy, clean cell with brush and water before running pH.
- For water temperatures above 100°F/38°C (hot tubs), remove the strip when the timer displays "10", or use the specially calibrated test "SPA pH" test method available in the eXact iDip® Store.
- Be careful while dipping the strip (step 9). Do not spill the sample from the CELL.

MANAGE YOUR RESULTS

Save, send, and share results instantly using the eXact iDip® app. For step-by-step instructions, refer to the eXact iDip® Smart Guide. You can download a pdf copy on-line

exactidip.com.

