

Refill Bottle Insertion and Replacement

The refill bottle must be replaced approximately every 3 months

①



Shake well before use

②



Twist cap off bottle

③



Insert bottle into the BioLogic Top Cap in a clockwise direction

④



Insert Top Cap into the BioLogic base & Make sure the dispersal hole on the cap is aligned with the betterair logo on the base

⑤



Press the LED button

IMPORTANT:

Always turn power off when removing and replacing refill bottle Also, power must be turned off before moving the BioLogic.

Safety Precautions

Turn off and unplug the device before moving it.
Warranty is only valid with the use of Enviro-Biotics®.
Do not immerse in or place the BioLogic device near water, sinks or bathtubs.
Keep out of reach of Children and Pets.
Store your BioLogic device and Refill bottles in a cool dry place.

"The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

"This appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance."

"This appliance contains batteries that are only replaceable by skilled persons."



WARNING: For the purposes of recharging the battery, only use the detachable supply unit [type EN61668-1 & EN61558-2-16] Not provided with this appliance."

Specifications

Dimensions:
Height: 19 cm
Diameter: 7 cm
Weight: 400 grams when cartridge is full (325 empty)
Power Supply:
Working voltage: 5v DC
Battery Capacity: 2000mAh
Input -C-Type USB (5v charger not provided)
Standby Time: Up to 13 days
Coverage: 500 ft² (50 m²)
Bottle capacity: 75 ml
Working temp: 2 - 50°C / 122°F

Contact us
Contact@better-air.com | www.better-air.com
© 2020 betterair international Limited, all rights reserved



BioLogic

Total surface & air purifier



User Guide

The BioLogic nourishes your indoor environment with a repetitive flow of Enviro-Biotics® that cleans Surfaces Objects and Air, especially in those hard to reach areas. An environment rich in beneficial bacteria supports your well being.

www.better-air.com

Equipment and Accessories

1. BioLogic base
2. Biologic cap
3. BioLogic refill
4. Standard C-type USB cable



WARNING:

When using electric products, basic precautions should always be followed, including the following:

Read all the instructions before using the product.

To reduce the risk of injury, close supervision is necessary when a product is used near children.

Do not put fingers or hands into the product.

Do not repair or modify the unit.

Do not alter the plug in any way. Do not use if the power cord or plug is damaged or the connection to the wall outlet is loose.

Do not damage, break, forcefully bend, pull, twist, bundle, coat, pinch, or place heavy objects on the power cord.

Remove the power plug from the outlet before cleaning the unit. When removing the power plug, grasp by holding the plug itself, never hold by the cord.

Do not handle the power plug with wet hands.

Clean the unit with dry fabric, do not use detergent to clean the unit.

Do not use the unit on its side.

Charging

Please connect the C-type USB cable, (provided) to:

- a. Charger (not provided)
- b. Any USB connection (PC, Car, Power bank etc.)

Operation

In operation mode, the BioLogic should disperse Enviro-Biotics® for a few seconds at intervals of approx 30 minutes

On/Off button

1. Press the LED button to turn ON the device.
2. Press the button for two seconds to turn OFF the device.

LED Status light


-In Battery mode-

1. Blue - Standby
2. Green - Dispersing

-In charging mode-

3. Purple - Standby
4. Solid white - Fully charged
5. Green - Dispersing
6. Solid Red - Low liquid - lasts app. 2 weeks from time of notification
7. Solid Yellow - Low Battery
8. Blinking Yellow - Critical battery level, recharge immediately.
9. Blinking Red - Device stopped operations, needs urgent attention:
Make sure device is properly positioned on a clean levelled surface.
Make sure Cap (upper part) is properly attached to the base.
Check if Refill bottle is empty.

Connect device to your smart phone or tablet application for more information and instructions on restoring normal operations.

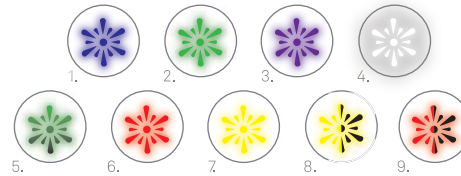

Position of the BioLogic

Place your Biologic device on a clean, dry leveled surface.

For optimal coverage, place the Biologic device at the center of the treated area.

It is not advised to place the BioLogic device near an open door or a window that leads outdoors in order to obtain maximum coverage indoors.

For optimal function, the biologic device should be in an upright position.



CAUTION Do not place directly under lights or other heat sources over 100 degrees. Damage to the BioLogic may occur.



Smart phone / Tablet app.

To get an accurate status of your device, it is recommended to use the "betterair BioLogic" app (free download from Play store or Apple stores)

After pairing via Bluetooth, your BioLogic should report the following:

Liquid Level - the BioLogic has an integral weighing device that reports level of liquid with great accuracy. When reaching "low level" It is recommended to order a refill; the app provides an online link to your local dealer.

Battery Level - you should be notified of low battery and critical levels where the unit is about to shut down

Various alerts and BioLogic status

Operations - you can turn device on/off and force dispersing manually.

Additional features will be added periodically, you may download upgrades at your convenience.