



KwikSafety
Everything Safety®

INSTRUCTIONS FOR USE



MARMOSET TRAUMA STRAPS MODEL NO. KS7722

6126 BROOKSHIRE BLVD, SUITE A
CHARLOTTE, NC 28216
SALES@KWIKSAFETY.COM

WWW.KWIKSAFETY.COM



(980) 819 - 5200

WARNING

PRIOR TO USE, READ AND UNDERSTAND ALL INSTRUCTIONS INCLUDED WITH EQUIPMENT AT TIME OF SHIPMENT

MAXIMUM WORKER CAPACITY: 420 lbs.

MATERIALS: nylon, polyester, and steel.

The Trauma Strap is not to be used as an anchor, lanyard, or any other form of fall protection, except in the manner detailed by these instructions.

Seek medical attention immediately if exposed to a fall/suspension.

The Trauma Strap is not intended to replace a rescue plan. The employer must always have a jobsite-specific rescue plan in place, and the means to implement that plan.

Misuse or alteration to this product may result in **SERIOUS INJURY OR DEATH!**

INSPECTION:

Before to each use, inspect Trauma Strap for any frays, cuts, broken fibers, burns, discoloration, knots, tears, abrasions, cracking, rust, and any other damage. If any of these conditions exist, **IMMEDIATELY** remove Trauma Strap from service. Competent Person must inspect at least every 6 months.


MAINTENANCE:

Remove all dirt, corrosives, and contaminants from Trauma Strap before and after each use. If Trauma Strap cannot be cleaned with plain water, use mild soap and water, then rinse and wipe dry. To fully dry, unravel the contents and hang them to dry. **NEVER** clean Trauma Strap with corrosive substances. When not in use, store equipment where it will not be affected by heat, light, excessive moisture, chemicals, or other degrading elements.



USAGE INSTRUCTIONS:

1. Unzip both pouches fitted on both sides of the harness.
2. Hold the two straps, one in each hand.
3. Connect the straps together using the hook on one strap and attaching it to a loop on the opposite strap.
4. Put your feet into the loop that you have made.
5. Stand on the loop and examine pressure on thighs
6. Adjust the straps so that they best support a sitting position to reduce pressure on your thighs.

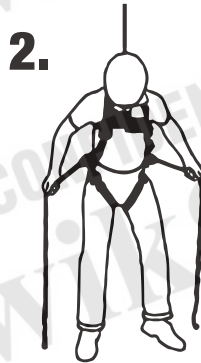



The Trauma Strap is designed to prevent suspension trauma, by allowing a worker to achieve a standing position while waiting to be rescued. This functions to relieve pressure from the legs and allow blood to flow more regularly.

The Trauma Strap is not intended to replace a rescue plan. The employer must always have a jobsite-specific rescue plan in place, and the means to implement that plan.

Seek medical attention immediately if exposed to a fall/suspension.

The Trauma Strap is not to be used as an anchor, lanyard, or any other form of fall protection, except in the manner detailed by these instructions.

MAX. WORKER CAPACITY(+clothing, tool, and equipment): 420 lbs.

