




## Single Monitor Desk Mount

### Instruction Manual

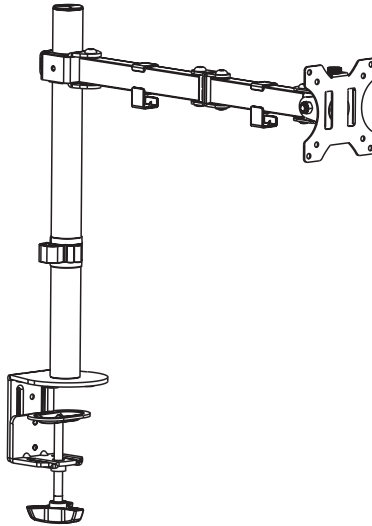

**SKU: STAND-V101**



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

<https://vivo-us.com/products/stand-v101>

**GET IN TOUCH** | Monday-Friday from 7:00am-7:00pm CST



[help@vivo-us.com](mailto:help@vivo-us.com)



[www.vivo-us.com](https://www.vivo-us.com)  
*Chat live with an agent!*



309-278-5303



## WARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.



### TIPOVER WARNING

SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM TIPOVER. TO HELP PREVENT TIPOVER:

- NEVER ALLOW CHILDREN TO CLIMB, STAND, HANG, OR PLAY ON ANY PART OF MONITOR OR STAND.
- USE TIPOVER RESTRAINT OR ANCHOR STAND TO WALL

**USE OF TIPOVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE RISK OF TIPOVER.**




### WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

## PACKAGE CONTENTS




**A (x1)**  
VESA Plate



**B (x1)**  
Arm



**C (x1)**  
Clamp



**D (x1)**  
Pole



**E (x1)**  
Cable Clip



**F (x1)**  
Grommet  
Base



**G (x5)**  
Soft Pad



**H (x3)**  
Bolt



**I (x1)**  
Support Plate



**J (x1)**  
Thumbscrew



**K (x1)**  
4mm Allen Key



**L (x1)**  
6mm Allen Key



**M (x1)**  
Pole Cap



**M-A (x4)**  
M4x12



**M-B (x4)**  
M4x16



**M-C (x4)**  
M5x12



**M-D (x4)**  
M5x16



**M-E (x4)**  
D5 Washer



**M-F (x4)**  
Spacer

**NOTE:** SOME HARDWARE INCLUDED MAY NOT BE USED

## TOOLS NEEDED



DO NOT EXCEED WEIGHT CAPACITY.


Failure to do so may result in serious injury.

17.6lbs  
(8 kg)

## ASSEMBLY STEPS

### STEP 1


Attach pole cap (M) to top of pole (D).

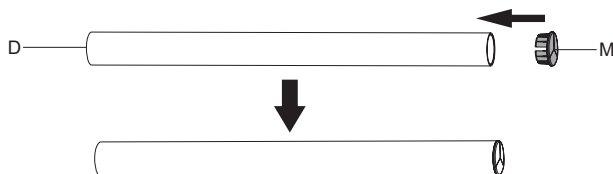

### STEP 2

#### OPTION A: Clamp Installation


Stick soft pads (G) to the underside of clamp (C). Attach pole (D) to clamp (C) using bolts (H). Tighten using 4mm allen key (K). Attach clamp (C) to desktop.

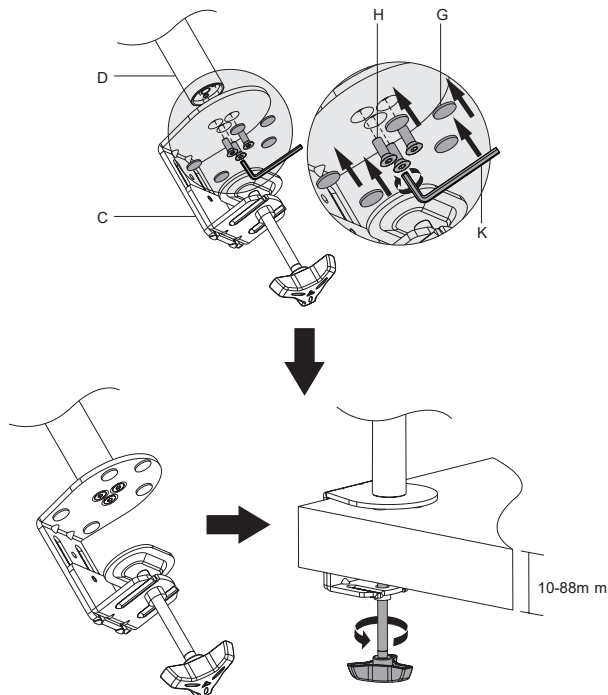

STEP 2 (Continued)


**OPTION B: Grommet Base Installation**

For grommet hole mounting, remove screw in top of bolt on clamp (C). Stick soft pads (G) to bottom of grommet base (F). Attach grommet plate (I) to bolt and run through grommet hole into grommet base (F) and thread into pole (D) as shown in diagram.

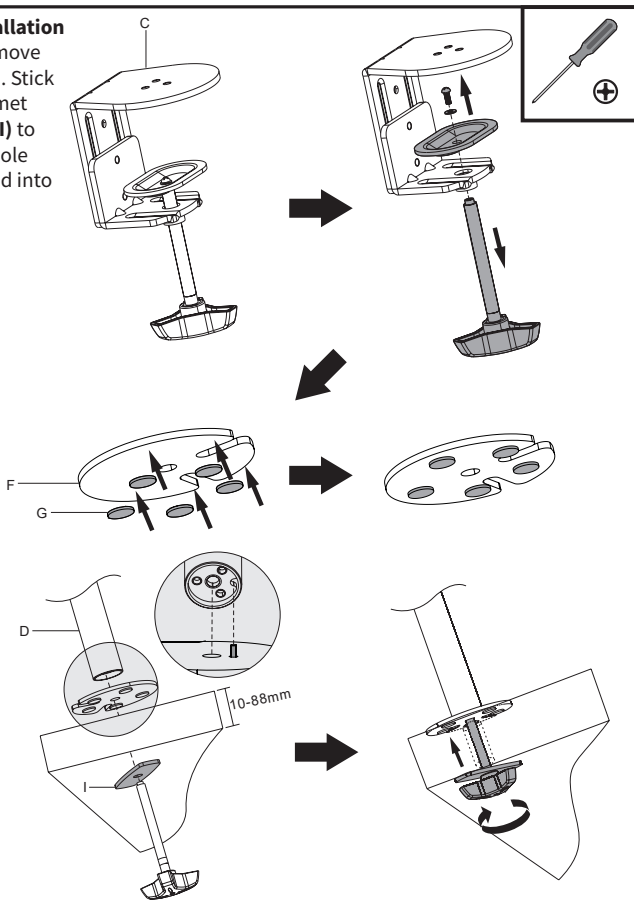

STEP 3





Slide cable management clip (E) and arm (B) onto pole (D) and tighten using 6mm allen key (L).

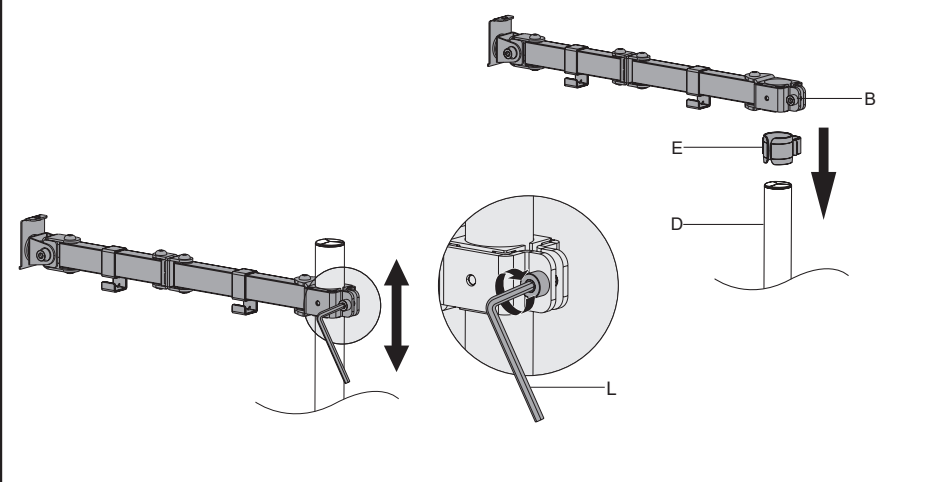

## STEP 4





### OPTION A: Flat Back Monitor

Attach VESA plate (**A**) to monitor using bolts (**M-A**) or (**M-C**) and washers (**M-E**).

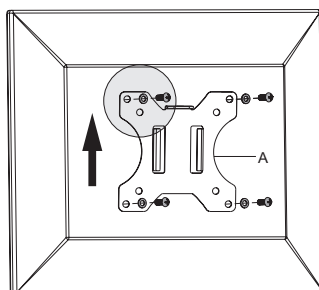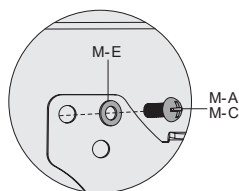


### OPTION B: Curved Back Monitor

Attach VESA plate (**A**) to monitor using bolts (**M-B**) or (**M-D**), washers (**M-E**), and spacers (**M-F**).

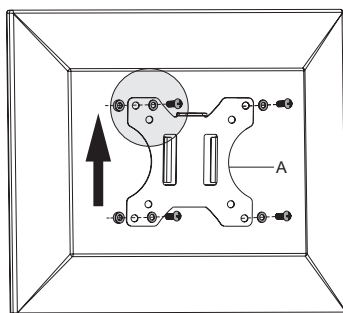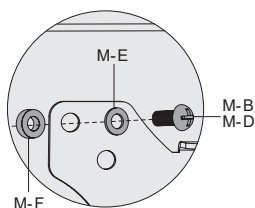


## STEP 5

Slide VESA plate (**A**) into bracket on arm (**B**) and secure using thumb screws (**J**) as shown in diagram.

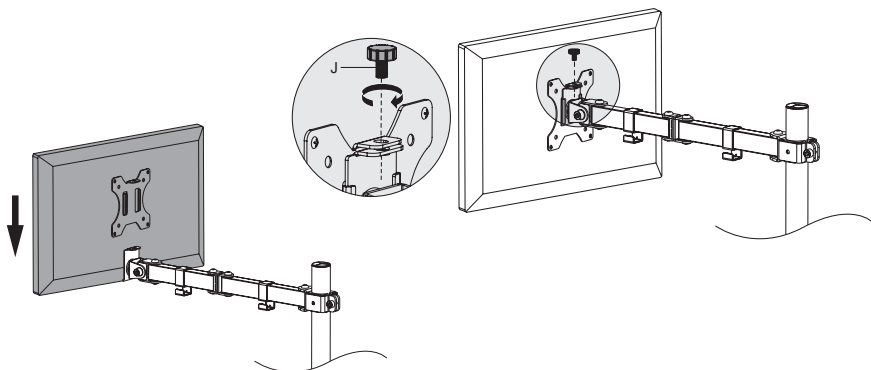


STEP 6

Adjust tension in monitor bracket with 6mm allen key (**L**).

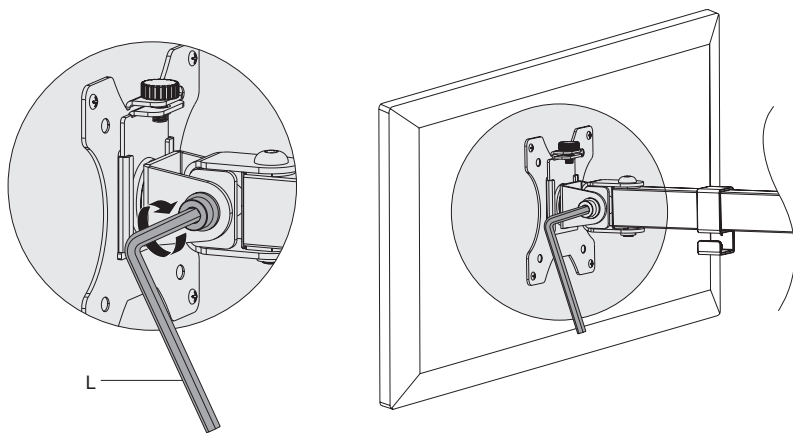


STEP 7

Route cables through cable management clips.

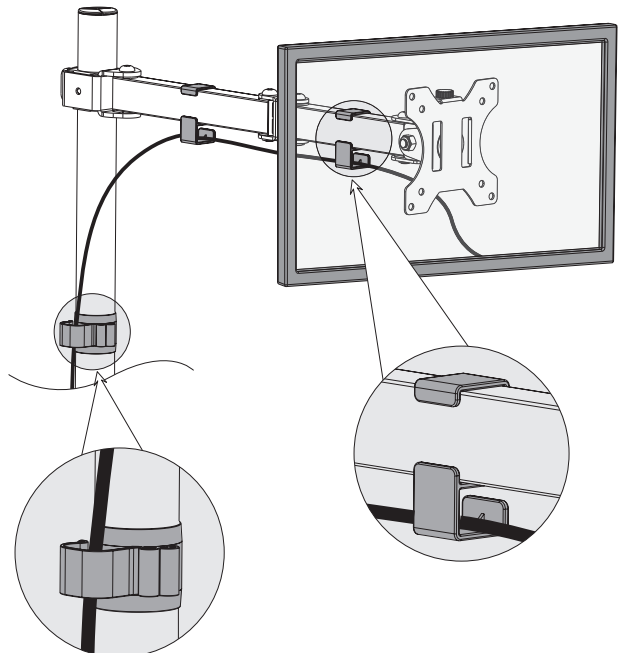


## STEP 8

Store allen key (**L**, **K**) in cable management clip (**E**) for future adjustments.

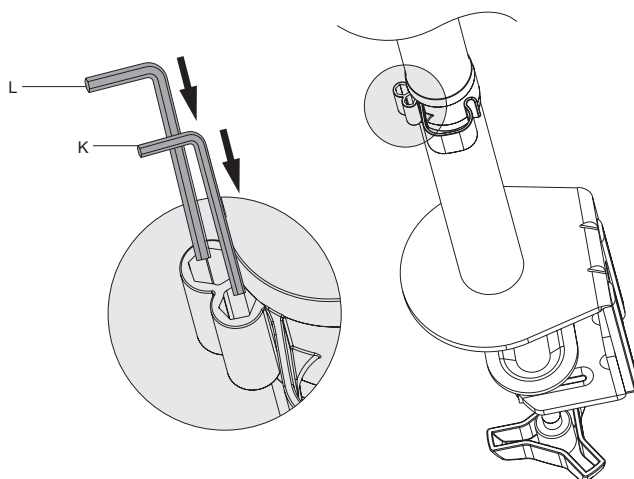

Adjust as Desired

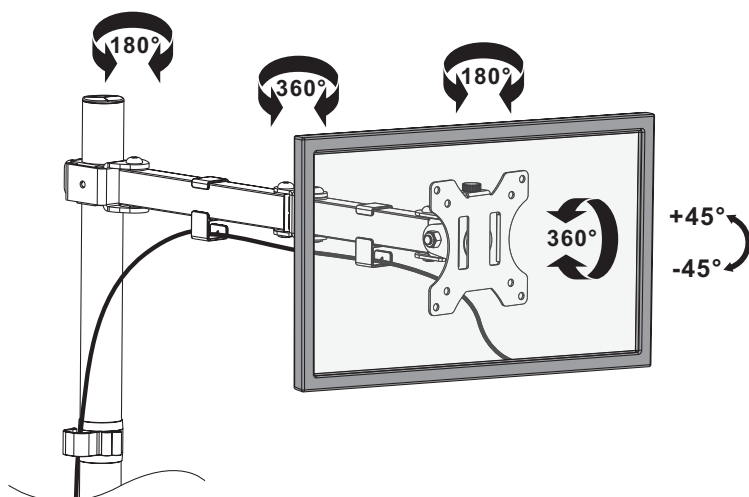



Love your new VIVO setup and want to share?  
Tag us in your photo! **@vivo\_us**

LAST UPDATED: 03/06/2020



Open **Monday - Friday 7:00am - 7:00pm** CST,  
our dedicated support team can offer immediate assistance with rapid response times. If any  
parts are received damaged or defective, please contact us. We are happy to replace parts to  
ensure you have a fully functioning product.



[help@vivo-us.com](mailto:help@vivo-us.com)

**AVG. RESPONSE TIME** (*within office hrs*): **1HR 8M**

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr



[www.vivo-us.com](https://www.vivo-us.com)  
*Chat live with an agent!*

**AVG. RESOLUTION TIME** (*within office hrs*): **< 15 M**



309-278-5303

**AVG. RESOLUTION TIME** (*within office hrs*): **5M 4S**

FOR MORE VIVO PRODUCTS, CHECK OUT OUR WEBSITE AT: [www.vivo-us.com](https://www.vivo-us.com)