


# Large VESA Quick Release Adapter

Instruction Manual

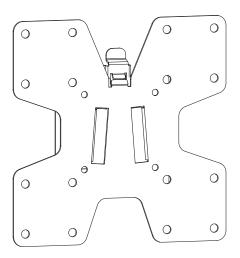

# SKU: STAND-VAD2H



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

https://vivo-us.com/products/stand-vad2h

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST





طيا




# ♠ WARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.



### **WARNING: CHOKING HAZARD**

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS, ADULT SUPERVISION IS REQUIRED.

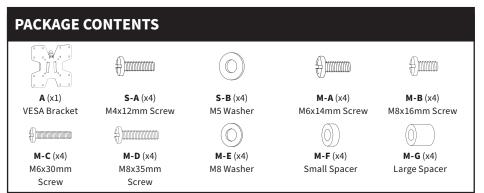

TOOLS NEEDED



DO NOT EXCEED WEIGHT CAPACITY.


NOTE: SOME HARDWARE INCLUDED MAY NOT BE USED

Failure to do so may result in serious injury.



## **ASSEMBLY STEPS**


## STEP 1

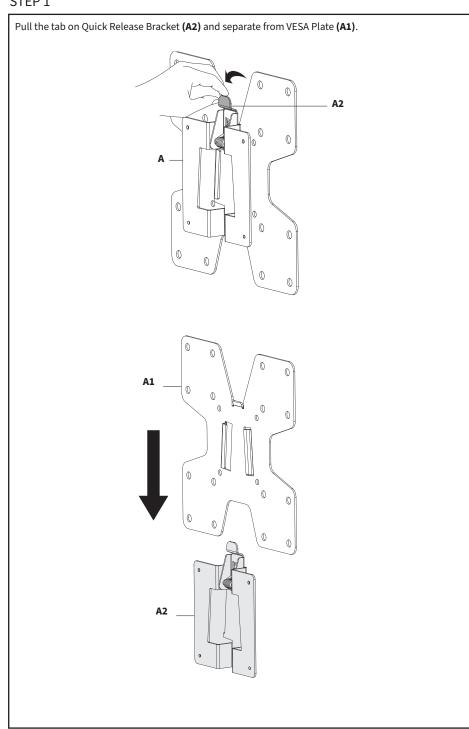


Attach Quick Release Bracket **(A2)** to a VESA compatible stand using M4x12mm Screws **(S-A)**, M5 Washers **(S-B)**, and a Phillips screwdriver. 8 A2

#### VESA 75x75mm

Attach VESA Plate (A1) to your display using the assorted Screws (M-A, M-C), M8 Washers (M-E), Spacers (M-F,M-G), and a Phillips screwdriver, using smallest holes in center.

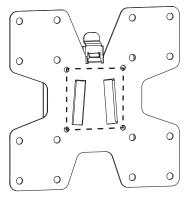


VESA 75x75mm

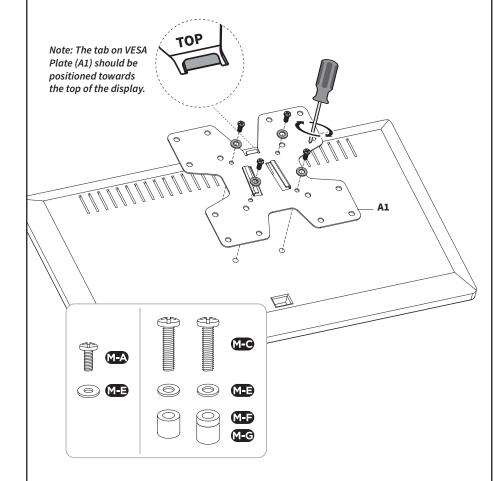



#### VESA 100x100, 100x200, 200x100, 200x200

Attach VESA Plate (A1) to your display using the assorted Screws (M-A,M-B,M-C,M-D), M8 Washers (M-E), Spacers (M-F,M-G), and a Phillips screwdriver.

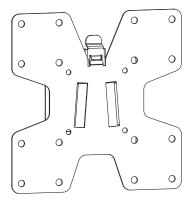

100x100, 100x200, 200x100, 200x200 USE HOLES THAT MATCH YOUR VESA PATTERN

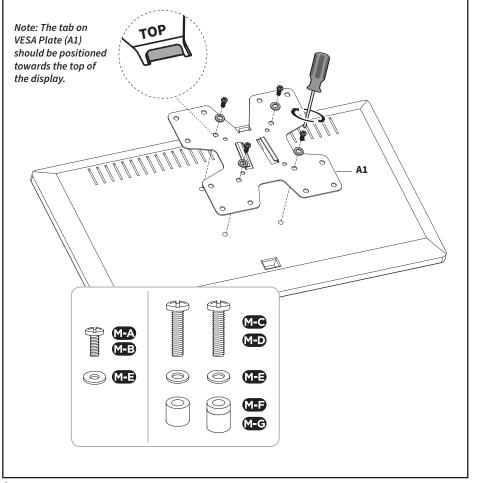

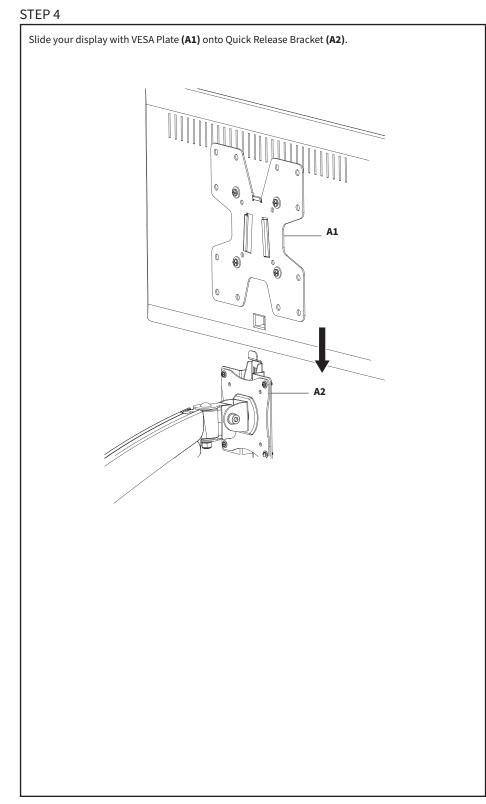



### Open Monday - Friday 7:00am - 7:00pm CST,

our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.



309-278-5303

AVG. RESOLUTION TIME (within office hrs): 5M 4S



www.vivo-us.com
Chat live with an agent!

AVG. RESOLUTION TIME (within office hrs): < 15 M



help@vivo-us.com

AVG. RESPONSE TIME (within office hrs): 1HR 8M

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr