



Bottle, teat and dummy Steriliser and Dryer Manual



- One key sterilising and drying
- High temperature steam sterilisation
- Individual hot wind drying
- Touch button
- Activated carbon filter

Thank you for using Minbie products.

IMPORTANT: READ THE INSTRUCTIONS IN THIS MANUAL BEFORE USING THE MINBIE STERILISER AND DRYER.
Please keep this manual in a place where you can refer to it at any time.

Product Specifications

Name: Bottle, teat and dummy Steriliser and Dryer
 Packaging: 1pcs
 Nominal voltage: 230V~
 Place of origin: China
 Rated Frequency: 50Hz
 Rated power: Air dry: 180W Steriliser: 600W
 Year of manufacture: 2019
 Disinfection factor: High temperature steam
 Recommended using environment: Use indoors with good ventilation of fresh clean air.
 Implementation standards: EN 60335-1 EN 60335-2-15

Fault-Testing

Water is not boiling for Sterilisation
 The heating plate will produce scale (this is residue from the items as they are steam-cleaned and from the water). If scale builds-up too much it can cause the heating plate to switch-off before the water has boiled.
Water flows from the bottom
 This happens when too much water has been added. Please pay attention when pouring the water in, so as not to go over the correct level. Dry around the base and allow to dry in a ventilated indoor place.
Automatic turn off
 If the temperature of the heating plate goes over the protective temperature, the appliance will turn-off automatically. Please do not turn it on again immediately. Allow the heating plate to cool-down for at least 10 minutes before turning it on again. Do not pour cold water onto the hot heating plate. To avoid this happening, descale the heating plate every 2-3 days by following the instructions below on how to descale.

How To Descale

When the Steriliser is cool take the barrel, basket and lid off the base unit. Turn-off the power and pull-out the plug. Put 60ml white vinegar and 70ml water in the base unit's round stainless-steel plate and let it stand until the scale is dissolved. Then pour this mixture down the sink, being careful to pour on the opposite side to the wind vents (being very careful that fluid does not get inside the base unit where it will harm the machine). Descale every 2-3 days.

Important Notes


- Attention and safety warnings**
- This Steriliser and Dryer appliance is intended to be used in a household, and similar application, to clean baby teats, dummies, baby bottles, bottle lids and collars.
 - The information in this leaflet must be read before using this Steriliser and Dryer. The operating instructions must be complied with.
 - The user of this Steriliser and Dryer assumes all responsibility and risk for the use of this appliance.
 - This appliance must not be used by children. Keep the appliance and its cord out of the reach of children. Do not let children play with this appliance.
 - The appliance must not be immersed in water.
 - While in use, the appliance must be situated on a firm stable surface. The room should be ventilated.
 - Do not let water in the wind guide vents in the base. Use only the recommended amounts to pour into the base. It will damage the machine and it is not safe if you get water or other fluid inside the base unit. If pouring fluid off the heating plate, make sure that you do not let it get anywhere near the wind guide vents.
 - Turn-off the machine if you need to remove any items during a cycle.
 - Don't scald yourself while taking away the lid or items. Preferably allow to cool, before removing the sterilised items.
 - The heating element surface is subject to residual heat after use.
 - After a cycle is finished, before removing the sterilised items, turn-off the power.
 - Pull the power plug out of the socket when not in use.
 - Do not put any flammable or explosive articles near this appliance in order to avoid danger.
 - Please clean the steriliser according to the scale removal directions in order to avoid any damage.
 - Refer to the voltage data before use. If the voltage doesn't match your local setting, it might disorder or damage the appliance.
 - If the supply cord gets damaged, or if the appliance gets dropped or broken, avoid touching the water, turn-off the power and pull the socket out of the mains power plug. DO NOT USE the appliance. Dispose of the appliance with the appropriate local council un-burnable rubbish recycling. Please do not disassemble and repair the appliance.

Faulty product
 If the product is damaged when you receive it, DO NOT use the product, contact our customer service team at info@minbie.com.au. If the product is faulty when you receive it, please contact info@minbie.com.au. Claims must be communicated to I-Sip Trading Pty Ltd within thirty (30) days of dispatch of the goods.

Components

This product has an intelligent microcomputer chip design and uses water vapour to sterilize the bottles and other items in a short time. There is a filter to absorb dust when drying to avoid secondary pollution.

Item	Name	Material	Heat-resistance temperature	Cool-resistance temperature	Quantity
a	Lid	polypropylene(PP)	120°C	-20°C	1
b	Nipple basket	polypropylene(PP)	120°C	-20°C	1
c	Wind guide piece	polypropylene(PP)	120°C	-20°C	1
d	Tongs	polypropylene(PP)	120°C	-20°C	1
e	Measuring cup	polypropylene(PP)	120°C	-20°C	1
f	Barrel	polypropylene(PP)	120°C	-20°C	1
g	Base	polypropylene(PP)	120°C	-20°C	1
	Manual				1

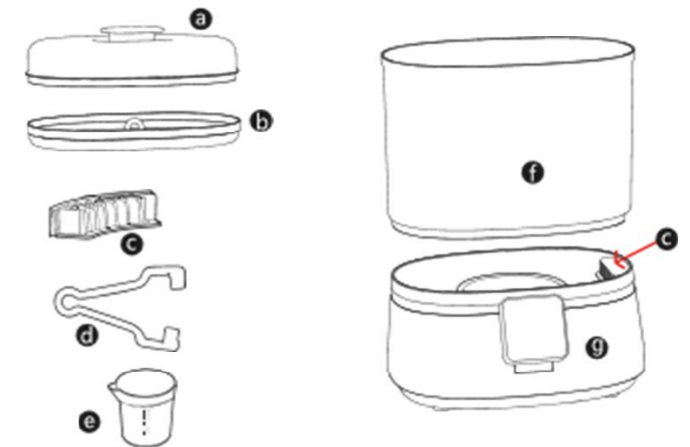

Note: Please check the above components before use. Contact info@minbie.com.au if you have any queries.


Control Panel Guide



Minbie's bottle and teat steriliser works on the principle of steam vapour to sterilise. It also has a drying function so that the bottles and teats can dry without having to be taken out of the steriliser. This is to help keep the items dry, clean and away from bacterial regeneration.

The LCD display has a timer and the following selection of keys to press: "Sterilising", "Drying", "Sterilising drying" and "on/off".

How to Use Steriliser and Dryer

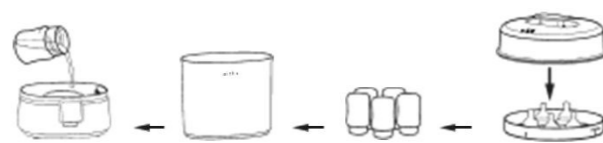

Sterilising

First add water to the stainless steel heating plate. We recommend 50-60ml water for around 5 minutes sterilisation. This length of time will help to look after the life of your items. Steam kills 99.9% germs on contact. (Note: The heating plate will turn-off automatically once the water has evaporated or after 10 minutes. Do not put more than 80mls water in the heating plate as the water needs to evaporate fully for the drying function to work.)
 Put the bottles upside-down into the barrel. You can also add expression items like shields. Put the barrel onto the base of the unit.
 Put the nipple basket, with teats, collars, bottle lids, and other small items, on top of the barrel.
 Put the lid on.
 Press "on/off key" for the standby mode.
 Press the "sterilising key". In Sterilisation mode, the LCD screen will light up, indicating that it is in use. The length of time in this mode will vary according to the amount of water that you put in the heating plate. Once the water has evaporated (or after 10 minutes) it will shutdown automatically.
 (If you need to stop the process mid-way, press the on/off key. Do not open the lid until the unit has cooled. Do not pour cold water onto the hot eating plate.)

Drying

Do not add water. Put the bottles upside-down into the barrel, and put the barrel onto the base of the unit. Put the nipple basket with teats, collars, bottle lids and other small items on top of the barrel. Put the lid on.
 Press "on/off" key for the standby mode.
 Press the "drying" key once, it will light up and the LCD timer will display 30min (for 30 minutes of drying). If you want longer drying, press again for LCD display 40min (for 40 minutes of drying), or again for LCD 50min (for 50 minutes of drying). If you press again it will revert back to 30min drying. During the selection process the drying key flashes, then it will revert to constant and the countdown for drying will begin. After the countdown there will be a beeping sound and it will automatically turn-off.
 (If you need to stop the process mid-way, press the on/off key.) Initially the air will be very hot and it will gradually cool during the drying cycle.

Sterilising & Drying

This automatic function begins with Sterilisation and then automatically switches to Drying.
 First add water to the round stainless steel heating plate. We recommend 50-60mls for around 5 minutes sterilisation. This length of time will help to look after the life of your items. Steam kills 99.9% germs on contact. (Note: The heating plate will turn-off automatically once the water has evaporated or after 10 minutes. Do not put more than 80mls water in the heating plate as the water needs to evaporate fully for the drying function to work.)
 Press "on/off key" for the standby mode.
 Press "Sterilising/Drying" key once for 40 minutes drying, twice for 50 minutes drying, three times for 30 minutes drying. It will begin with sterilisation mode, the LCD screen will light up indicating that it is in use. Once the water has evaporated the Drying cycle countdown that you selected will begin. After the countdown there will be a beeping sound and the unit will automatically turn off.
 (If you need to stop the process mid-way, press the on/off key. Do not open the lid until the unit has cooled. Do not pour cold water onto the hot eating plate.)

Conditions of Use

- This manual must be read prior to use, and referred to as needed.
- This Steriliser and Dryer comes with a one year warranty: from the date of purchase to the original purchaser who purchased online through the Minbie website. The warranty is only valid if the product is used strictly in accordance with the operating, maintenance and safety requirements. The warranty is not valid if a defect is due directly or indirectly to damage caused by incorrect use, negligence, poor maintenance, bad handling, accidents, wrong voltage, or if there have been alterations or repairs to this product; or normal wear and tear.

Cleaning and Maintenance

Every 2-3 days, once the steriliser heating plate is cool: turn-off the power, pull-out the plug, then use a damp cloth to wipe the inner and outer walls. Also descale the round stainless-steel heating plate (see How to Descale in this manual).



Danger:
DO NOT put the machine into water to clean.

Thank you for choosing this Minbie Steriliser and Dryer.

We are committed to better quality products and thoughtful online customer support.

You are welcome to contact info@minbie.com.au with any queries. Other Minbie products can be found at www.minbie.com.au

Keep for future reference.



I-Sip Trading Pty Ltd ABN 69 117 553 750
 PO Box 8368, Armadale VIC 3143 AUSTRALIA
info@minbie.com.au <https://minbie.com.au/>

© 2020 I-Sip Trading Pty. Ltd.

Only the best for your baby!

