

(WR31) Safety Glasses

Product Datasheet

OUR REF:WR31

PRODUCT DESCRIPTION

Economical, low cost protection which will fit over most prescription glasses. Ideal for visitors or occasional use. Lightweight, durable glasses packed in polybag with UI.


LENS AVAILABLE: CLEAR

AVAILABLE SIZES: ONE SIZE

FRAME: Polycarbonate

OCULAR MATERIAL: Polycarbonate

NOTE: Eye protection is only effective if correctly selected, fitted and worn for the complete period of exposure to hazards - Read ALL instructions and warnings carefully before use and consult a professional.

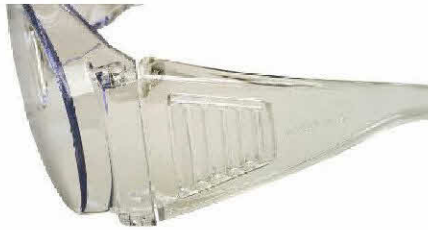

CLEAR LENS:



Technical Details

MEETS:
EN 166:2001
PERSONAL EYE PROTECTION

Complies with the requirements of the European Standard EN 166:2001 "Personal Eye Protection"

EN 166 1 F Suitable for continuous use (Class 1 optical)

Low energy impact (resists a 8 mm, 0.88g ball bearing at 45 m/s) (Maximum protection level available for glasses with sidearms)

EC type examination(s) carried out by: CERTOTTICA Scrl, Zona Industriale, 32013 Longarone (BL), Notified Body: 0530

Instructions for use:

- Inspect the glasses carefully before use and discard if damaged in any way.
- Inspect the glasses at regular intervals. If the frame or lenses are damaged in any way leave the area of hazard and replace the glasses. There are no user replaceable parts available for this model.

Additional information:

- **Cleaning:** Clean with warm soapy water and dry with a soft non abrasive cloth.
- **Storage:** When not in use this product should be stored in a clean dry poly bag in a cool place out of direct sunlight and away from solvents, solvent vapours or corrosive materials. Maximum product life 2 years.
- **Damage:** This product should be carefully inspected before use and discarded if damaged in anyway whatsoever.
- **Material Declaration:** No parts which are in contact with the wearer are made from materials known to cause skin irritation.
- **Chemicals:** Certain chemicals may have a detrimental effect on contact with this product. If in doubt please check with your supplier.
- **Disinfection:** The parts of this product in contact with the skin should be disinfected periodically (at least every 3 months) with a suitable disinfectant.
- **WARNING:** This product offers no protection against IR radiation. This product offers adequate protection against UV sun radiation but should not be used against hazardous levels.