


verilux[®]
The Healthy Lighting Company[®] Est. 1956

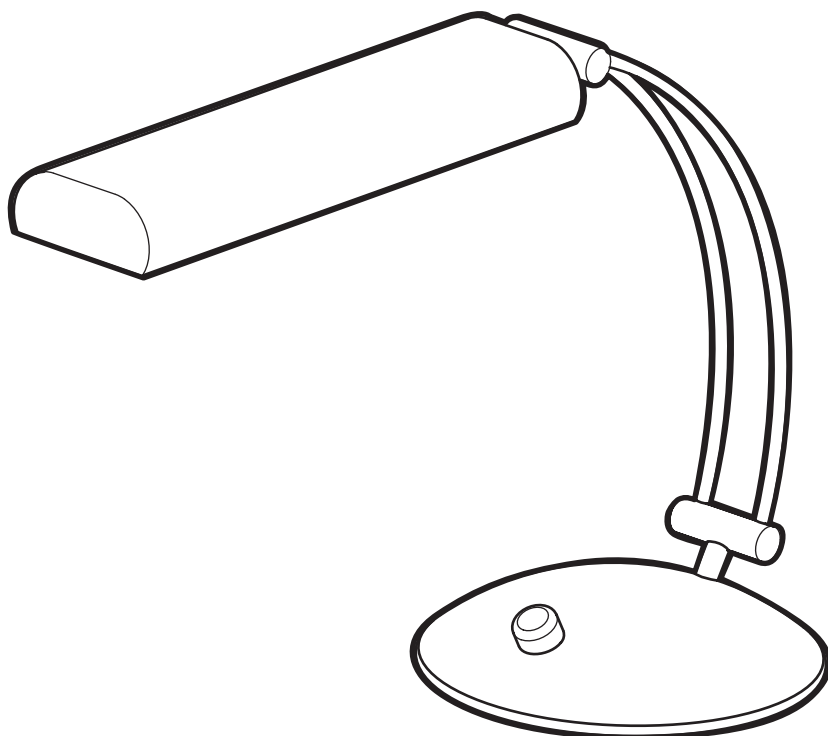

Modern | Deluxe

Natural Spectrum[®] Desk Lamp

Model: VD07

Job#: 0.0637	Title: VD07 Modern Deluxe Desk Manual
Date: 4/19/12	Version: VD07-MAN-Rev7



Dear Customer,

Thank you for purchasing the Verilux Modern Deluxe Natural Spectrum® Desk Lamp. You have received an innovative and quality manufactured product, backed by a one-year limited warranty.

Many other healthy lighting products are available through our catalog and online. To request a free copy of our catalog, call our toll-free number 1-800-454-4408. You may also visit us on the web at www.verilux.com to learn more about all our quality Verilux products.

As a Verilux customer, your satisfaction means everything to us. We look forward to serving you now and in the future.

Have a bright day!

A handwritten signature in black ink that reads "Nicholas Harmon". The signature is written in a cursive, flowing style.

Nicholas Harmon
President, Verilux, Inc.

READ ALL INSTRUCTIONS BEFORE USING

Important Safeguards

⚠ DANGER:

- Do not operate this device near a water source to avoid electrocution.

⚠ WARNING:

- Do not use with power supply voltage other than 120 VAC.
- Do not defeat the the safety purpose of the polarized plug. A polarized plug has two blades with one wider than the other. The wider blade is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Do not operate lamp in close proximity to flammable or combustible vapors, such as aerosol spray products, or where oxygen is being administered.
- To prevent risk of shock or personal injury when cleaning these lamps, make sure you have turned off and unplugged them, and allow sufficient time for the bulbs to cool.
- Do not cut or shorten the power cord.
- The bulb in this product contains a trace amount of mercury, a chemical known to the state of California to cause birth defects or other reproductive harm. This substance may also cause injury if inhaled or ingested.
- Some people may experience light sensitivity to fluorescent lighting. Discontinue use if you experience any discomfort.
- Certain drugs may induce light sensitivity (e.g. anti-depressants). If you experience any discomfort or a level of hyperactivity while using the lamp, discontinue use and contact your health care provider.
- If you have a pre-existing eye condition, contact your health care provider prior to use.

⚠ CAUTION:

- For indoor use only.
- If these lamps have been damaged in any way, do not operate normally, or have been dropped, they should not be operated. There are no serviceable parts in these lamps; do not dismantle other than for bulb installation or replacement.
- Always unplug lamp before performing bulb installation or replacement.
- This lamp is not for use with light dimmers, timers, motion detectors, voltage transformers or extension cords.

Job#: 0.0637	Title: VD07 Modern Deluxe Desk Manual
Date: 4/19/12	Version: VD07-MAN-Rev7

Important Safeguards — continued


- This lamp has been tested and found to comply with Part 18 of the FCC Rules. These limits are designed to provide reasonable protection against interference in a residential installation. This lamp generates, uses, and can radiate radio frequency energy and, if not used in accordance with the instructions, may cause interference to radio communications. If interference occurs, move the product away from the device, plug the product or device into a different outlet or move the lamp out of the line of the sight of the remote control receiver.
- Unplug lamp during lightning storms or when unused for long periods.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where the power cord exits the lamps.
- Do not use solvents or cleaners containing abrasives, or ammonia based cleaners on this product.
- After cleaning the lamp, all moisture should be properly wiped away and dried prior to restoring power.
- Use only the type of bulb and maximum wattage indicated by Verilux.
- Do NOT use lubricating agent in assembly; please see troubleshooting section if you are having difficulty assembling your lamp.
- Dispose of bulbs per local regulations. For more information on clean-up and disposal, see <http://www.lamprecycle.org>.

SAVE THESE INSTRUCTIONS

Assembly Instructions

Before assembling, please review all instructions.

1. Carefully remove the lamp from the packing materials.
2. Adjust the height of the lamp and hand tighten the thumbscrews at each swivel (A).
3. Adjust the lamp head to desired position.

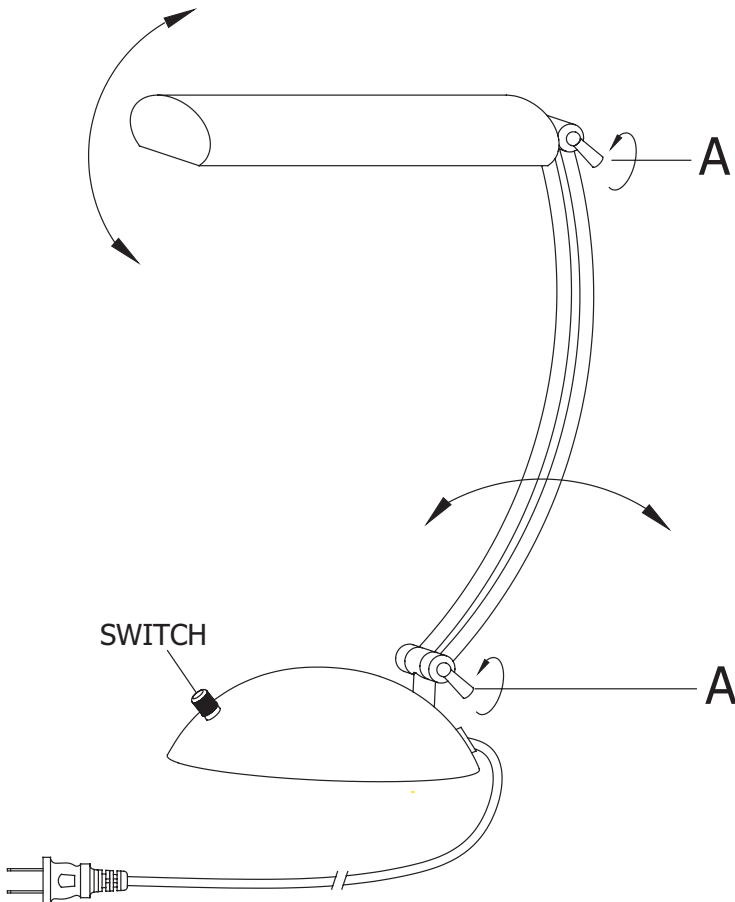

Job#: 0.0637	Title: VD07 Modern Deluxe Desk Manual
Date: 4/19/12	Version: VD07-MAN-Rev7

Assembly Instructions — continued

4. Remove thumbscrew from Optix® filter on lamp head and carefully slide filter out of channel and place on clean surface (Fig. 1).
5. Remove the 27 Watt Natural Spectrum® bulb from the packaging and carefully insert it into the socket (Fig. 2). Be sure to hold the bulb by the base and ensure it is fully inserted into the socket and clipped into the metal clip (A).
6. Note the telephone number on the bulb provides contact information when reordering.
7. Slide Optix filter back into place and re-install thumbscrew. Do not over tighten (Fig. 5).
8. Plug lamp into an appropriate outlet and turn on the switch.
9. Do not use with an extension cord or on a circuit with a dimmer switch.
10. Save the packaging in case you need to send the lamp to Verilux® for servicing.

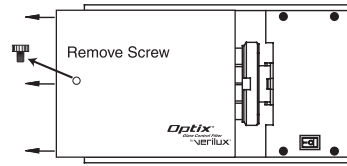


FIG 1

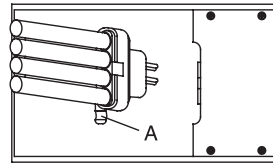


FIG 2

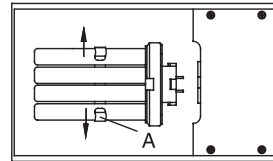


FIG 3

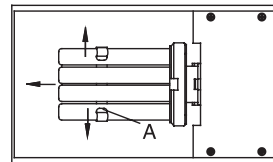


FIG 4

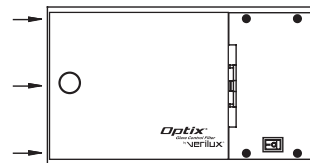


FIG 5

⚠ CAUTION: Always unplug lamp before performing bulb replacement or installation.

Troubleshooting

Before requesting service on your Verilux® lamp please read the following:

- Make sure all power connectors, cords and plugs are inserted fully and securely.
- Make sure there is power to the wall outlet or try another outlet – not connected to a dimmer.

PROBLEM	CHECK	SOLUTION
Light Won't Come On	Has the plug come loose?	Insert plug securely into wall outlet.
	Is the bulb old?	Check bulb for blackening/darkening at bottom of spiral where it joins the base (an indicator of bulb life) and replace bulb.
	Is the bulb connected securely into socket?	Be sure the bulb is securely seated into socket, repeat the bulb installation process.
Blackening/Darkening at Ends of Bulb	Is the bulb new?	Sometimes when a new bulb is turned on for the first time the tube will darken, but this will fade after a few minutes.
	Is the bulb old?	With older bulbs, darkening of the tube indicates end of bulb life (this doesn't affect operation except to reduce the amount of light available since the phosphor in that area has become inactive). Bulb replacement is recommended.
Light Flickers	Has the plug come loose?	Insert plug securely into wall outlet.
	Is the bulb connected securely to the socket?	Be sure the bulb is securely seated into the socket, repeat the bulb installation process. ⚠ CAUTION: DISCONNECT LAMP FROM OUTLET PRIOR TO REPEATING THE BULB INSTALLATION PROCESS.
	Is the lamp connected to a dimmer switch?	Connect lamp plug only to wall outlet without dimmer switch.

Care & Cleaning

Your lamp is made from high quality materials that will last for many years with minimum care. You may want to periodically clean the lamp using a mild non-abrasive cleaner and soft cloth. When cleaning, make sure you have turned off and unplugged the unit and allowed sufficient time for the unit to cool.

⚠ CAUTION: Do not use solvents or cleaners containing abrasives, or ammonia based cleaners.

⚠ CAUTION: After cleaning the lamp, all moisture should be properly wiped away and dried prior to restoring power.

Job#: 0.0637	Title: VD07 Modern Deluxe Desk Manual
Date: 4/19/12	Version: VD07-MAN-Rev7

One Year Limited Warranty

ATTENTION! ONCE OPENED, PLEASE **DO NOT** RETURN THIS PRODUCT TO THE STORE WHERE IT WAS PURCHASED FOR REPAIR OR REPLACEMENT!

Many questions may be answered by visiting www.verilux.com, or you may call our Customer Service Department at 800-786-6850 during normal business hours.

This limited warranty is provided by: Verilux, Inc., 340 Mad River Park, Waitsfield, VT 05673

Verilux warrants this product to be free from defects in material and workmanship for a period of one year from the date of the original retail purchase from Verilux or an authorized Verilux distributor. **Proof of purchase is required for all warranty claims.** During the limited warranty period, Verilux, Inc. will, at its option, repair or replace defective parts of this product, at no charge to the customer, subject to the following limitations: This limited warranty does not include any postage, freight, handling, insurance or delivery fees. This warranty does not cover damage, defect or failure caused by or resulting from accident, external destruction, alteration, modification, abuse, misuse or misapplication of this product.

This warranty does not cover damage to the product resulting from return shipping or handling. The use of shipping insurance is recommended to help protect your product.

Return Authorization is required for all returns. To obtain a Return Authorization, please contact the Verilux Customer Service Department at 800-786-6850.

If, during the first year of ownership, this product fails to operate properly, it should be returned as specified at www.verilux.com/warrantyreplacement or as instructed by a Verilux customer service representative at 800-786-6850.

Note: *Verilux recommends using a quality surge suppressor on all electronics equipment. Voltage variations and spikes can damage electronic components in any system. A quality suppressor can eliminate the vast majority of failures attributed to surges and may be purchased at electronics stores.*

Due to ongoing improvements, actual product may have slight variations from the product described in this manual.

Please visit our website at www.verilux.com or call our Customer Service Department at

1-800-786-6850

Representatives are available Monday — Friday, 9am — 5pm EST

verilux[®]

340 Mad River Park, Waitsfield, VT 05673