


# Bench Scale Installation Guide

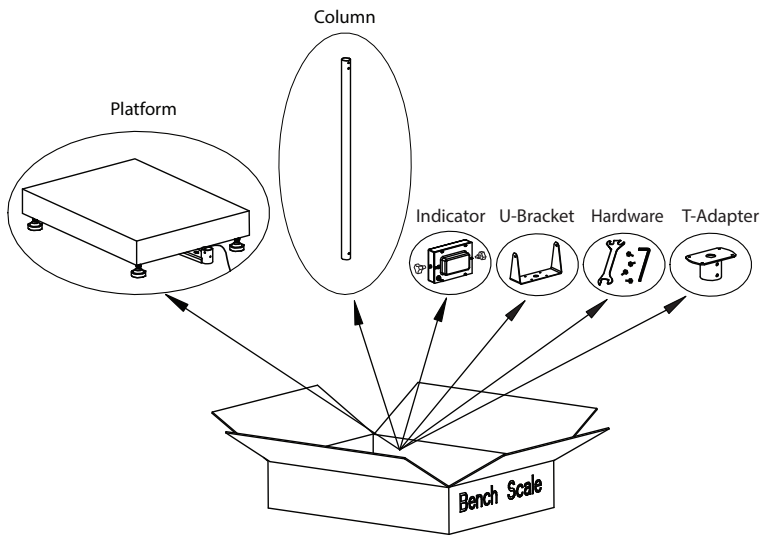

Lift tray, and remove the four yellow rubber frame protectors tags

Tray

Tag

Remove Before Using!!!

Pull

**1**

Carefully, without tugging, run the cable through the column and assemble column to base

Cable

**2**

Assemble T-Adapter and U-bracket as shown below

U-Bracket

Cable

T-Adapter

**3**

Install indicator to U bracket with 2 knobs and connect the cable to the indicator interface port

Knob

Interface

Cable

**4**

Place the tray on the scale frame; Use level bubble to level the scale by adjusting the feet

Tray

Level Bubble

Feet

**5**

# Washdown Stainless Steel Bench Scale Installation Guide

