

# ClearSonic IsoPac I Assembly Instructions


*Tools needed: rubbing alcohol, rubber mallet and tall assistant or step ladder*



1. Open boxes and check for damage. Call us immediately if you have any damaged or missing items. Save all your boxes and packing for as long as possible or at least a few weeks.



2. Stand up the main shield system in zig-zag formation, base channel on bottom.

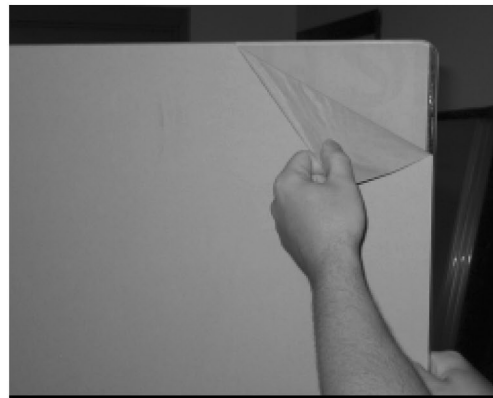

3. Peel masking off panels. Wear gloves when handling acrylic to avoid fingerprints.



4. Fold up the system and "walk" them to the front center of kit or whatever you're isolating.



5. With one person on each side, unfold the system and wrap around kit.



**6.** Use your fingers to lift the panels at bottom cable cut-outs to pull or push system into final position. End panels should be near parallel and symmetrical on either side of kit, 6 to 7 feet apart for most applications. Figure 4 to 5 feet for smaller booths.




**7.** Move the S2466x2 baffles into position behind kit. Use the Velcro flaps on outside top and bottom sides of S2466x2 to attach the units together. Ends of baffles should overlap inside of shields or butt up against them.



**8.** Adjust Lid support bar to width between end panels and rest support bar J-hooks at least 4-inches from edge of end shields. Do not extend bar beyond red limit marker. Lid systems wider than 6' should use two support bars.



**9.** Lay rectangular S2466 on top center of IsoPac with at least a one inch over-hang in front and resting on support bar in back.

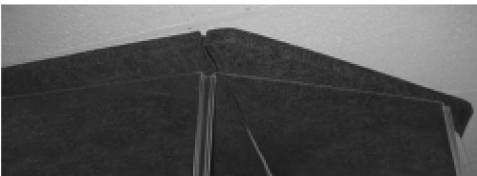

**10.** Lay ST2466 trapezoids on either side of center lid section. Leave at least an inch over-hang in front. Make sure AX height extenders stay upright and perpendicular to floor.



**11.** Use end S2466x2 as door to enter IsoPac.



Your IsoPac I is now complete! See below for a parts list.

<b>Boxes</b>	<b>Weight (Lbs.)</b>	<b>Contents</b>
(1)68"x27"x4"	102	A2466x6
(2)68"x27"x4"	26	S2466x2
(1)68"x27"x4"	26	(2)ST2466,BAR
(1)68"x27"x3"	15	S2466
(1)8"x8"x8"	2	FAN

Please contact us should you have any questions or concerns about IsoPac assembly or operation. Thank you for using ClearSonic products.  
800.888.6360 / info@clearsonic.com