


AIRVACCINE 015+

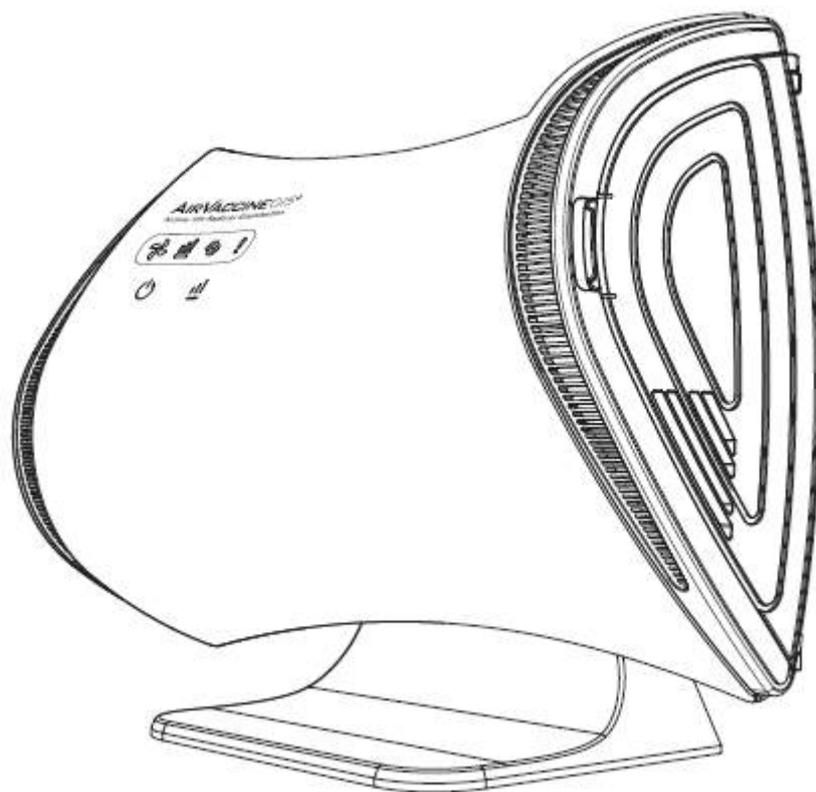

FEATURES

■ Powerful disinfection

The AirVaccine 015+ is a reliable, natural, safe way of producing hydroxyl radicals. This means the AirVaccine 015+ is able to continuously reproduce nature's method of killing airborne infections, from organisms such as bacteria, viruses and fungi, within the confines of a hospital ward, office or home. It also destroys the pollutants on the surface of the cloth or furniture.

■ 24 hours operation

The AirVaccine015+ operates continuously: to provide the maximum benefits the unit should be, for example, midway along a wall and allowed to run 24 hours per day even if the space it is safeguarding is unoccupied. The AirVaccine015+ switches itself off if the refill cartridge is exhausted: all that is required is to replace the cartridge with a new one and switch the machine back on. A warning buzzer sounds as the time for replacement of the refill cartridge approaches. All you have to do is replace the refill cartridge once in every two months. Power consumption is 2.4 watt, and noise level is maximum 35dB.

■ Large space coverage

The AirVaccine015+ is designed for use in any room or enclosed space, from rooms as small as 10 sq meters to an area as large as 100 sq meters. A busy area, with considerable traffic from room to room, will benefit from it as much as a quiet area with few people passing through.

■ Proven technology




The AirVaccine015+ adopts the UK military/defense designed technology, which is chosen to protect secondary infection in hospitals among advanced countries.

■ Safe technology

Independent safety analysis and trials show that the hydroxyl radical and the refill cartridge, in the maximum volumes that the AirVaccine015+ is able under any circumstances to produce, pose no hazard to people or animals. The output of the AirVaccine015+ is carefully designed to provide an atmosphere that is as safe and as healthy as that found by the seaside on a sunny day, or on a mountain surrounded by wild flowers or pine trees.

The helpful bacteria we need for our digestive system are called anaerobes: they exist in places without oxygen. Harmful infectious bacteria and viruses float through the air we breathe; they need oxygen to survive and it is these organisms that the hydroxyl radical produced by AirVaccine015+ kills.

PARTS NAME

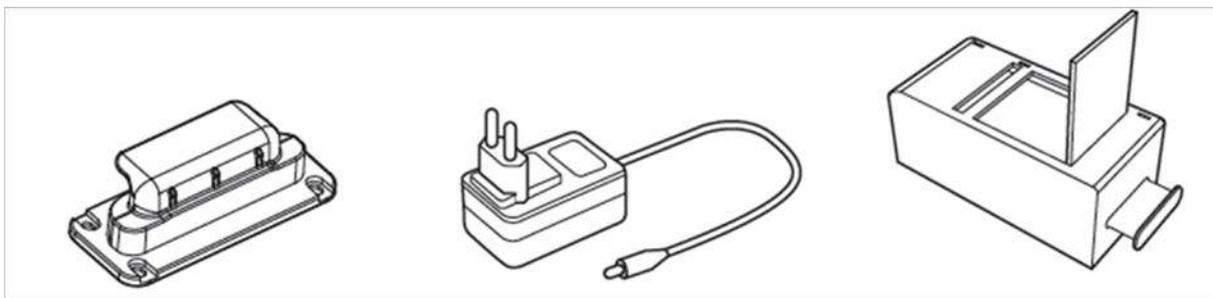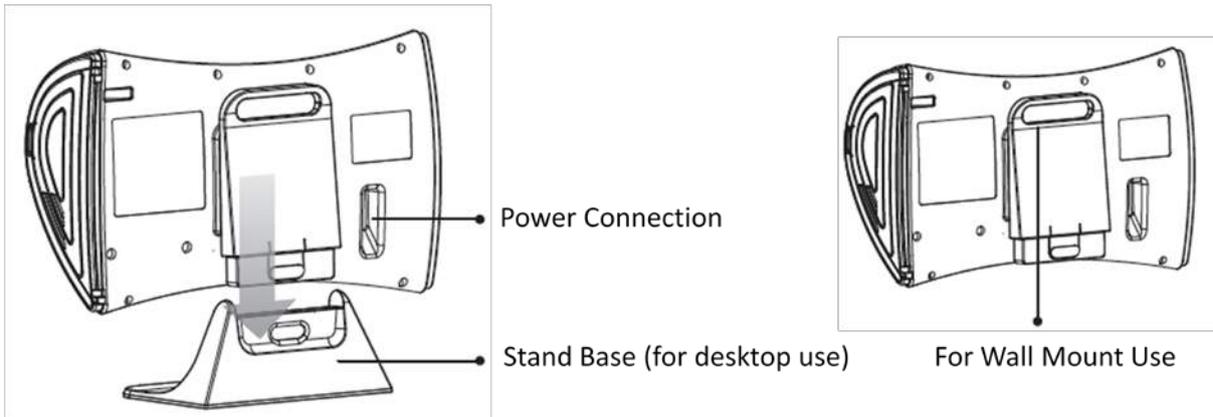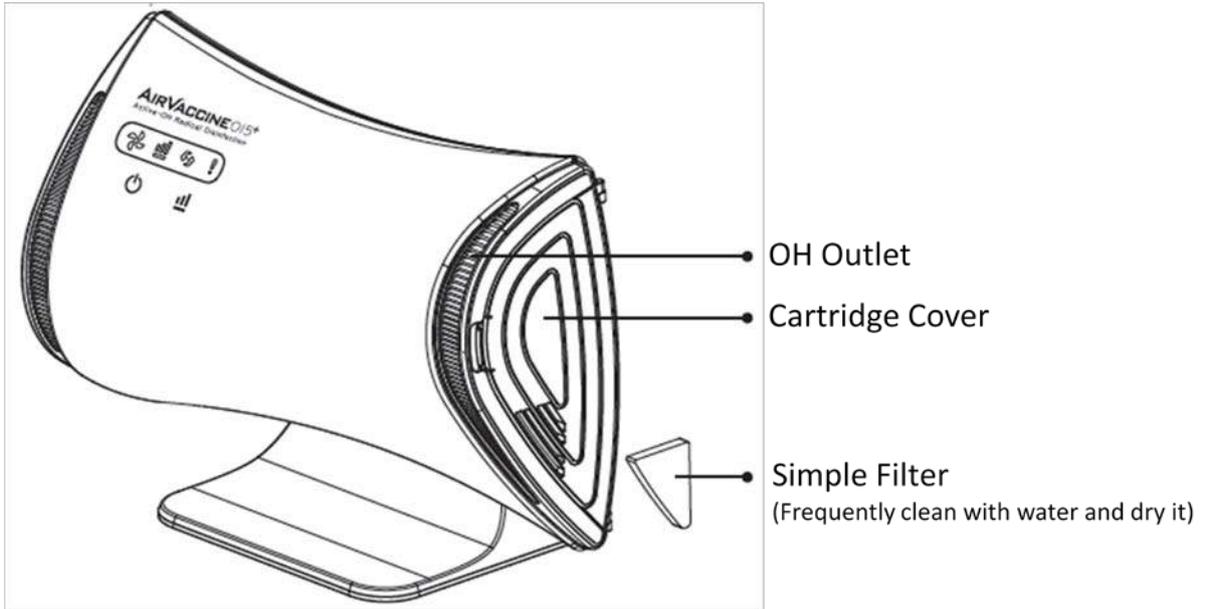

OPERATION / INDICATION PART

Operation Part



Power button : To turn the product on/off

Level button : To select the desired power level

Indication Part



Power : When the power is on, the indicator is turned on.



Level : To indicate the power level (night, weak, middle, strong)

Cartridge change : To indicate that the cartridge is to be changed

Cartridge alarm : To indicate that the cartridge is not properly installed

HOW TO OPERATE

- To start operation

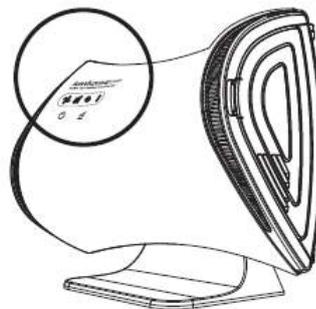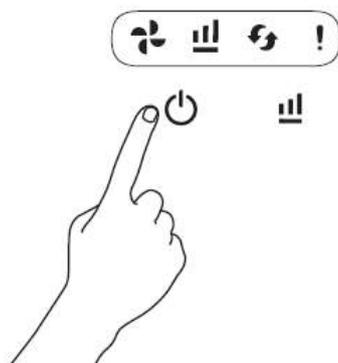

1. Connect the power adapter to power connection hole.
2. You get the beep, and all 4 indicators blink once. (If no blinking, check the power again.)
3. Press the power button, then the power indicator lights and the product starts operating.
4. When the cartridge is not or improperly installed, you get the beep and the cartridge alarm blinks in red. The product is not operating.


- To select power level

When the power button is pressed, you get the strong level indicator lighting (green). When you press the level button, it changes in order of night (dark white) - weak (white) - middle (orange) - strong (green).

HOW TO USE / CHANGE CARTRIDGE

- To prepare to use the cartridge


1. Open the upper cover of the cartridge, and remove the label on top of the solution container.

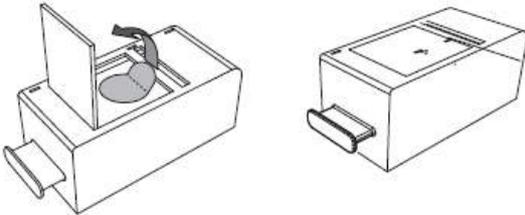

2. Close the upper cover.

- To install / change the cartridge

1. Open the cartridge cover and insert the cartridge deep inside the main body.

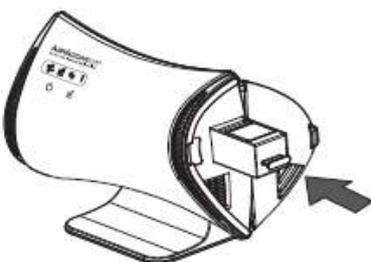

2. When the cartridge is properly installed, you get the beep, and the red cartridge alarm indicator is turned off. The product stays in off mode.


3. Press the power button, then the product starts normal operation.

■ To install / change the cartridge

1. If the cartridge change indicator blinks in blue, you need to change the cartridge. If you do not change the cartridge, the blue indicator stops blinking, and the product stops operating.

2.

Install new cartridge and press level button for 3 seconds

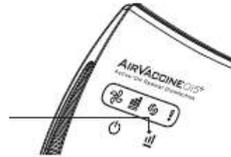

When you get beep and the cartridge change indicator turns off, the re-set is completed.


■ To dispose the cartridge

1. Do not disassemble the used cartridge or use it for other purpose. It is ABS resin and can be recycled. Dispose it according to the local recycling rule.


2. If there is waste solution inside the container, dilute it with large amounts of water and dispose it or return to the seller.

HOW TO INSTALL WALL MOUNTING

1. Fix the wall mount bracket on the desired place of the wall with the enclosed plastic screws.

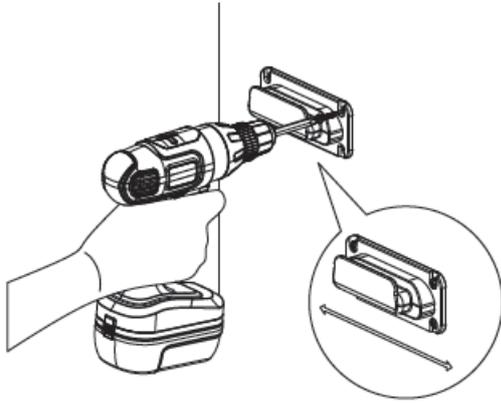

2. Remove the stand base and connect to the wall mount bracket.

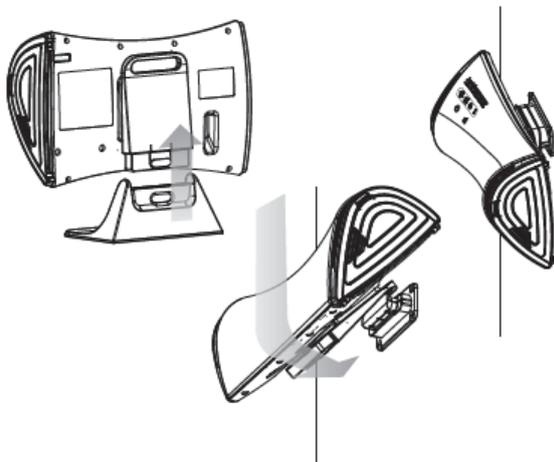

TROUBLE SHOOTING

The AirVaccine015+ may operate abnormally not because of the product malfunction but because of minor causes or the fact that the user is not familiar with the product use. In such a case, problems can be solved easily even without the help from the service center just by checking the following. If the problem still persists after you check the following, contact the service center.

Symptoms	Check	Yes	No
Indication part is off and the product is not operating.	Is the power cord properly connected?	Contact the service center	Connect the power cord to an electric outlet for 220 V – 240 V~ 50 Hz/60 Hz.
 Cartridge alarm is blinking.	Is the cartridge fallen out?	Insert the cartridge deep inside the body.	Contact the service center
The product is shaking.	Is the product installed on a slope uneven surface?	Install the product on a smooth and even surface.	Contact the service center
The deodorizing gets very weak.	Is the cartridge change time over?	Change the cartridge.	Contact the service center
	Did you clean the simple filter?	Wash and dry the simple filter.	Contact the service center
When other functional problems are detected	Check the symptoms, unplug the product, and then request service or ask service center.		

SPECIFICATION

Product specification	Air Disinfection System
Model	AirVaccine015+
Rated Voltage	220 V / 60 Hz
Power consumption	2.4 Watt
Safety feature	Power is shut down when the cartridge is not properly installed
Installation place	Indoor use
Operational area	10m2 ~ 120m2
Size	345 mm (Width) x 136 mm (Length) x 241 mm (Height)
Weight	1.42 Kg

The logo for AViVA features the word "AViVA" in a large, bold, serif font. The letter "i" is lowercase and colored blue, while the other letters are black.

Natural Health Solutions

1224 St. James St. - Winnipeg MB
(204) 947-6789 or (866) 947-6789

www.avivahealth.com