





TOILETS SERIES



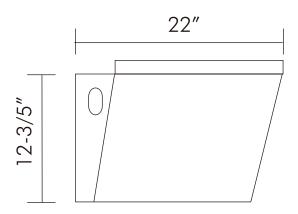



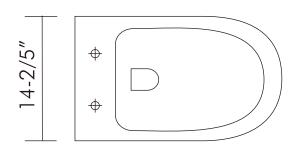

FEATURES

- Ceramic material
- White gloss finish
- Soft close seat included
- 1.06 1.6 GPF
- Wall Mount
- Concealed tank included (BSN-CL17010)







| TOILET BSN-CL11025 | |
|----------------------|-------------------|
| MODEL | BSN-CL11025 |
| BOWL HEIGHT | 12-3/5" |
| BOWL SHAPE | OVAL |
| HEIGHT | 12-3/5" |
| LENGHT | 22" |
| WIDTH | 14-2/5" |
| FLUSH TYPE | DUAL FLUSH (4/6L) |
| GALLONS PER FLUSH | 1.06/1.6 GALLONS |
| INSTALLATION TYPE | WALL MOUNT |
| MATERIAL (IN) | CERAMIC |
| COLOR | WHITE |
| SEAT INCLUDED | INCLUDED |
| WATER AREA | 110*90 |
| WATERSENSE CERTIFIED | NO |
| INCLUDED COMPONENTS | SEAT COVER |
| PRODUCT WEIGHT | 69.999 LB |
| UPC APPROVED | NO |

For parts or sale requirements please contact our customer service department:










01

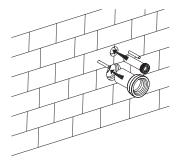


Fully insert the straight tube into de cistern flushing outlet and connecting pipe into discharging outlet.

02




Draw the lines as above pictures.

03




Apply lubricant on rubber washer of straight tube and connecting pipe, then insert into ceramic holes.

04

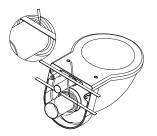


Draw the lines as above pictures.

05

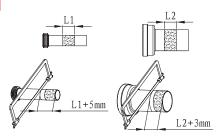

As per drawing, L1 is distance between the two lines on straight tube. L2 is distance between the two lines on connecting pipe. Cut the straight tube and connecting pipe as per above drawing

06

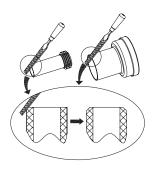

Polishing the cutting surface to get chamfer angle as per drawing and deburring.

For parts or sale requirements please contact our customer service department:




CS@daxib.com




1888 685 8236





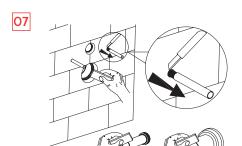


Cut the protection sleeve outside of the wall with a knife. Apply lubricant on joint surface of straight tube and connecting pipe.

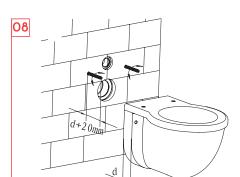


Adjust length of connecting bolt to be d+20mm.

09

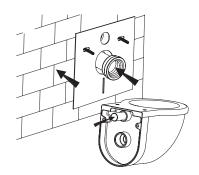

Firstly insert connecting pipe into discharging outlet and straight tube ceramic hole.

10

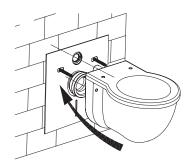


Mounting the ceramic bowl.

11



Screw the bowl and remove the extra pad.

12

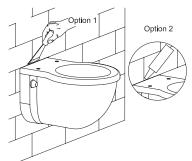

Fill the gap with white cement or glass cement.

For parts or sale requirements please contact our customer service department:



CS@daxib.com



1888 685 8236

