
ASLS ASLB SERIES

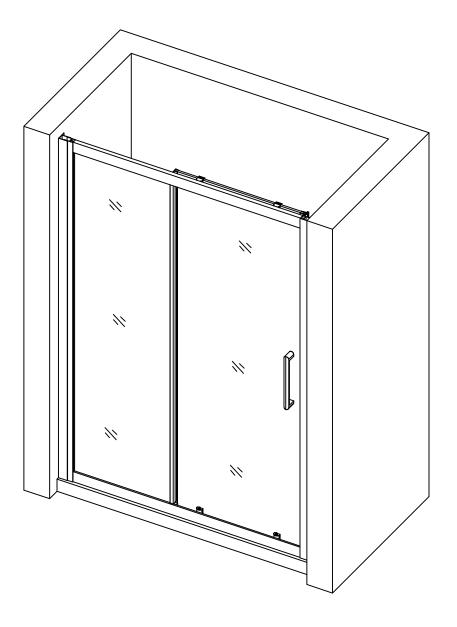

(20.08.21 A02)

General information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

Note: Safety glass can not be re-worked.

- -Please read these instructions carefully before start of installation.
- -Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.
- -Note: this product is heavy and required two persons install.


Aftercare instructions

- -After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up.
- -Cleaners of gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.
- -Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.
- -Please keep these instructions for aftercare and customer service details.

TOOLS REQUIRED


DESCRIPTION	PART IMAGE
Tape measure	
Spirit level	
Pencil	
Ø6mm/Ø3.2mm Drill bit	8
20mm Thick board	


DESCRIPTION	PART IMAGE		
Drill			
Hammer			
Cross head Screwdriver			
Inner hexagon Spanner			
Silicone Sealant			

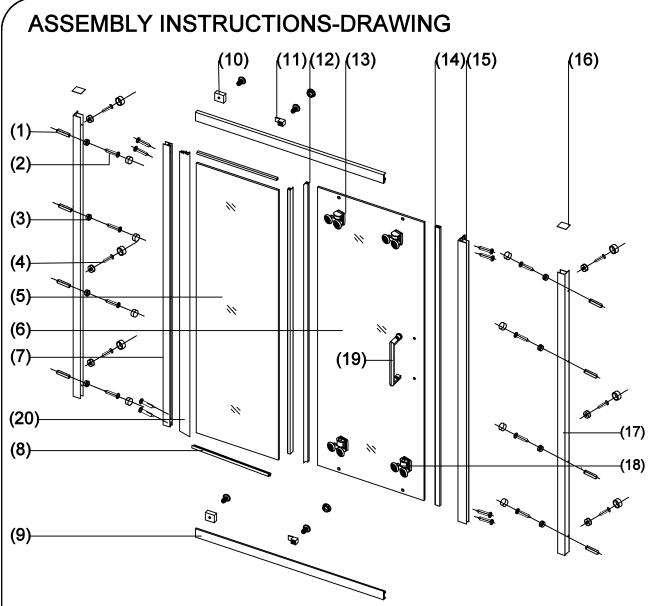

NO.	Description	QTY	Diagram
1	Wall anchor	8	
2	Metric Screw(3.9x30)	16	
3	Screw cover cap	14	9 ()
4	Metric Screw(3.9x8)	10	
5	Fixed glass	1	· · ./
6	Movable glass	1	[. :··]
7	Wall jamb	1	H
8	Glue strip	2	<u> </u>
9	Slideway	2	
10	Rubber block	2	(

NO.	Description	QTY	Diagram
11	Glass clamp	2	•
12	Water retaining strip	2	F
13	Pulley (up)	2	08
14	Magnetic adhesive strip	1	
15	Wall jamb	1	Ь
16	Decorative cover	2	0
17	Wall jamb	2	Ц
18	Pulley (down)	2	00
19	Handle	1	•
20	Rubber strip	1	###
21	Installation tool	1	

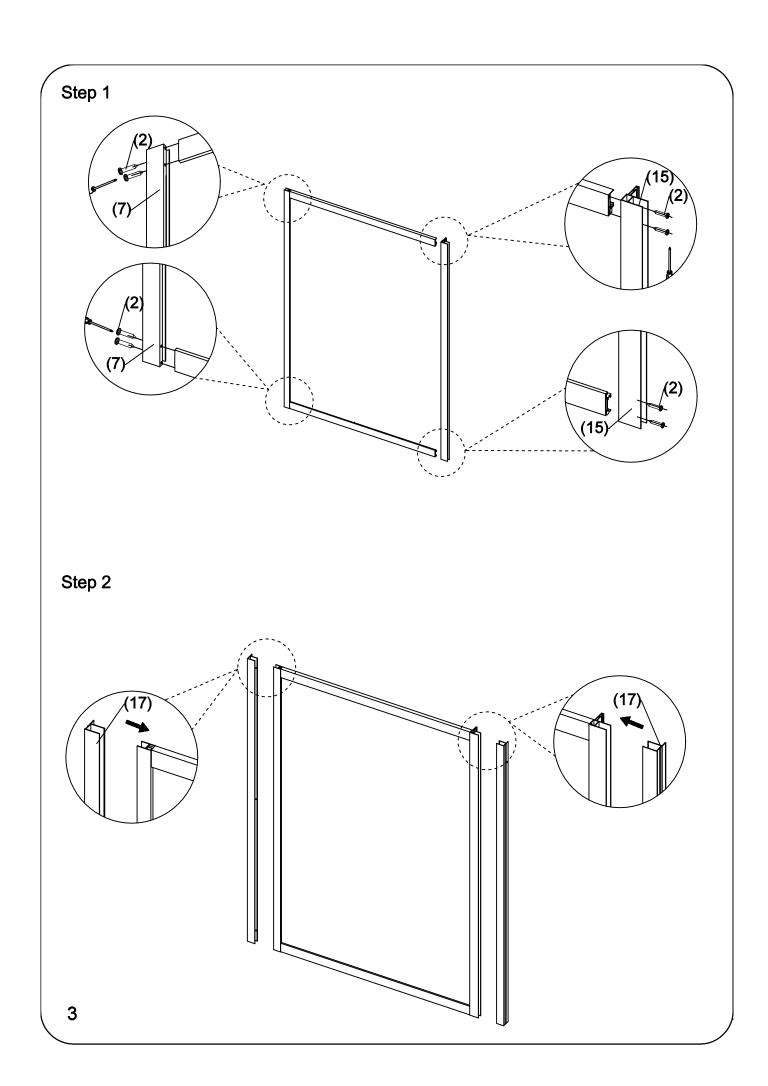

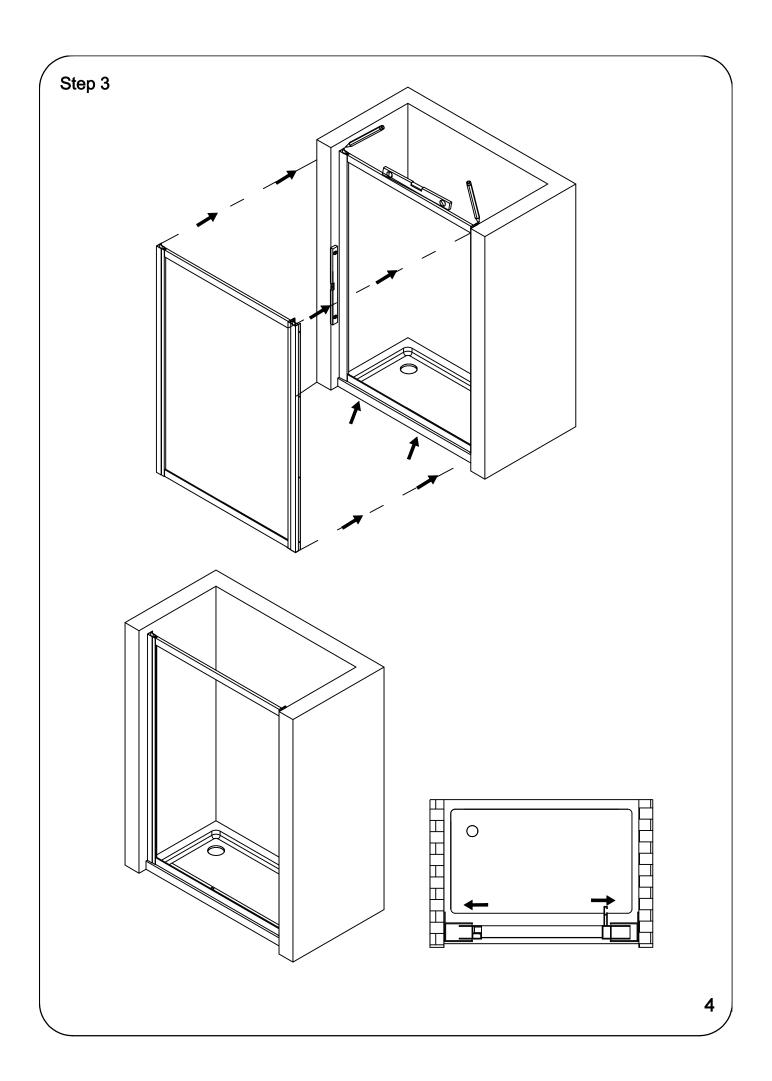

Step 4

