

Parvel

QUICK START GUIDE

1

INTRODUCTION

Thank you for your purchase of the Parvel baby monitor. We really hope and think that you will be satisfied.

At Parvel we strive to create smart and safe solutions that really make a difference and helps your life as a parent. Parvel uses technology that consumes very little energy and emits extremely low levels of electro magnetic radiation, making it safer both for the environment and your child.

Our app and our services are constantly under development and we are constantly making improvements, everything to be able to provide you with the best experience possible.

2

SAFETY & GENERAL INFORMATION

Please read this user guide carefully before using the product.

This product fulfils the safety guidelines and recommendations available according to European standards for product aimed at small children.

WARNING! Ensure that the lid covering the battery is securely attached before use (fig 4).

If not the lid can represent choking hazard. If a faulty lid is detected, or the lid does not close properly contact us immediately for a replacement.

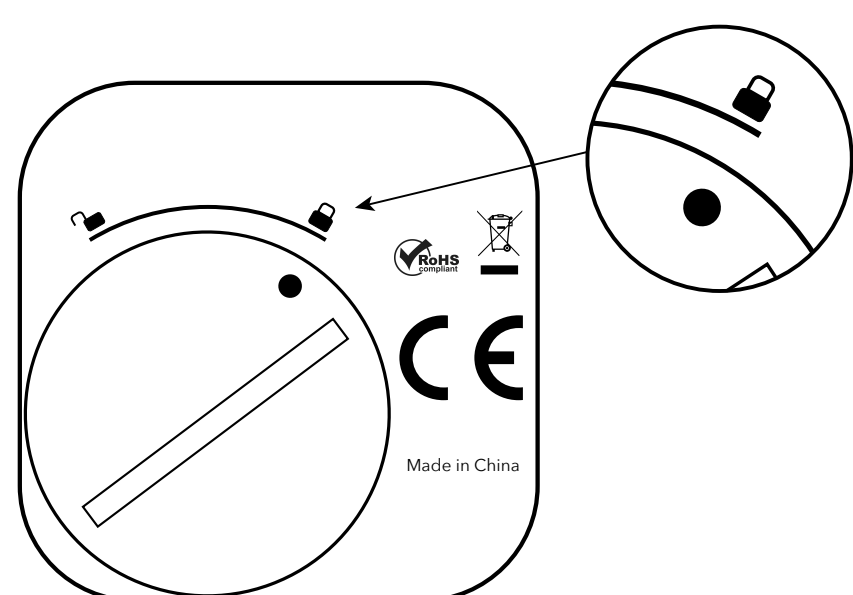


Fig 4.

Adult supervision

This product is intended as a parental aid. It can not and should not replace the attention of adult supervision. The Parvel baby monitor is not a toy and should not be used as such.

Sensors

This product uses advanced temperature and motion sensors to monitor the child's sleep. The product will measure and show the current temperature within its immediate surroundings. The Parvel baby monitor can **not** measure the actual body temperature or motions related to breathing, pulse or any other vital signs of a child or person and should not be used for medical purposes.


Cleaning

Never use water or other liquids to clean the product. Use a damp cloth to clean the unit if necessary.

The Parvel baby monitor can withstand normal levels of moisture and can be used outdoors. It should not however be subjected to direct contact with water or any fluids as this will harm and disable the electronic components of the unit.

Recycling


This product is composed out of high quality materials and components that can be recycled. The symbol with the crossed over bin means that this product is compliant with the *EU-directive 2002/96/EC*. The product uses batteries that comply with the *EU-directive 2006/66/EC*. Never dispose of this product or its batteries together with your ordinary household waste. Follow your local rules and guidelines for recycling of electronic products and batteries.

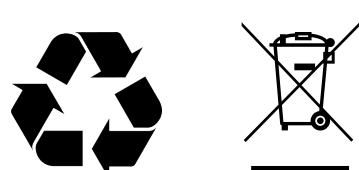

Electro magnetic fields and radiation

This product uses BLE (Bluetooth Low Energy) to communicate with the connected device such as a smart phone. The electro magnetic fields emitted through this technology are extremely low (0,002 W/kg) and the product is safe to use according to the scientific research that is available today. For more information on Electro Magnetig Radiation please visit the help section on www.parvel.store

The Unit

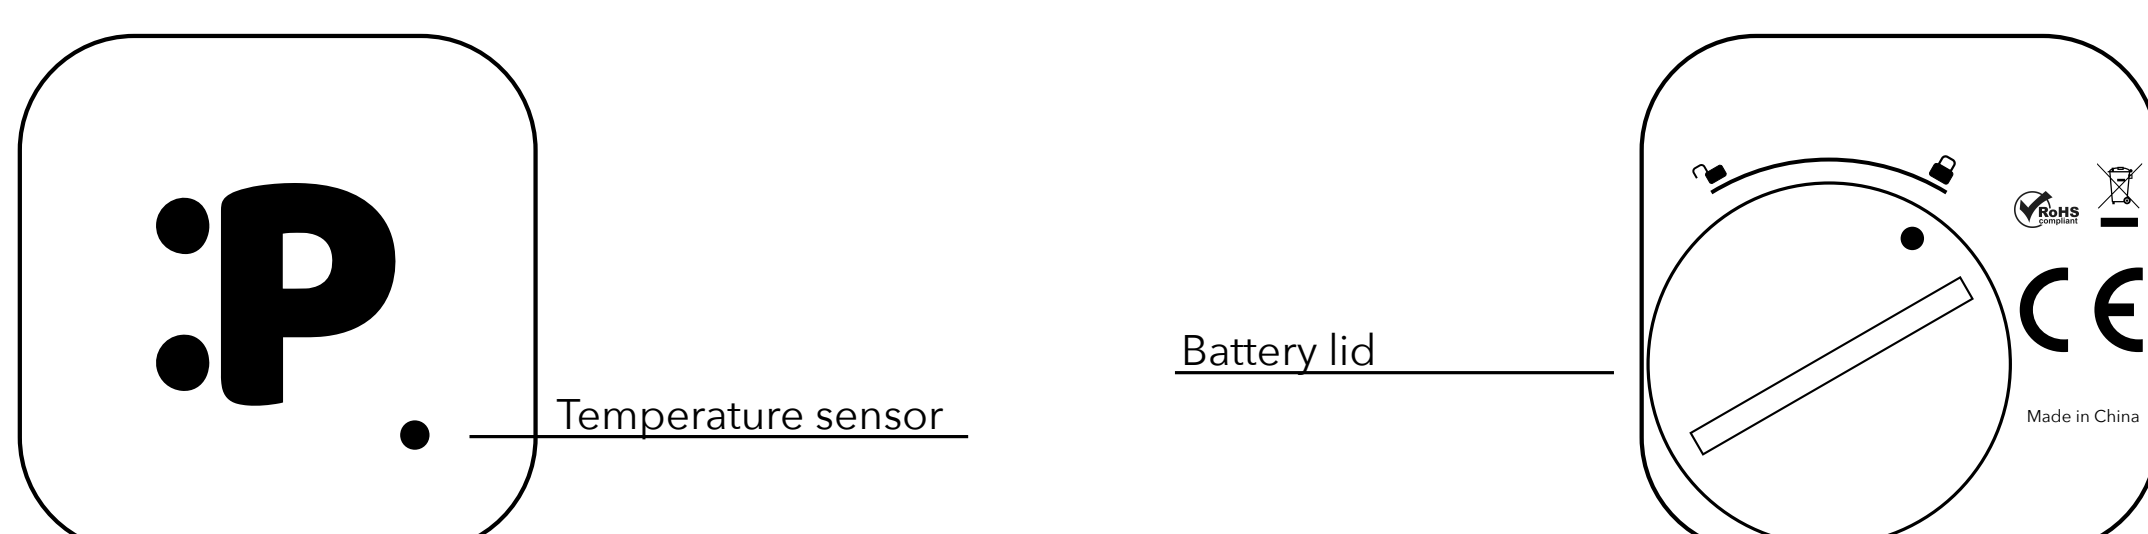

3

GETTING STARTED

Download the app

The Parvel app is available both for iOS and Andriod.

Download the Parvel app from



Preparing the unit for use

1. Remove the unit from its packaging.
2. Ensure that the battery lid is in an unlocked position and remove the lid from the unit (fig 1).
3. Remove the battery (fig 2).
4. Remove the plastic film underneath the battery (fig 2).
5. Insert the battery. Ensure that the battery is inserted correctly (fig 3).
6. Attach the battery lid and turn clockwise until the symbol indicated the lid is in a locked position (fig 4).
7. Launch the Parvel app on your smart phone. The app will immediately start looking for any nearby devices and connect automatically.

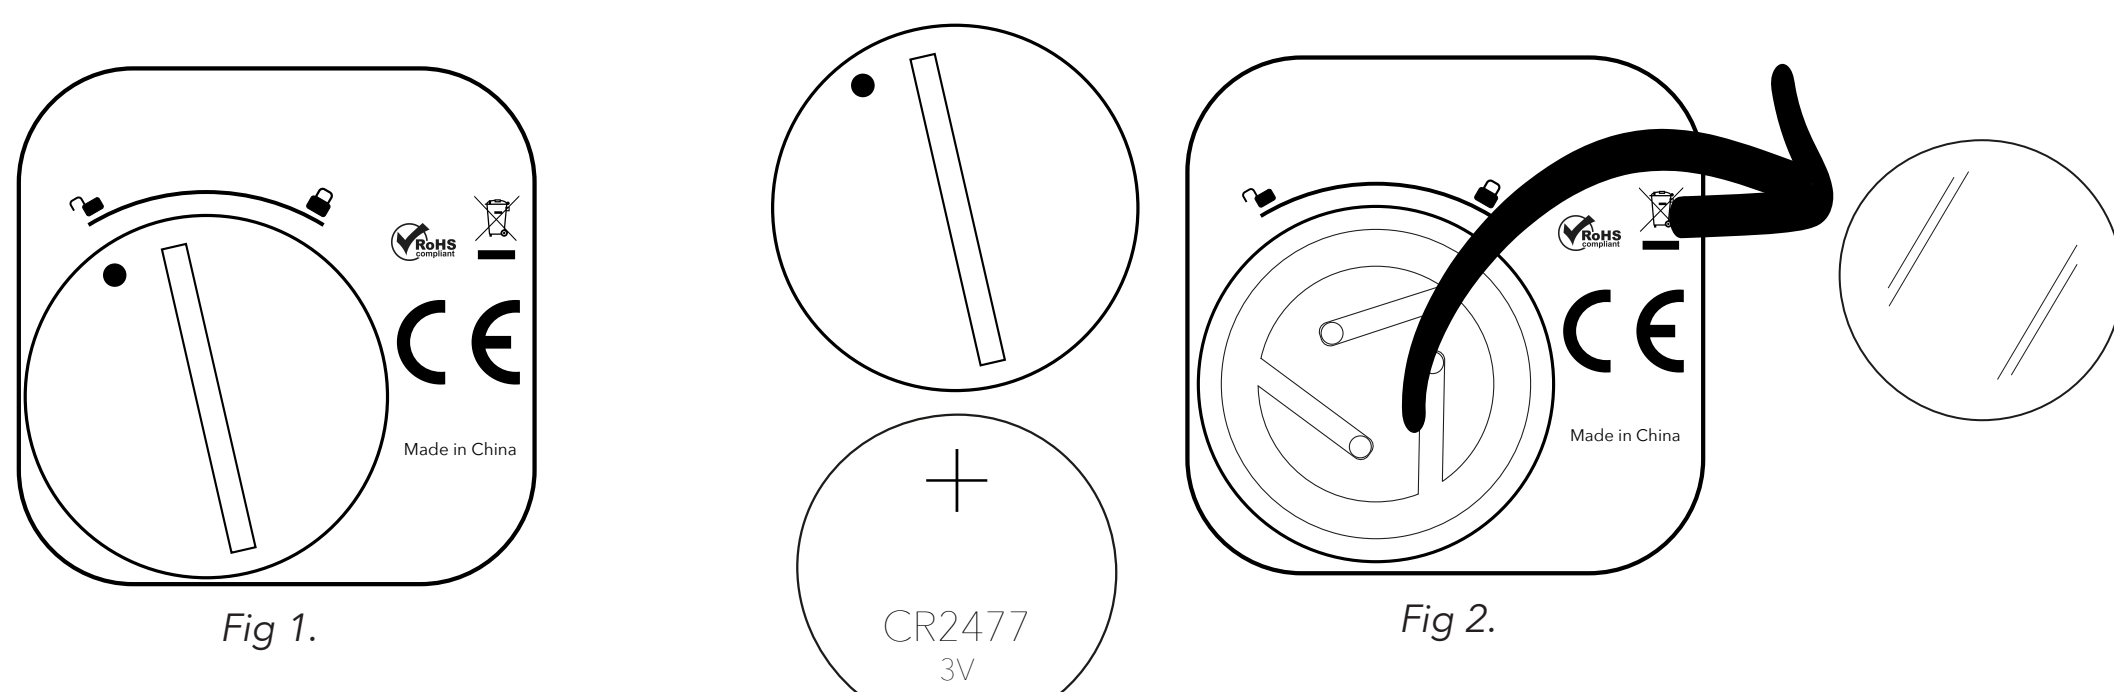


Fig 1.

Fig 2.

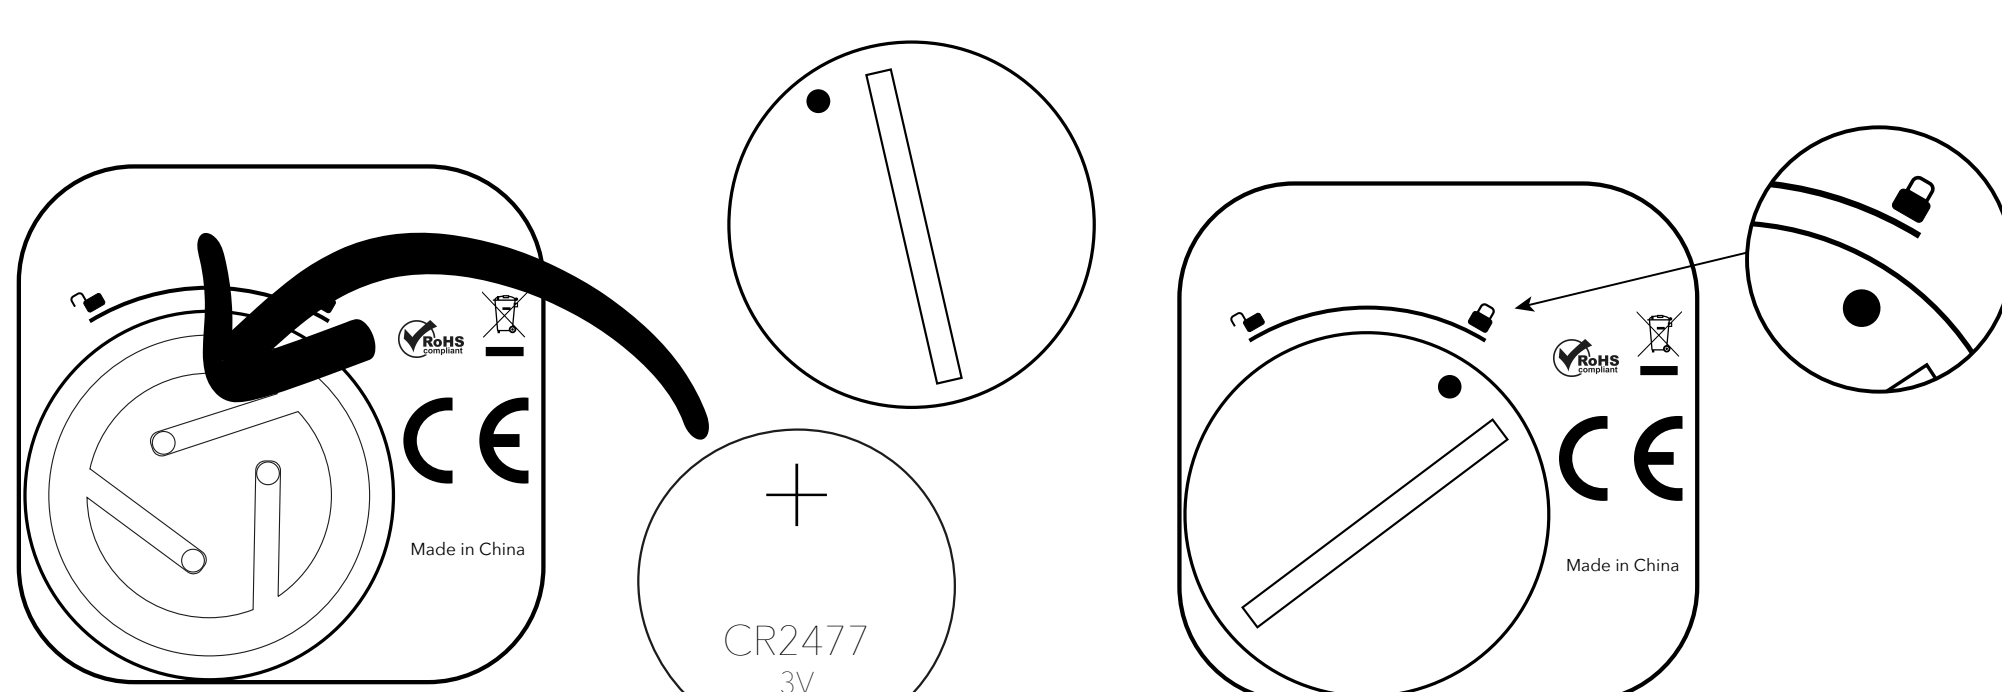


Fig 3.

Fig 4.

For more information on our app, please visit our website at www.parvel.store. For questions or support related issues please contact us at www.parvel.store. Customer support is provided in English.