

Antra™ Screen Position adjustments

Power ON the screen and proceed with caution.

1. To adjust the top mask of the screen when it is fully extended, use the **RED** (or the lower position) dial.





Screen fully UP
position, Rod to Case
distance control dial

Screen fully DOWN
position, Top Mask
control dial




To get less Top Mask: Turn Count-clockwise, try two cycles, roll up the screen back to the case, and extend it again, the Top Mask will decrease. Repeat this until the desired position is set.




To get more Top Mask: Turn Clockwise, the screen will extend further down when the dial is being turned, stop when the desired position is set. **CAUTION!! DO THIS WITH EXTREMELY care, otherwise the screen may drop out of the case!!**

2. To adjust the Rod to Case distance when screen is Fully UP, use the **WHITE(or the UP position)** dial.

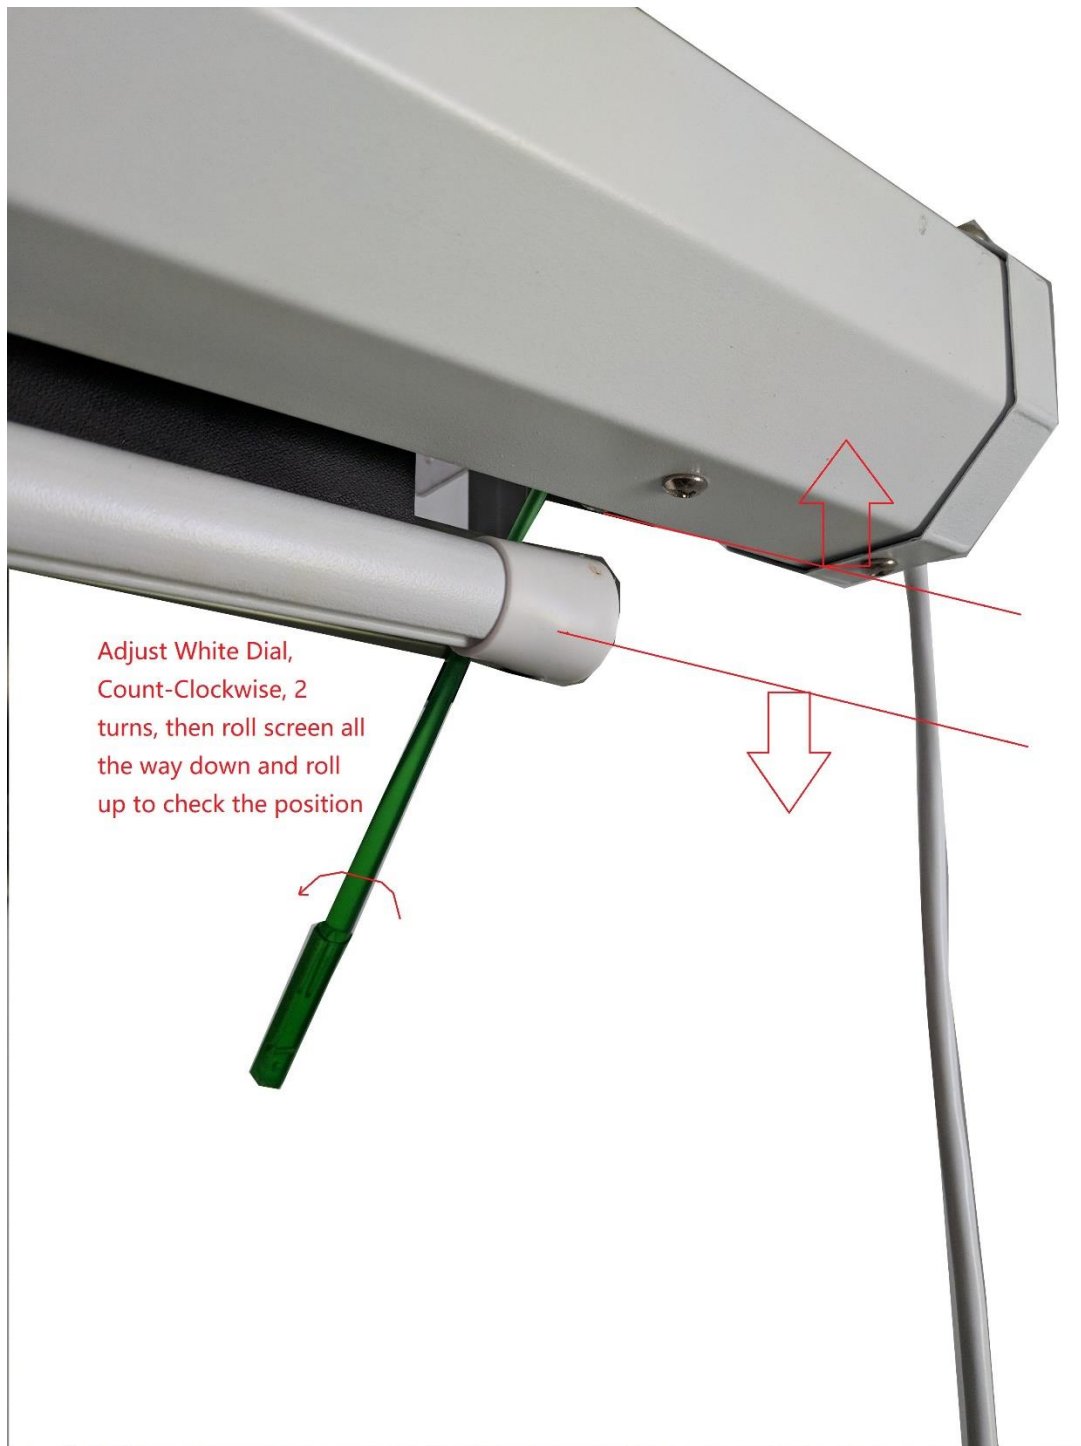

Increase Rod to Case distance: Turn Clockwise 1 cycle, then roll the screen all the way DOWN, then roll the screen all the way UP, check if the Rod to Case Distance increases.

Repeat this until the desired position is set.

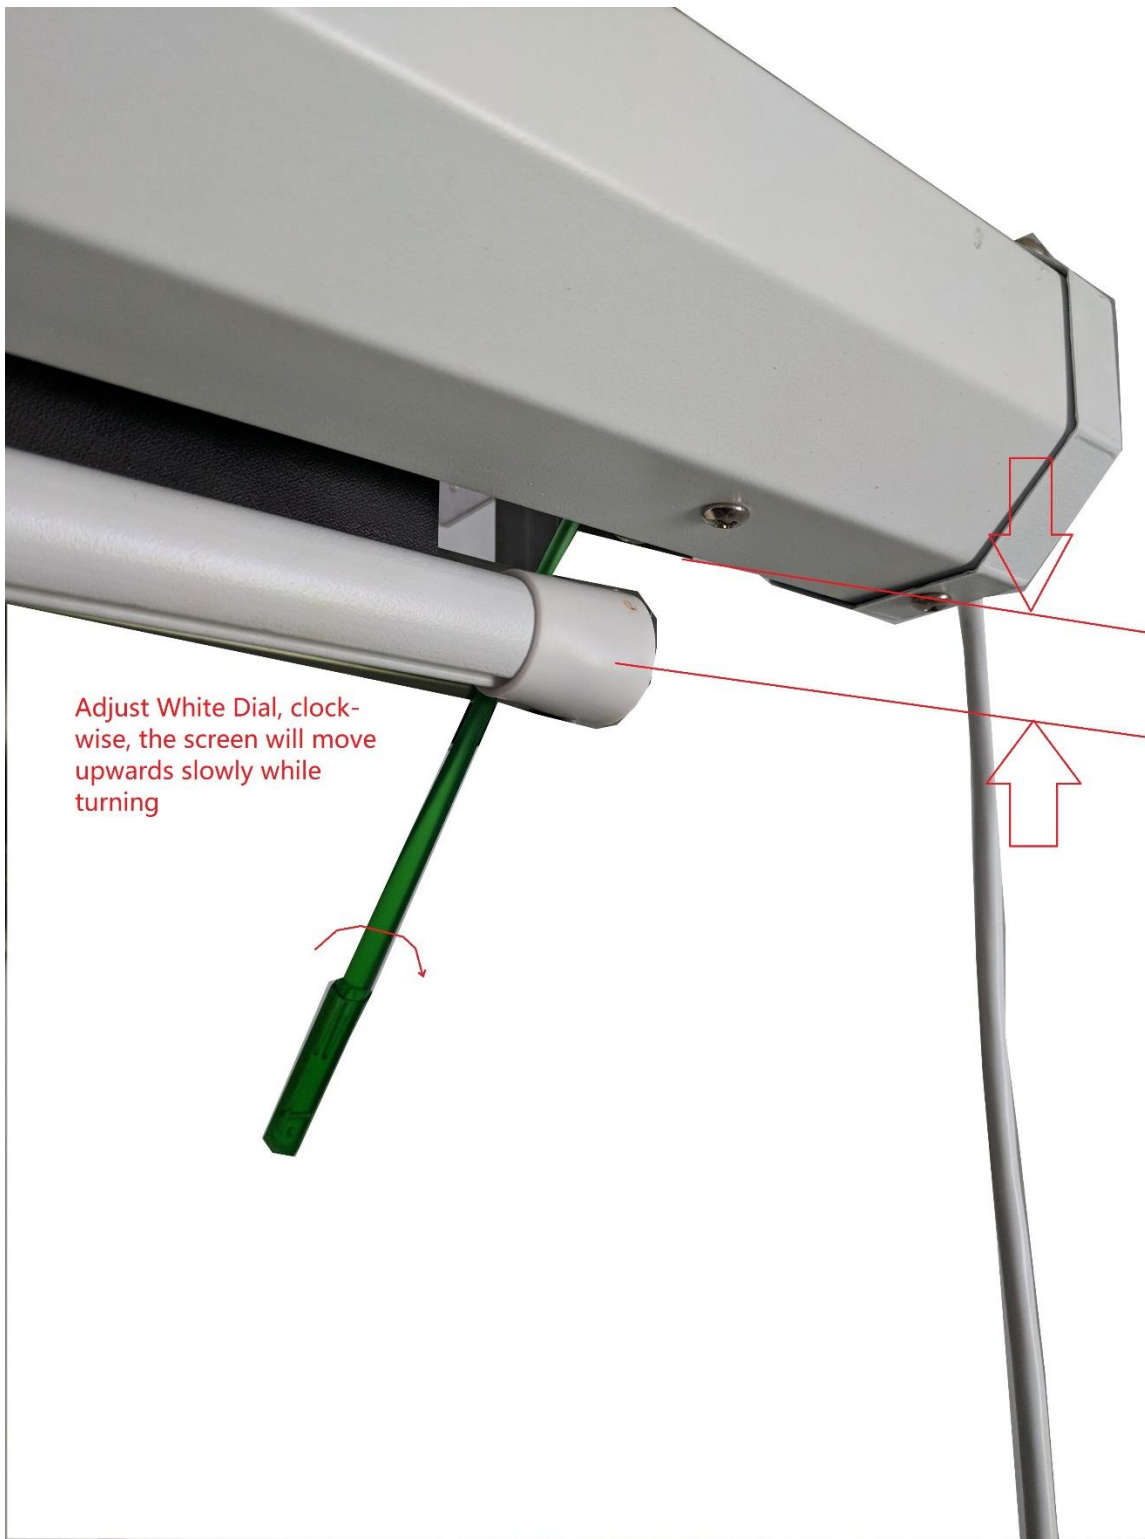

Decrease Rod to Case distance: Turn Count-clockwise slowly, the screen will move up when the dial is being turned, stop when the desired position is set.
CAUTION!!! DO THIS with EXTREME care, the screen may be damaged if the rod is pushed into the screen case. The position will be memorized by the screen once it is set.