

RELAXONCHAIR MK-II BACKREST REPLACEMENT




1. Remove Seating Cushion completely from the massage chair and flip over to the inner side.
Unzip the zipper as shown.




2. After unzipping, you will see innersponge/cushion.
First remove two phillips screws as shown on plastic hard wire case. Once you remove the case, put it aside.

 Plastic Case & Screws

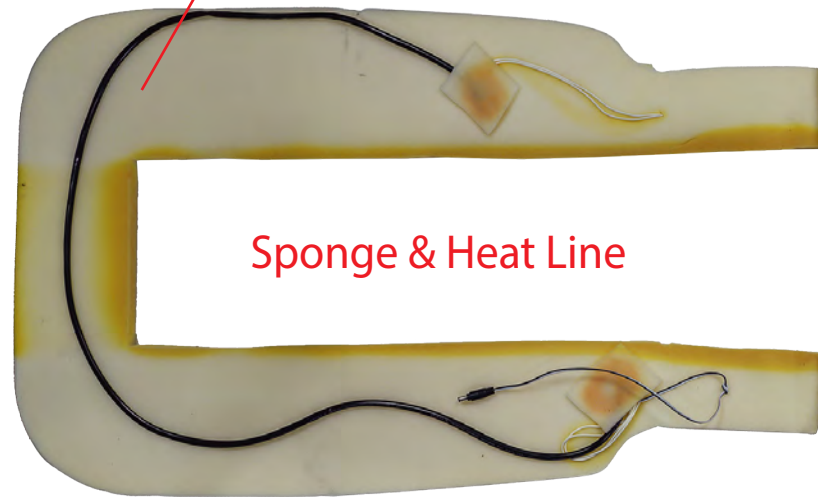


Sponge & Heat Line

3. To remove the back sponge/cushion, you will need to cut 4 black strings with a scissor or knife. Be careful not to cut heating electric wires.

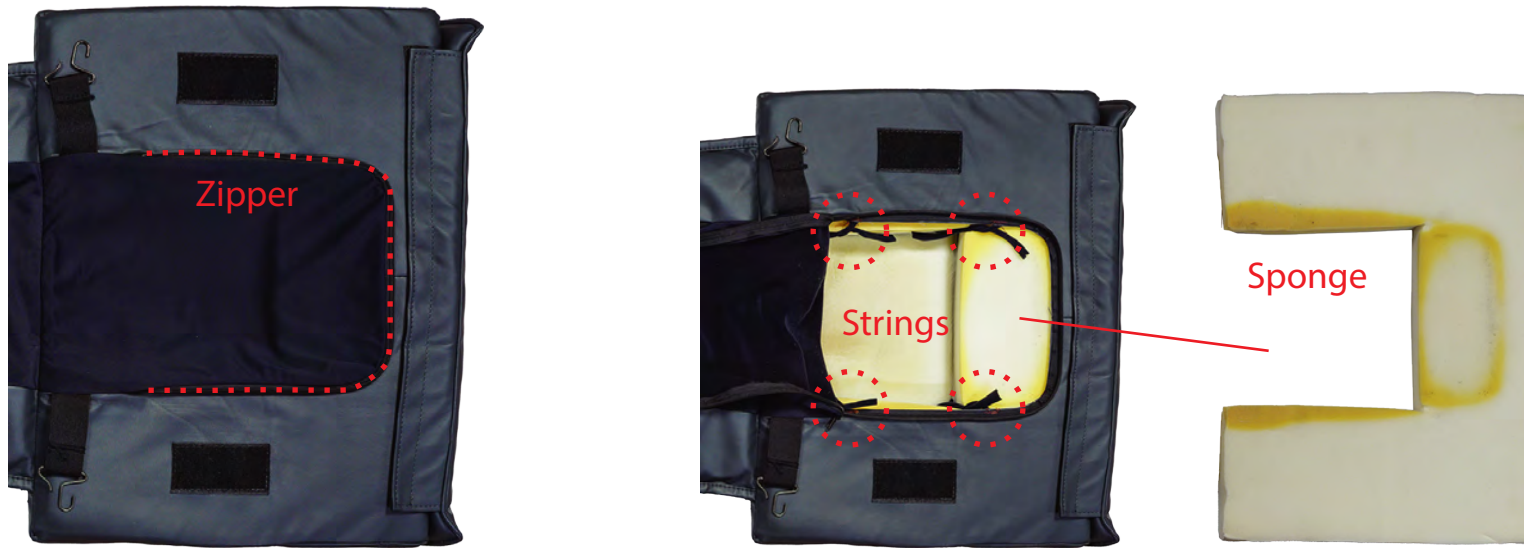

4. For seating area sponge/cushion, untie 4 black straps / strings to remove the sponge/cushion

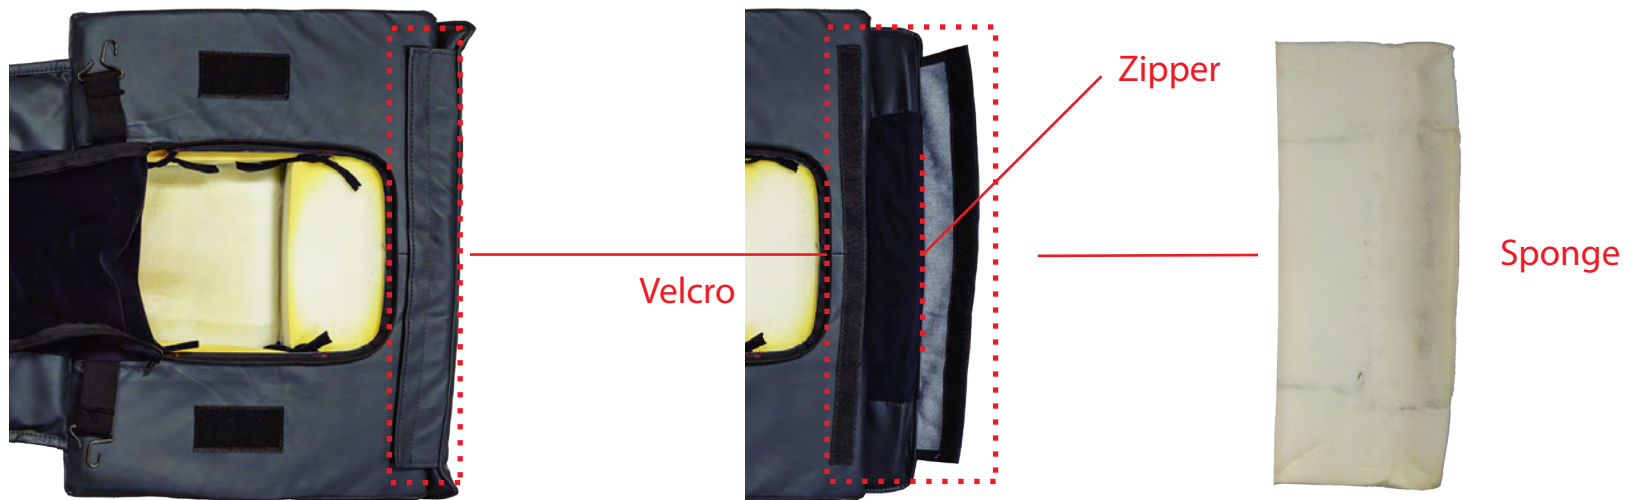

5. At the end of seating area there is another sponge/cushion that you can remove.



New Backrest


6. Put the back sponge/cushion to the new cover. For back side, cut black fabric straps where shown on picture. Then align heating wires in between cut straps and tie the strap to secure heating wires.

7. In about the same spot as the old seating cover, make a little hole by cutting the cover so the heating wire can come out to the back of the seating cushion



8. After heating wire is exposed to the outside of the cover, re-attach the black plastic wire case by securing with two screws.

9. Zip up to finish the back side of the seating cushion.

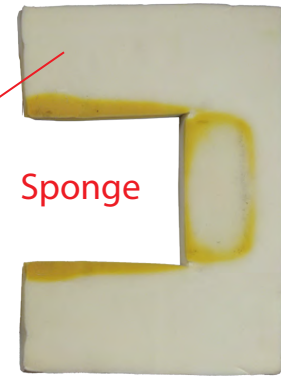

10. Insert sponge/cushion according to the seating portion of the seating cushion, tie the strings and zip up.



11. insert sponge/cushion to the end of seating area to have more cushioning and zip.



12 Re-attach velcro to finish.