



Prodigy (P500, P700, P770) Cup Replacement

Tools

Phillips screw driver
Flat head screw driver

Contact


847.458.2334
support@biobidet.com

This is a guide for replacing the cup for the Prodigy. Follow along to the instructions depending on which part you have that needs replacing instructions. **Bio Bidet By Bemis is not responsible for any damages that result from attempting this repair/replacement at home.** If you do not feel comfortable attempting this repair/replacement, please contact us to obtain an RMA and return the bidet to our service center. ***Be aware that replacing the seat involves wiring***

Before You Begin

- Unplug the bidet
- Turn off the water valve and drain the bidet
- Disconnect the bidet from the water supply and toilet and place on a flat, dry, and well-lit surface

Remove Bidet Seat

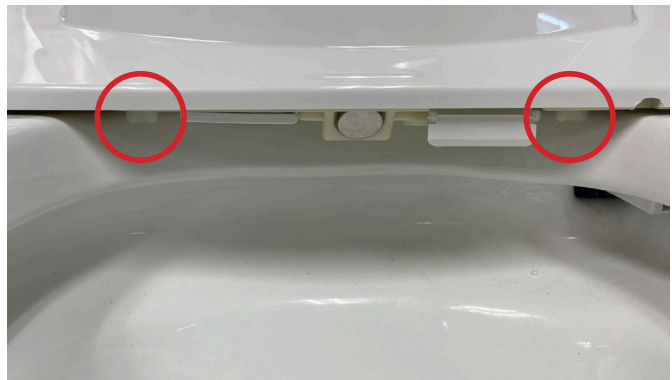

- Please disconnect the bidet toilet from the water supply to before removing the seat.
- Lift the seat up. There are 2 tabs shown in the photo on the right.
- The bidet seat can be removed by pulling the tabs beneath the unit forward from left to right and lifting up.

Unscrew Screw



- Use a phillips screwdriver to take out the screw holding the cup.

Replace Cup




- Slide the metal plate down. There are nudges on the cup and plate.
- Unscrew the old cup and screw on the new cup.
- Slide the metal plate back up to lock with the nudges.

Tighten Screw



- Use a Phillips screwdriver to tighten back the screw holding the metal plate and the new cup.

Reattach Bidet Seat

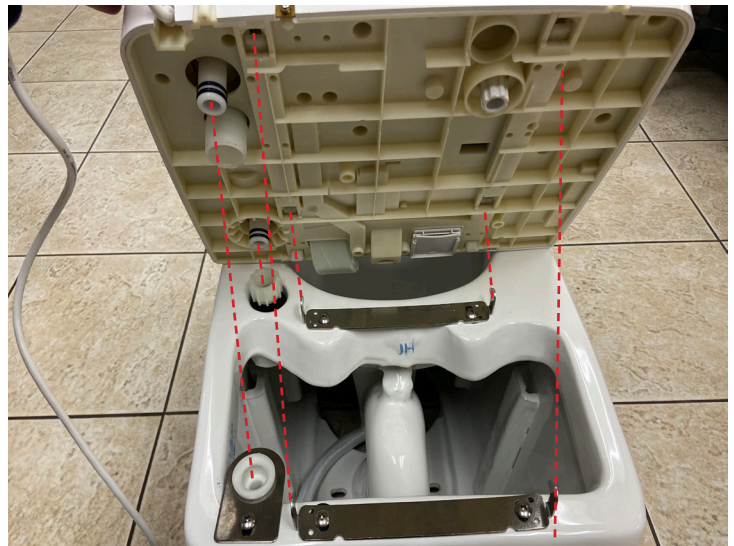

- Attach the bidet seat to the toilet base by lining up the mounting hooks and pressing down from the right side to the left until you hear a “click.”
- When reattaching, hold onto the latches and release when secured.
- There are red guides on the photo for further guidance.
- Your Prodigy should be ready for use!