

WaterCheck[™] Standard / Deluxe SAMPLING INSTRUCTIONS



Please read all of the instructions before starting.



Freeze the blue ice pack. After the blue ice pack has been in your freezer for at least 8 hours, you can collect your water sample from an appropriate water faucet or spigot. If the spout has a strainer or aerator, remove it prior to sampling.








Samples must be shipped the same day they are collected via guaranteed next day delivery and must be collected after 1:00 p.m. EST to minimize time in transit. Do not collect and/or ship your samples on a Friday, Saturday, Sunday, or the day before a National Holiday.

Fill all of the bottles, in order from 1 to 5 as shown in the picture to the right.

Bottle 1; Fill the 500 mL plastic bottle to the shoulder and replace the cap securely.

Bottle 2; Fill the 125 mL square glass bottle to the shoulder and replace the cap securely.

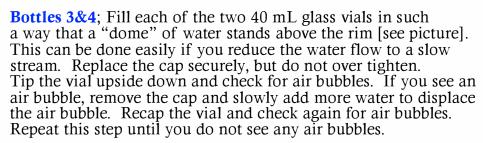

Bottle 5; Before filling this bottle, disinfect the end and inside of the faucet spout using rubbing alcohol. After the faucet spout has been disinfected, flush it by running the water for at least one minute. Remove the red tabbed plastic seal on the 125 mL plastic bottle. Do not touch the inside of the bottle or the inside of the cap. This bottle contains preservative. Do not rinse the preservative out of the bottle. Fill the bottle between the 100 mL and 120 mL fill lines. Do not fill any less or more as this will impact the analysis. [see picture]. Replace the cap securely making sure not to touch the inside of the bottle or the inside of the cap.









Complete the enclosed lab form, making sure to indicate the collection date and time you sampled, type of water, and sample identification (e.g. kitchen sink, well head, etc.) Return the blue ice pack to the kit and place the kit back in the cardboard box with

the completed lab form.





Mational Testing Laboratories, Ltd.	Order Recei	ot - Information a	Sample
	Order Numbe	r	
Quality Water Analysis	Order Daje		
1400+90-7887 (WW-8880-800-00)	Product:	Watercheck	
		oes Tex	
		wa.	
	12	eyrant Nation	
Please cut along the line, an	ample!	portion with your sample.	ie ONLY
Please Return This Portion with Your S 1-800-H2O-TEST Please Print	ample! Samp	portion with your sample. For Laboratory United Number:	ie ONLY
Please Return This Portion with Your S 1-800-H2O-TEST Please Print www.watercheck.com Legibly	amplet Samp	portion with your sample. For Laboratory Unite Number: Received:	ie ONLY
Please Return This Portion with Your S 1-800-H2O-TEST www.walaecheck.com Product: Watercheck	amplet Samp	portion with your sample. For Laboratory United Number:	IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII
Please Return This Portion with Your S 1-800-H2O-TEST Please Print www.watercheck.com Legibly	amplet Samp Date Time	For Laboratory United Number: Received:	IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII
Please Return This Portion with Your 8 1-800-H2O-TEST Please Print Legibly Product: Watercheck Date Sampled:	amplet Samp Date Time Paid:	For Laboratory United Number: Received: Received: Payment Method:	e ONLY
Please Return This Portion with Your S 1-800-HZO-TEST wow washerbeck con Product: Watercheck Date Sampled; Time Sampled; Sample ID or Location: Sample ID or Location:	amplet Samp Date Time Paid: COCKS	Portion with your sample. For Laboratory Ur le Number: Received: Received: Payment Method: eckd: Number: Date:	e ONLY
Please Return This Portion with Your S 1-800-H2O-TEST Please Print Legibly Product: Waterheck Date Sampled; Sample ID or Location:	ample! Samp Date Time Paid: COICH	Portion with your sample. For Laboratory Ur le Number: Received: Received: Payment Method: eckd: Number: Date:	e ONLY
Please Return This Portion with Your S 1-800-HZO-TEST wow washerbeck con Product: Watercheck Date Sampled; Time Sampled; Sample ID or Location: Sample ID or Location:	amplet Samp Date Time Paid: COCKS	Portion with your sample. For Laboratory Ur le Number: Received: Received: Payment Method: eckd: Number: Date:	e ONLY
Please Return This Portion with Your S 1-800-1420-TEST Please Print Legibly Product: Watercheck Date Gamoled: Time Sample to or Location: Sample to or Location: WeterWater Cty Water TreedsFiltered in Hor	amplet Samp Date Time Paid: COCKS	Portion with your sample. For Laboratory Ur le Number: Received: Received: Payment Method: eckd: Number: Date:	e ONLY
Please Return This Portion with Your S 1-800-1420-TEST Please Print Legibly Product: Watercheck Date Gamoled: Time Sample to or Location: Sample to or Location: WeterWater Cty Water TreedsFiltered in Hor	amplet Samp Date Time Paid: COCKS	Portion with your sample. For Laboratory Ur le Number: Received: Received: Payment Method: eckd: Number: Date:	e ONLY
Please Return This Portion with Your S 1-800-1420-TEST Please Print Legibly Product: Watercheck Date Gamoled: Time Sample to or Location: Sample to or Location: WeterWater Cty Water TreedsFiltered in Hor	ample! Samp Date Time Paid: COOk	For Laboratory United Number: Received: Received: Received: Received: Payment Method: Number: Date: To:	e ONLY
Please Return This Portion with Your S 1-800-1420-TEST Please Print Legibly Product: Watercheck Date Gamoled: Time Sample to or Location: Sample to or Location: WeterWater Cty Water TreedsFiltered in Hor	ample! Samp Date Time Paid: COOk	Portion with your sample. For Laboratory Ur le Number: Received: Received: Payment Method: eckd: Number: Date:	e ONLY



WaterCheck[™] Standard / Deluxe SAMPLING INSTRUCTIONS



Make arrangements to ship the kit by guaranteed next day delivery [or drop the kit off at our laboratory within 24 hours of collection, Monday to Friday, 8:30 am to 5:00 pm] to the following address:

National Testing Laboratories 556 South Mansfield Street Ypsilanti, MI 48197

If we do not receive your sample within 24 hours of sample collection or if you have not provided the date and time of collection, the bacteria results will be marked **INVALID!**

Save Money on Overnight Shipping!

Take advantage of drastically reduced overnight shipping rates by purchasing United Parcel Service labels from National Testing Laboratories.

Call a Technical Sales Representative for details at **800-458-3330**.



NOTE: Testing & reporting takes approximately 5-10 business days. Heavily contaminated samples may take longer to process. Turnaround time can vary due to laboratory volume. Results

will be emailed upon completion.

NOTE: The lab reserves the right to reject water samples that appear to be excessively contaminated

as they may cause potential damage to laboratory equipment.

If you have any questions regarding this WaterCheck[™] Standard or WaterCheck[™] Deluxe Test or any other services we provide, please contact a Technical Service Representative at National Testing Laboratories at 1-800-458-3330 for assistance.

Thank you for choosing National Testing Laboratories, Ltd. for your water testing services!