



Scan for full manual

## MegaEdge Quick Start Guide

This guide helps you install and use your **MegaEdge** for the first time.



Go to [www.kramerav.com/downloads/MegaEdge](http://www.kramerav.com/downloads/MegaEdge) to download the latest user manual and check if firmware upgrades are available.




### Step 1: Check what's in the box

- ✓ **MegaEdge Secure Portable Power Supply**
- ✓ **Retractable AC Power Cord Reel**
- ✓ **1 T20 Torx bit**
- ✓ **2 T20 Torx security screws**
- ✓ **4 4x1/2" screws**
- ✓ **1 Quick start guide**

### Step 2: Get to know your MegaEdge

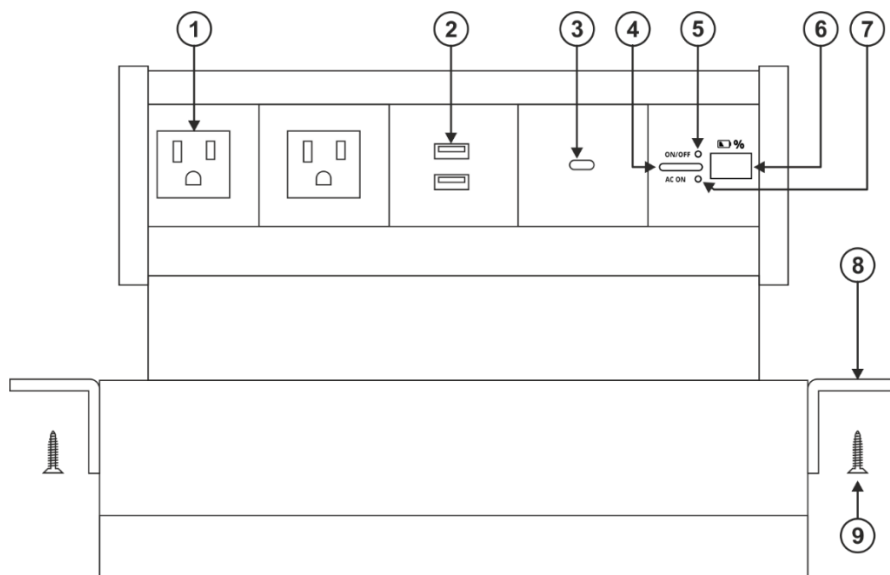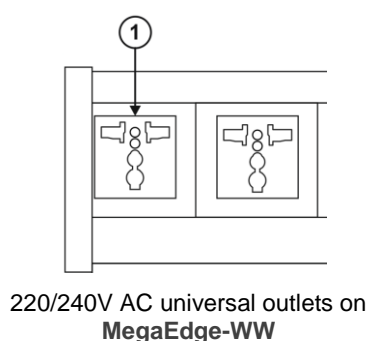MegaEdge-US




#	Feature	MegaEdge-US Function	MegaEdge-WW Function
1	AC Power Connector (x2)	Connect to up to two 120V AC power consuming devices simultaneously.	Connect to up to two 220/240V AC power consuming devices simultaneously.
		 When a single power socket is connected, consumption should not exceed 5A. When both power sockets are connected, the total consumption should not exceed 6A.	
2	5V-2A USB Fast Charging Port (x2)	Use to charge a mobile device.	
3	USB-C	Use to charge a mobile device.	
4	Control Button	Short press to turn <b>MegaEdge</b> On. Once on, each additional short press toggles <b>MegaEdge</b> AC power outlets On/Off  <b>MegaEdge</b> consumes some power when the AC power indicator is on even when no devices are connected to it. Long press to turn <b>MegaEdge</b> Off.	
5	Power On Indicator LED	Lights blue when <b>MegaEdge</b> is on.	
6	Numeric LED Display	Indicates percent of power remaining.	
7	AC Indicator LED	Lights red when AC power enabled.  USB DC power is always on when <b>MegaEdge</b> is on.	
8	Mounting Bracket	Used with security screw for securing the <b>MegaEdge</b> to the table.	
9	Security Screw (2)	For securing the <b>MegaEdge</b> to the table.	

## Step 3: Install MegaEdge


### Install MegaEdge

1. Carefully place **MegaEdge** over the edge of a table at the desired location so that the table edge is pressed against the device.
2. Secure **MegaEdge** to the table using the Torx bit and the two security screws provided.
3. Tighten each security screw through the **MegaEdge** mounting bracket into the table.

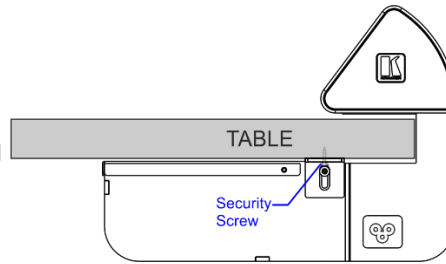

### Install Retractable AC Power Cord Reel

1. Attach the Reel Mounting Bracket under the table using the four screws (provided) so that the Retractable AC Power Cord Reel's fixed plug can easily reach the **MegaEdge** AC socket (less than 50cm distance).
2. Press the Retractable AC Power Cord Reel to the Reel Mounting Bracket and rotate clockwise until you hear a click.
3. Plug the Retractable AC Power Cord Reel's fixed plug into **MegaEdge**.

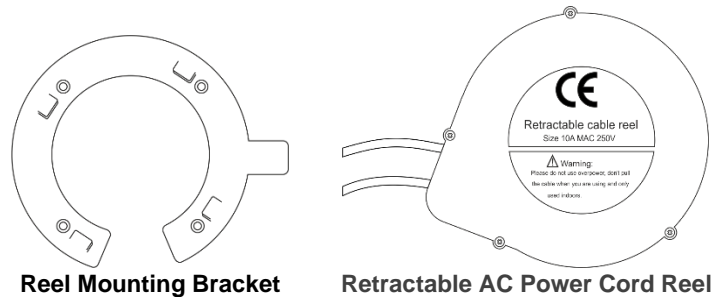

## Step 4: Connect power

To fully charge **MegaEdge**, connect the **Retractable AC Power Cord Reel** power cord to the mains electricity for at least 8 hours.

Safety Instructions (See [www.kramerav.com](http://www.kramerav.com) for updated safety information)



#### Caution:

- There are no operator serviceable parts inside the unit.

#### Warning:

- Use only the power cord that is supplied with the unit.
- Disconnect the power and unplug the unit from the wall before installing.
- Do not open the unit. High voltages can cause electrical shock! Servicing by qualified personnel only.
- To ensure continuous risk protection, replace fuses only according to the rating specified on the product label which located on the bottom of the unit.

## Step 5: Operate MegaEdge

### To Turn MegaEdge On

- Press the Control button.
- Power On LED lights blue.

### To Turn MegaEdge Off

- Press the Control button for 3 seconds.
- Power On LED is no longer lit.

### To Toggle AC Power On/Off

- Press the Control button to toggle between AC power On and AC power Off
- AC LED is lit red when AC is on.



**MegaEdge** consumes some power when the AC power indicator is on even when no devices are connected to the AC.



When no power is being used, **MegaEdge** powers off automatically after 1 minute.

### To Charge MegaEdge

When not in use, extend the AC plug from the **Retractable AC Power Cord Reel** and plug it into an AC outlet for at least 8 hours to fully charge the **MegaEdge**.