




Vision, Siren and Strobe

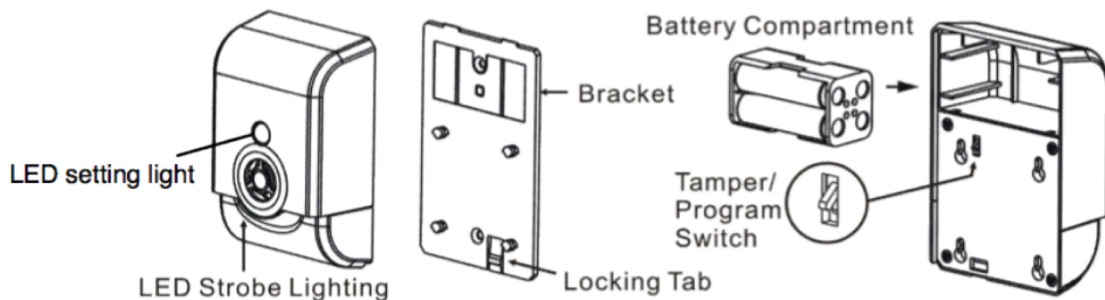

Programming with your Constellation Connect Hub

1. Enter the device wizard on your mobile app or online account
2. Select Vision, Siren & Strobe from the list of available devices
3. Remove the bracket from the siren by pressing the locking tab on the Siren & Strobe and then gently slide up the siren
4. Insert the batteries into the Siren & Strobe
5. Follow the in-app or online account instructions to begin the pairing process with the Constellation Connect Hub
6. Push the tamper switch for at least one second and release
7. **IMPORTANT:** Before attaching the back cover to the main body, attach the mounting plate to the wall using the double sided tape or hardware included
8. Attach the back cover to the main body by sliding it into place until the locking tab clicks in place
9. The LED should go off indicating that it is properly closed
10. Your Siren & Strobe device is successfully connected to your Constellation Connect Hub and will appear as a device in the device list
11. (Optional) Follow the online or in-app instructions to name your Siren & Strobe and assign it to a room

Important operating instructions

1. During normal operation, the LED light will not be on
2. The Vision, Siren & Strobe device is extremely loud, please do not place near your ear when you test
3. The unit is operated by 1.5V AA batteries only

For additional information, please contact us

Constellation Connect Support | 1.888.918.7128 | support@constellationconnect.com |
constellationconnect.com/contact