


# MATTRESS FIRM®

# 900 - 0

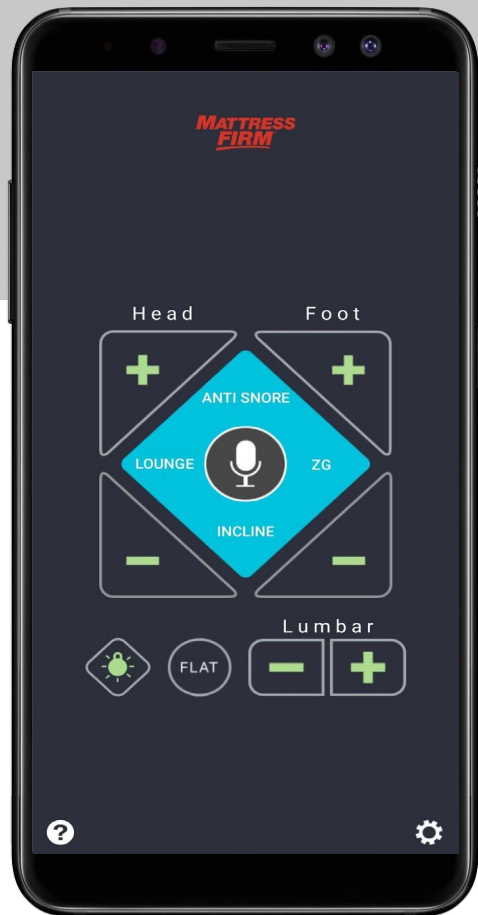

## MOBILE APP GUIDE

Android App: [View on Google Play](#)

iOS App: [View on App Store](#)

# Using the MATTRESS FIRM 900-O mobile app

---

Your adjustable bed can be controlled using your iOS or Android smart device through the **MATTRESS FIRM 900-O** mobile app.

Before connecting your bed to the mobile app, do the following:

- Make sure your adjustable bed is plugged into a working electrical outlet and the control box is on.
- Download and install the Mattress Firm 900-O mobile app from the App Store® or the Google Play Store™.
- For iOS users, turn on your device's Bluetooth®. For Android users, turn on your device's Bluetooth® and Location settings.



# Connecting to your adjustable bed

---

Follow steps 1 to 3 to connect your adjustable bed to the mobile app.

1. If you are connecting your adjustable bed to the mobile app for the first time, enable the mobile device pairing mode on your adjustable bed's control box.


Unplug the power cord from the outlet and then plug it back in. The LED light on the control box turns blue. After 20 seconds or after being operated by a paired remote control, the LED light turns green and the control box enters mobile device pairing mode.

**NOTE:** The control box stays in mobile device pairing mode for 60 seconds and the name of your adjustable bed is now visible on the app. Proceed to step 2 to connect the app to your adjustable bed.





*Unplug the power cord, and then plug it back in.*

# Connecting to your adjustable bed

- From your mobile device, launch the app, and then tap the gear  icon to go to the **Settings** screen.
- From the Devices list, select the name of your adjustable bed. The name of your adjustable bed is on the sticker on the front cover of the Owner's Manual and on the bed's control box.

## NOTE:


- If your bed is not on the Devices list, make sure your bed is in mobile device pairing mode. See step 1 for options to enable the mobile device pairing mode on your bed's control box.
- You can only connect one smart device to one adjustable bed at a time.
- The bed is automatically disconnected from the app when you close the app (not running in the background) or move out of range of the connection. Repeat steps 2 and 3 to reconnect the bed to the app.

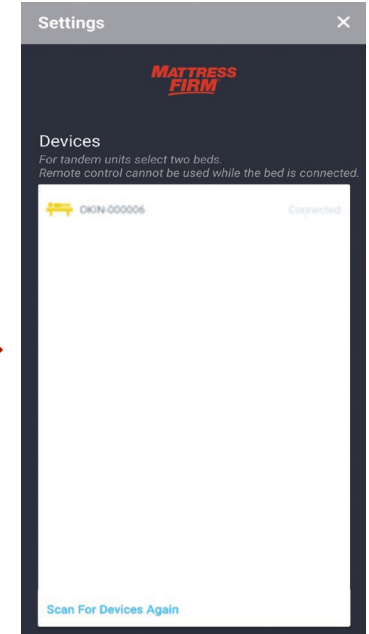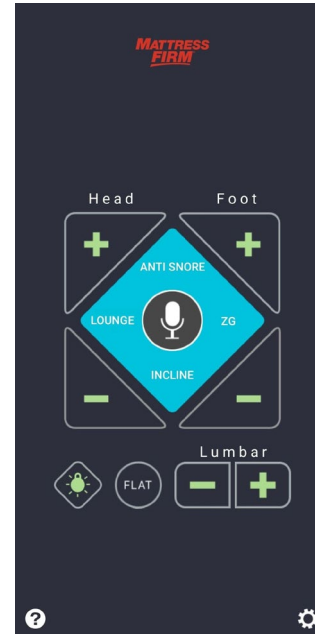

Sample sticker with the name of your adjustable bed.

# Controlling the head, lumbar, or foot sections

---

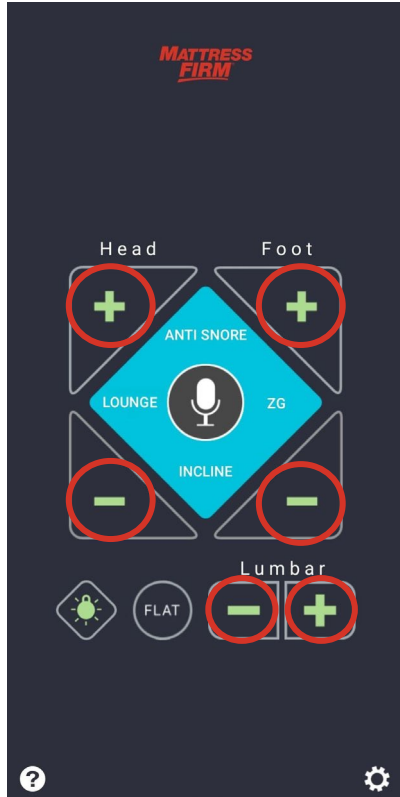

Tap and hold the up ( + ) or down ( - ) button for each section of your bed to raise or lower them.


To control the head, lumbar, or foot sections using voice commands, tap the microphone button in the center of the screen.

**NOTE:** The Voice Commands List can be found on page 10.

To switch between the screens of your app, swipe left or right.

# Controlling the bed presets

---

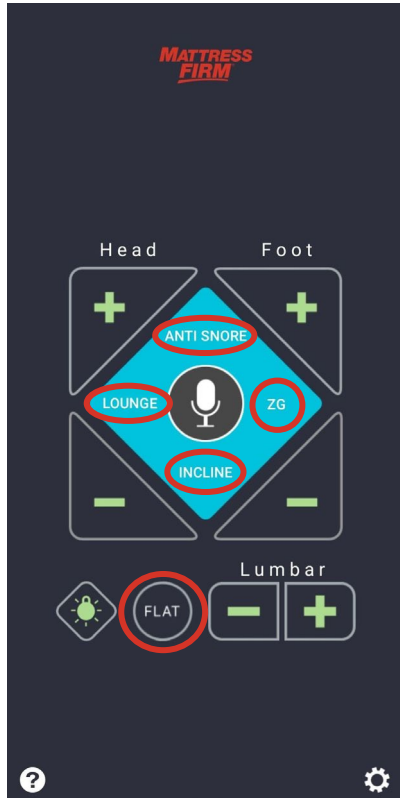

Tap the button of the preset you want to activate. The preset buttons are ANTI SNORE, LOUNGE, ZG (ZERO GRAVITY), INCLINE, and FLAT.

To customize the presets, set your bed frame to the desired position then press and hold the FLAT button and the preset button for 2.5 seconds.

#### NOTES:

- You can only customize the Lounge, Incline, and Zero Gravity presets.
- To restore the preset positions back to factory settings, reset the system using the remote control. For more information, see the "Resetting your system" topic in the Owner's Manual.


To activate the presets using voice commands, tap the microphone button in the center of the screen.

**NOTE:** The Voice Commands List can be found on page 10.

To switch between the screens of your app, swipe left or right.

# Controlling the massage function

---

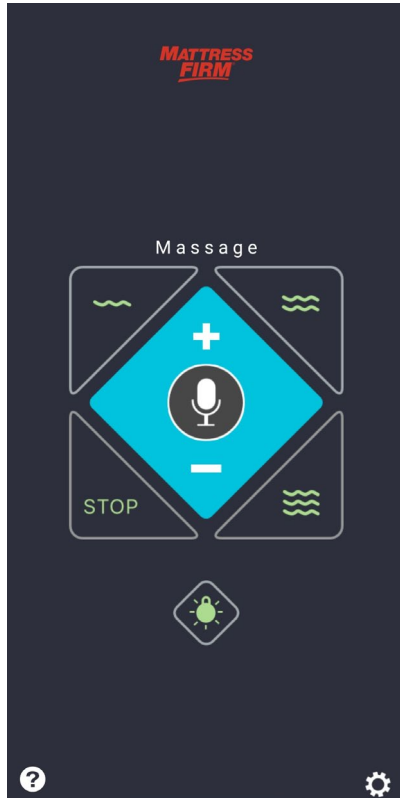

Tap and hold the ( + ) or ( - ) buttons for the head or foot section of your adjustable bed to activate and adjust the intensity of your massage.

To change the different massage feels, tap any of the wave buttons.



To turn off any active massage, tap the **STOP** button.

To control the massage feature using voice commands, tap the microphone button in the center of the screen.

**NOTE:** The Voice Commands list can be found on page 10.

To switch between the screens of your app, swipe left or right.

# Controlling the under-bed lights

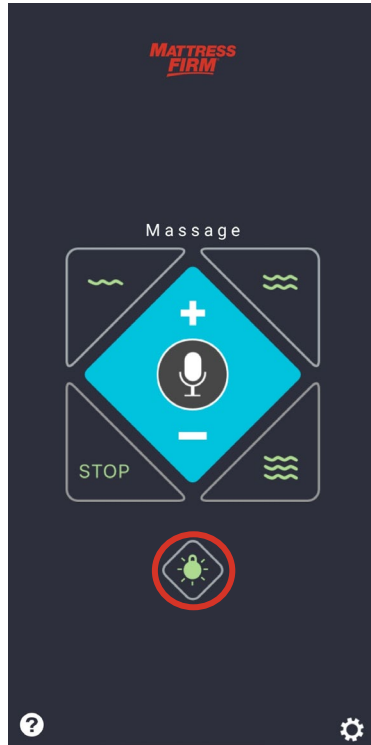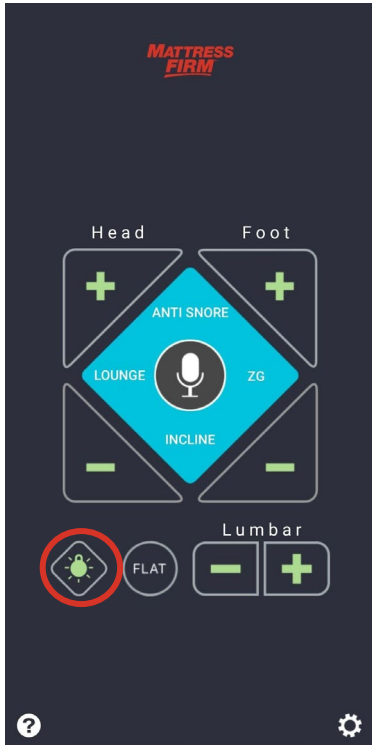

Tap the light button to turn the under-bed light on.

Your under-bed light has seven (7) different colors to choose from. To change the color of your under-bed light, tap the button when the light is on. To select another color, tap the button again.

To turn off the under-bed light, tap and hold the light button for 2.5 seconds.

To activate the under-bed light using voice commands, tap the microphone button in the center of the screen.

**NOTE:** The Voice Commands List can be found on page 10.

To switch between the screens of your app, swipe left or right.



# Controlling two adjustable beds in tandem

---

Before operating beds in tandem using the mobile app, do the following:

- Make sure both beds are plugged into working electrical outlets.
- Make sure both beds are in a flat position to align them properly.

1. Connect the sync cable to the SYNC port on the control box of both adjustable beds.
2. Connect the mobile app to either one of the beds.

As long as both adjustable beds are connected with the sync cable, you can operate both beds in tandem using only one mobile device.



*Connect the sync cable to the control box on both beds to operate them in tandem mode using the mobile app.*



# Voice Command List

To activate the functions of your adjustable bed using voice commands, tap the microphone button in the center of your screen.

A message prompts you to say the voice command. If the command is correct, the message disappears and the bed adjusts accordingly. If the command is incorrect, a pop-up appears prompting you to speak the correct command. To dismiss the prompt after an incorrect command, tap anywhere outside the message. Tap the microphone button again to give the correct voice command.

**NOTE:** Make sure to speak the exact phrases in the list below for the adjustable bed to function properly according to the command.

**Head Up** - Raises the head section.

**Head Down** - Lowers the head section.

**Lumbar Up** - Raises the lumbar section.

**Lumbar Down** - Lowers the lumbar section.

**Foot Up** - Raises the foot section.

**Foot Down** - Lowers the foot section.

**Stop** - Stops all lift activities.

**Lounge** - Activates the Lounge preset position.

**Zero Gravity** - Activates the Zero Gravity preset position.

**Anti-Snore** - Activates the Anti-Snore position.

**Incline** - Activates the Incline position.

**Flat** - Activates the Flat position.

**Massage On** - Turns massage on with massage wave 1.

**Wave One** - Starts massage wave 1.

**Wave Two** - Starts massage wave 2.

**Wave Three** - Starts massage wave 3.

**Massage Off** - Turns massage motors off.

**Light On / Lights On** - Turns the under-bed light on.

**Toggle Lights** - Toggle thru the 7 under-bed light colors.

**Light Off / Lights Off** - Turns the under-bed light Off.

# MATTRESS FIRM®

FOR ASSISTANCE, PLEASE CALL OUR  
CUSTOMER SERVICE TOLL FREE NUMBER

1-843-800-8372

POWERED BY CUSTOMATIC® TECHNOLOGIES™

*All product names, brands, and trademarks are the property of their respective owners.*

MANSQ10AG001 | AWMANSQ10AG-2 | 03.25.2021