




# rize Remedy

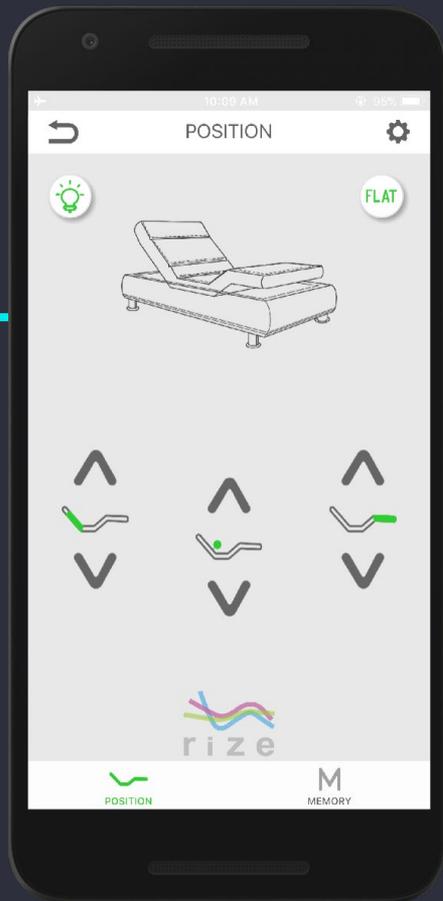


Control your adjustable bed with  
your smart device using the  
remote mobile app

Android App: [View on Google Play](#)

iOS App: [View on App Store](#)

# Connecting to your adjustable bed

1. Enable pairing mode on your bed's control box.
2. Launch the app. Tap the gear icon to go to the Settings screen.
3. Tap **Connect to a bed**.
4. From the list of available devices, select your adjustable bed.

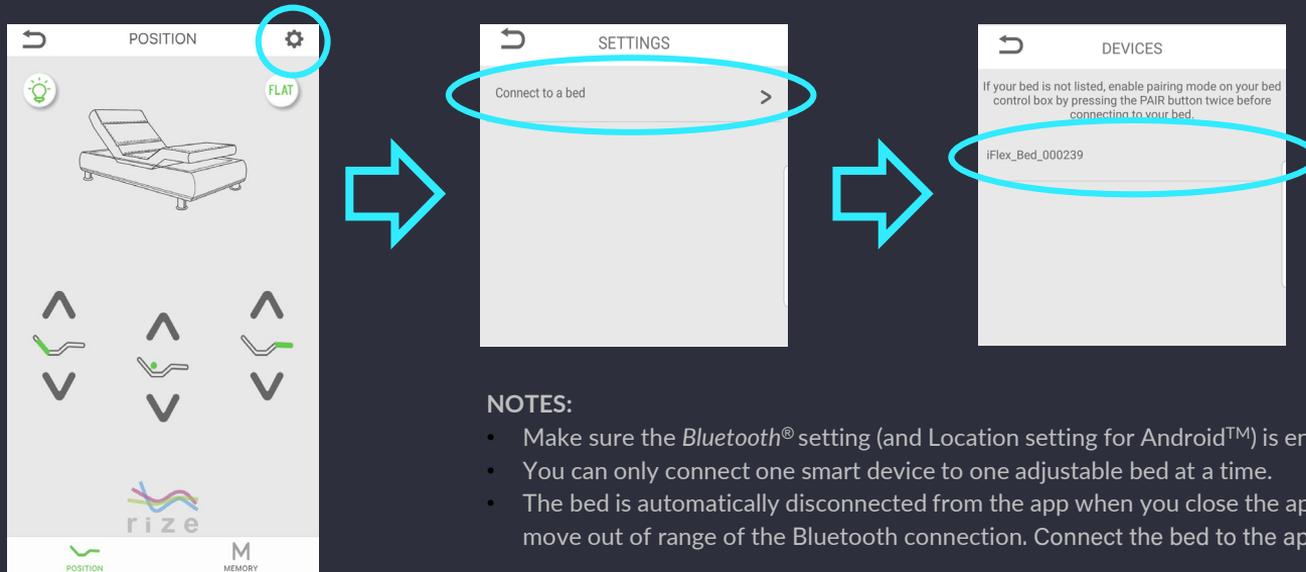


## NOTES:

- Make sure the *Bluetooth*<sup>®</sup> setting (and Location setting for Android<sup>™</sup>) is enabled.
- You can only connect one smart device to one adjustable bed at a time.
- The bed is automatically disconnected from the app when you close the app (not running in the background) or move out of range of the Bluetooth connection. Connect the bed to the app again.


# Changing your bed's name

1. After connecting the app to your bed, tap the gear icon to go to the Settings screen.
2. Tap **Device Name**, and then enter the name you want for your bed.
3. Tap **OK** to save your new bed name.

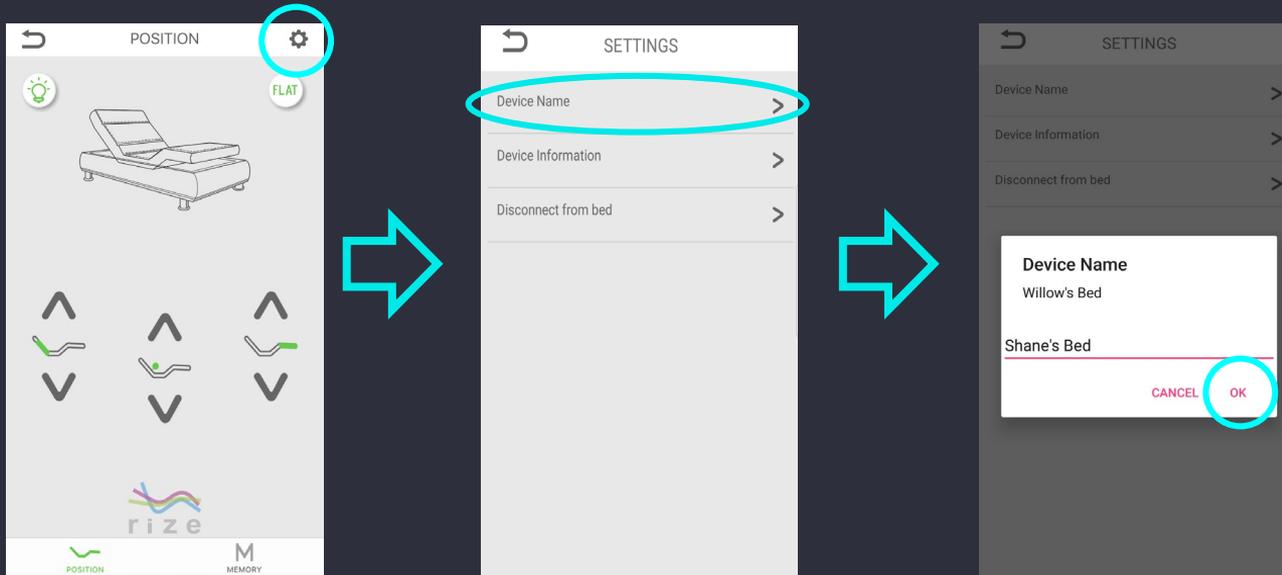


# Disconnecting from your adjustable bed

1. Tap the gear icon to go to the Settings screen.
2. Tap **Disconnect from bed**.

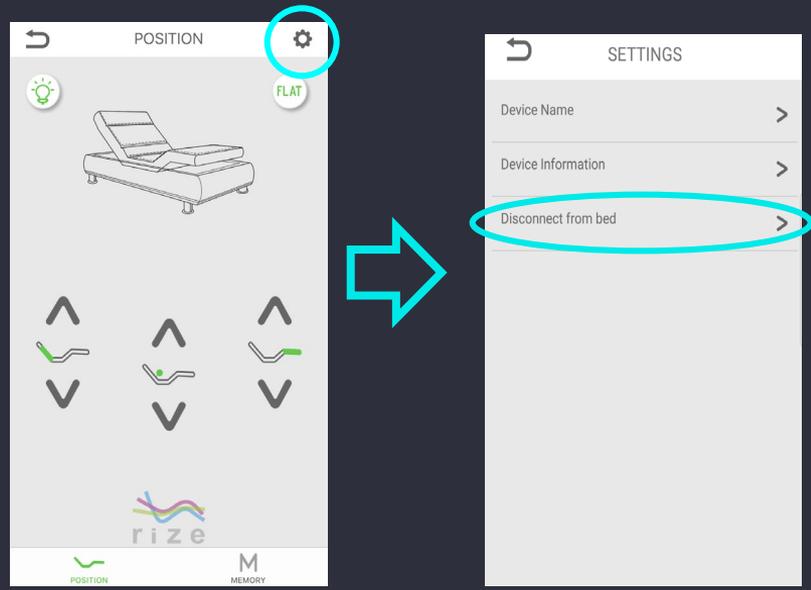


# Controlling the head, lumbar, or foot sections

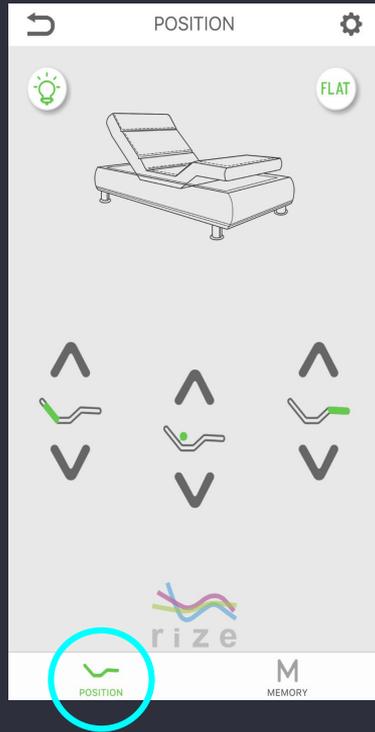

To access the head and foot lift controls, tap the **Position** icon to go to the Position screen.

Tap and hold the up (▲) or down (▼) icons for each section of your bed to raise or lower them.

# Controlling the bed memory presets

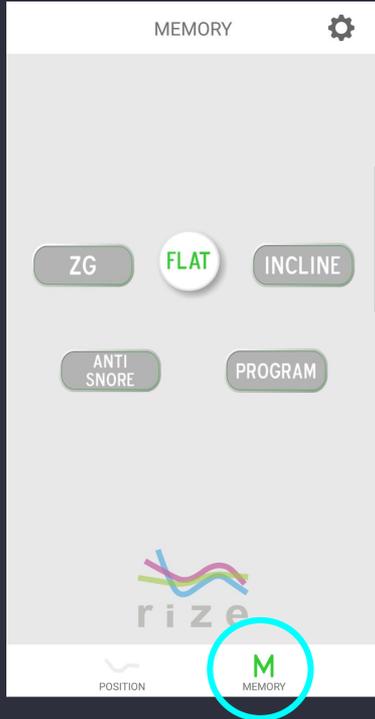

To access the memory preset controls, tap the **Memory** icon to go to the Memory screen.


To activate your bed's presets, tap the preset that you want to use.

To customize the presets, adjust your bed to the desired position then tap and hold the preset and the **PROGRAM** buttons for 2.5 seconds.

**NOTE:** You can only customize the Incline and Zero Gravity presets.

To reset the preset positions back to factory settings, hold the **FLAT** and **PROGRAM** buttons for 2.5 seconds.

# Controlling the underbed lights

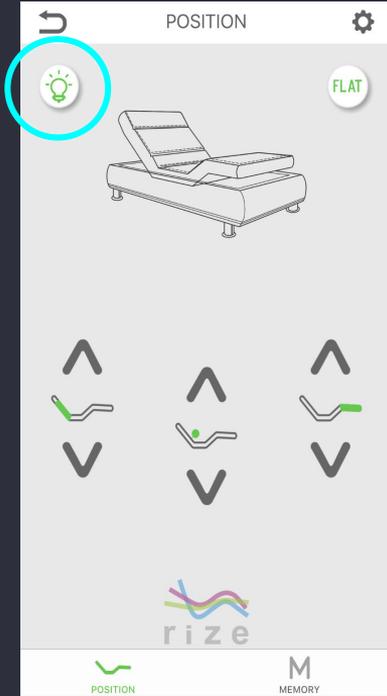


To access the underbed lights control, tap the **Position** tab to go to the Position screen.

To turn your underbed lights on, tap the light button.

To turn your underbed lights off, tap the light button again.

# Controlling two adjustable beds in tandem

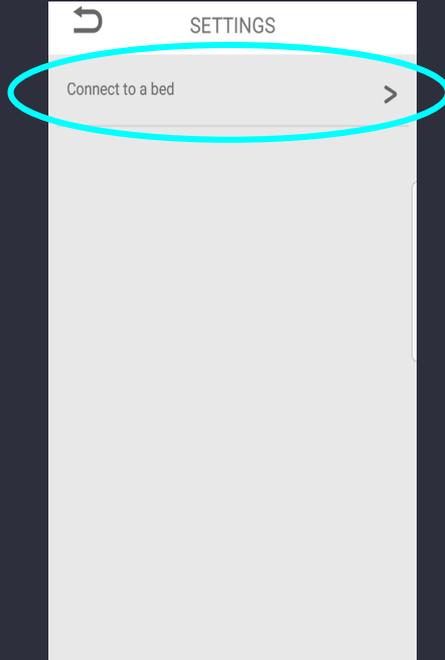

Connect one of the adjustable beds to the app.

Connect the adjustable bed to the second bed with a sync cable. For more information, see the “Synchronizing two beds for tandem operation” topic on your Owner’s Manual.

Once the beds are connected together via the sync cable, you can now control them in tandem using the app.



FOR ASSISTANCE, PLEASE CALL OUR  
CUSTOMER SERVICE TOLL FREE NUMBER

1-843-800-8372

POWERED BY CUSTOMATIC® TECHNOLOGIES™

*All product names, brands, and trademarks are the property of their respective owners.*