


Locating the DIP Switches

Open the battery compartment of the new Order Taker and of a working Order Taker and remove their batteries.


The DIP Switches are located just inside the battery compartment. They will be small white tabs in a black plastic housing. You should see a row of 4 switches with another row of 8 below it.



DIP Switch Basics 101

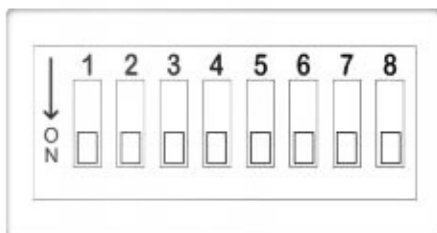

This is a 8-position DIP switch, the individual switches slide Up for "OFF" or remain Down for "ON". A small screwdriver or paperclip should be used to slide them.

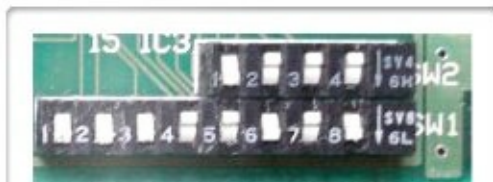

This is a close-up of the DIP Switches in your HME 2000 Order Taker.

Setting the Switches

Compare the DIP switch settings of the new Order Taker and of the working Order Taker

If they are different, change the DIP switch settings of the new unit to match the settings of the working unit.

Be certain the switches are adjusted fully to the ON or OFF position.

