

HOVER-1 ROCKER Quick Start Guide

Always wear a properly fitted helmet that complies with CPSC or CE safety standards when you ride your scooter.




Correct Fitting:
Make sure your helmet covers your forehead.

What's In The Box?

Hover-1 Rocker • Wall Charger • Operation Manual/
Quick Start Guide


Riding Your Rocker

Stay relaxed and step on quickly, confidently and evenly. Imagine climbing stairs, one foot, then the other. Look up once your feet are even. The Rocker may vibrate or spin in one direction, if weight and pressure are applied to only one foot mat. THIS IS NORMAL.

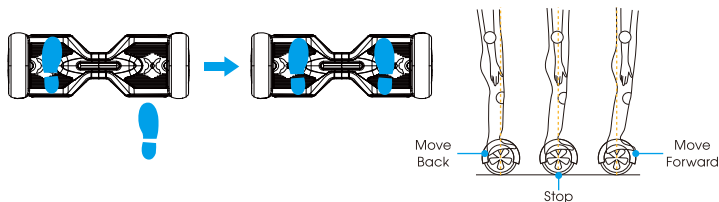

Charging Your Rocker

Turn Off Your
Hover-1 Rocker



Plug the charger into
the charge port



(Located In The Back)



Calibration

1. Place the Rocker on a flat surface.
2. Press and hold the ON/OFF button for a total of 15 seconds.
3. The Rocker will turn on, lighting the battery indicator on the board.
4. After the light flashes 5 times, release the ON/OFF button
5. Turn the board off and then back on. The calibration will now be complete.



**** IMPORTANT ****

**Retain this card, a copy of your receipt
and your 23 digit serial number
for your records**



NEED HELP?

For UK Customer Service,
please contact

+44 (0) 1355 241222

escoters@letmerepair.co.uk

For other countries, please
scan QR code

