


Assembly Instructions for Needle Nose Clamp

Loosen the set screw at the end of the gooseneck. Attach the Needle Nose Clamp to the gooseneck arm using the 3/8" screw and washers as shown. The Needle Nose Clamp can be attached either perpendicular or parallel to the gooseneck. GENTLY tighten the set screw.

TOOLS REQUIRED: 7/32 and 2 mm Allen wrench (included)

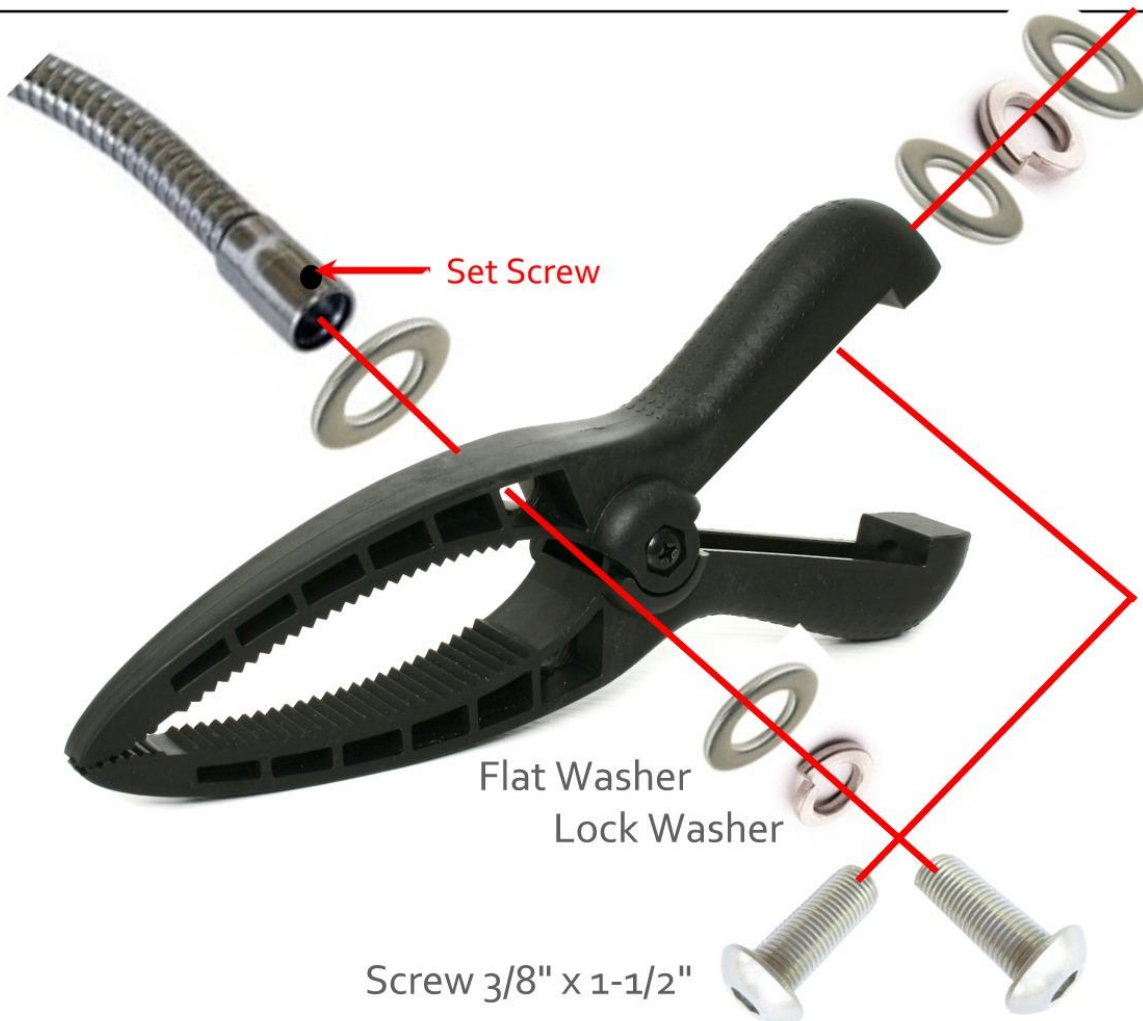

SnakeClamp Products LLC

www.SnakeClamp.com support@snakeclamp.com


snakeclamp