ACCORD LIGHTING

4207 / 4210 / 4211

E96

E26

ASSEMBLY INSTRUCTIONS

USA & CANADA

WARNING!

Be sure electrical power is OFF before and during installation or maintenance.
The luminaire must be installed by a qualified electrician, in accordance with all applicable local codes.

Ensure that the rated luminaire voltage requirements are compatible with the available mains supply in which it will be installed.
All LEDS are included in your lamp. Never touch the LED surface with your bear hands as this may reduce the life of your LED.
Do not alter, relocate or remove any electrical component.

Line: Sfera
Family: Wall
Description: Accord Sfera Sconce 4207 / 4210 / 4211

Imput voltage: 120 - 240V
Input frequency: 60Hz

Material: Natural Wood Venner and MDF.

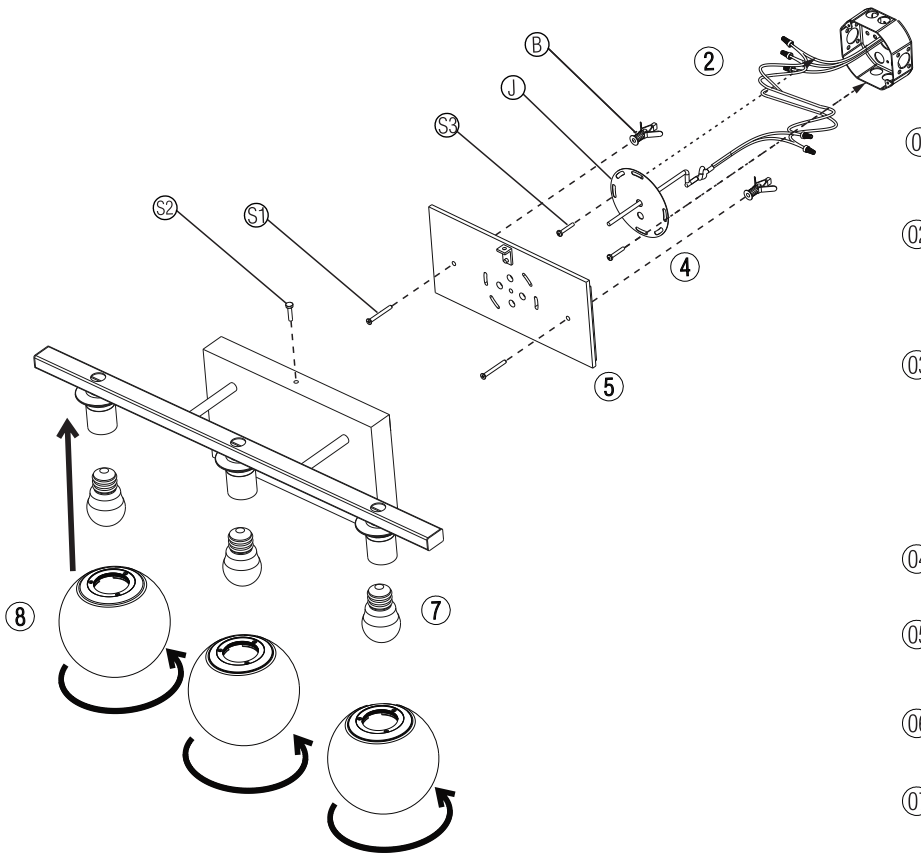

Turn off the electrical power before starting the installation, and keep it turned off until the installation is completed.

IMPORTANT: The luminaire is fitted only for use of E26 A15 lightbulbs.

01 Remove the protective packaging from the components, taking care not to damage any part with sharp surfaces or objects.

02 Align and mark the position on the wall where the mounting anchors should be installed, using the sconce base as a template. Drill the holes using an 8mm drill bit and insert the provided anchors (B).

03 Make the electrical connections in compliance with all the safety standards and local electrical codes.
This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product, and the hazards involved.

04 Using the (S3) screws, fixate the junction box cover (J) to the junction box.

05 Insert the screws (S1) through the base of the sconce and fasten them into the anchors.

06 Position the fixture and carefully secure it onto the previously installed base on the wall, ensuring it is properly fitted.

07 Use the finishing screw (S2) to secure the fixture. Ensure that the unit is firm and stable.

08 Remove the glass globe by unscrewing it counterclockwise. Install the compatible mini LED bulb (A-15) with a Socket E-26, MAX. 25W.

09 Reinstall the glass globe by screwing it clockwise

Turn on the electrical power.

The luminaire is ready for use.

PROVIDED SCREWS

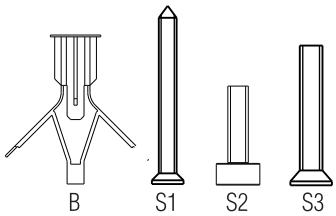

ATENTION!

FAILURE TO COMPLY WITH THESE INSTRUCTIONS MAY CAUSE ACCIDENTS AND LOSS OF PRODUCT WARRANTY.
Its recommended to read these instructions completely and carefully before proceeding.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ACCORD Lighting guarantees coverage against manufacturing defects including electrical components and finishes, for a period of three years, under normal use, from the date of purchase. For warranty service, please contact your local dealer for further instructions. Proof of date of purchase will be required for validation of warranty service.

The responsability of the manufacturer regarding the product warranty is related to the correct observation of the instructions contained in this manual.
The manufacturer is not responsible for any damage to the product caused by accidents, alterations of any kind, improper usage or improper installation.
See the website for additional warranty details.

ACCORD Lighting reserves the right to change the dimensions and specifications contained in this manual without prior notice, in accordance with its policy of continuous product improvement. Please, contact the manufacturer if additional information is necessary. The illustrations in this manual are for guidance only and may vary in scale, dimensions and model details.

ACCORD LIGHTING

4212/4214

E96

E26

ASSEMBLY INSTRUCTIONS

USA & CANADA

WARNING!

Be sure electrical power is OFF before and during installation or maintenance.
The luminaire must be installed by a qualified electrician, in accordance with all applicable local codes.

Ensure that the rated luminaire voltage requirements are compatible with the available mains supply in which it will be installed.
All LEDS are included in your lamp. Never touch the LED surface with your bear hands as this may reduce the life of your LED.
Do not alter, relocate or remove any electrical component.

Line: Flow
Family: Wall
Description: Accord Flow Sconce 4203

Imput voltage: 120 - 240V
Input frequency: 60Hz

Material: Natural Wood Venner and MDF.

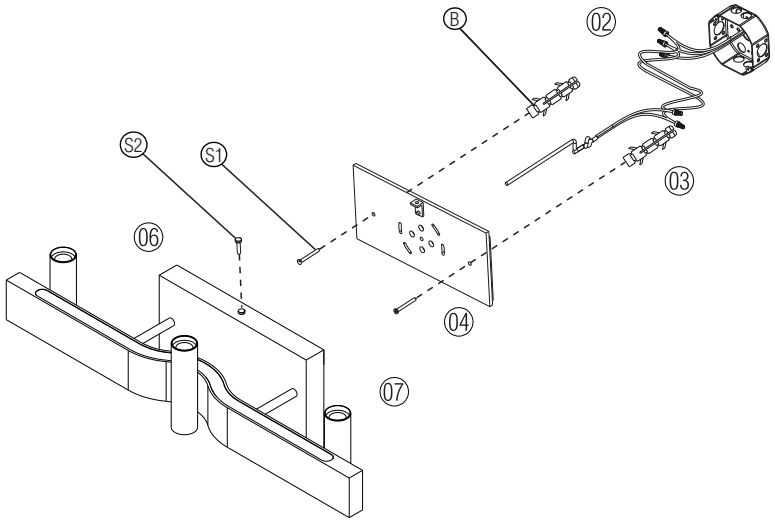

Turn off the electrical power before starting the installation, and keep it turned off until the installation is completed.

01 Remove the protective packaging from the components, taking care not to damage any part with sharp surfaces or objects.

02 Make the electrical connections in compliance with all the safety standards and local electrical codes.
This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product, and the hazards involved.

03 Align and mark the position on the wall where the fixation plugs should be installed, using the base of the wall bracket as a template. Drill holes using an 8mm drill bit and insert the provided plugs (B).

04 Insert the screws (S1) through the base of the wall bracket and secure them into the plugs.

05 Position the light fixture and carefully attach it to the base previously installed on the wall, ensuring it is properly fitted.

06 Use the finishing screw (S2) to secure the fixture. Ensure that the piece is firm and secure.

07 Install the E-12 bulb compatible with the E-12 socket, up to 8W.

Turn on the electrical power.

The luminaire is ready for use.

PROVIDED SCREWS

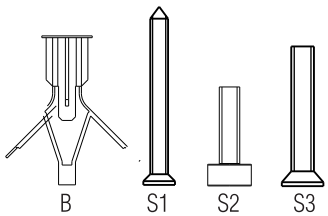

ATENTION!

FAILURE TO COMPLY WITH THESE INSTRUCTIONS MAY CAUSE ACCIDENTS AND LOSS OF PRODUCT WARRANTY.
Its recommended to read these instructions completely and carefully before proceeding.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ACCORD Lighting guarantees coverage against manufacturing defects including electrical components and finishes, for a period of three years, under normal use, from the date of purchase. For warranty service, please contact your local dealer for further instructions. Proof of date of purchase will be required for validation of warranty service.

The responsability of the manufacturer regarding the product warranty is related to the correct observation of the instructions contained in this manual.
The manufacturer is not responsible for any damage to the product caused by accidents, alterations of any kind, improper usage or improper installation.
See the website for additional warranty details.

ACCORD Lighting reserves the right to change the dimensions and specifications contained in this manual without prior notice, in accordance with its policy of continuous product improvement. Please, contact the manufacturer if additional information is necessary. The illustrations in this manual are for guidance only and may vary in scale, dimensions and model details.