


# **SEAVIEW**

**ELEVATE YOUR ELECTRONICS**

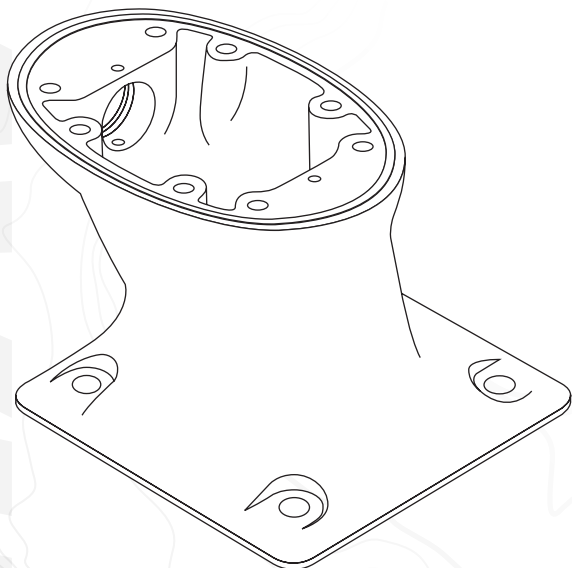

## **INSTALLATION INSTRUCTIONS**


For Seaview Modular Mount:

**PMA-57-M1, PMF-57-M1**


Refer to website for most up to  
date instructions and videos.

**[WWW.SEAVIEWGLOBAL.COM](http://WWW.SEAVIEWGLOBAL.COM)**


## ***PARTS INCLUDED***

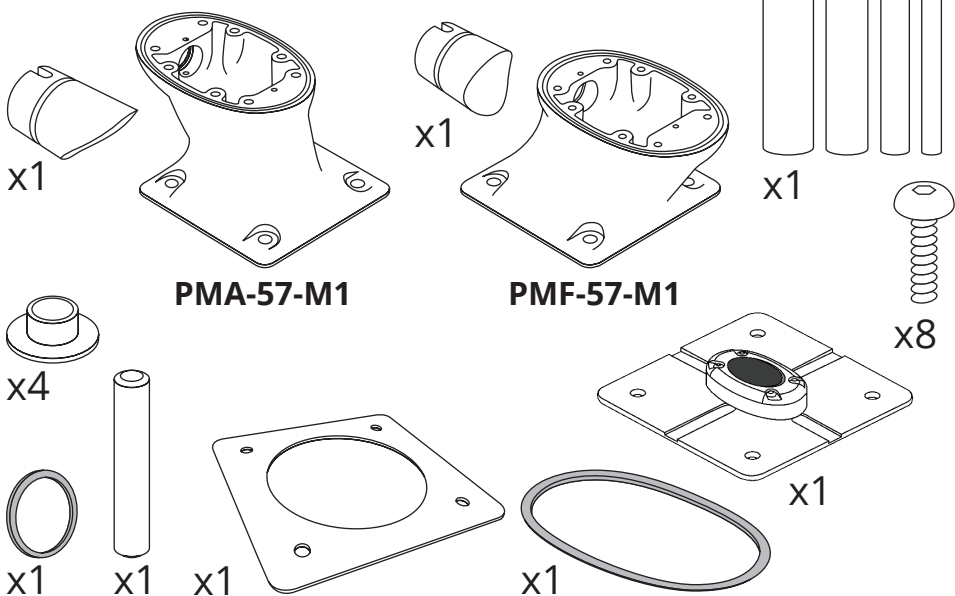


## TOOLS NEEDED

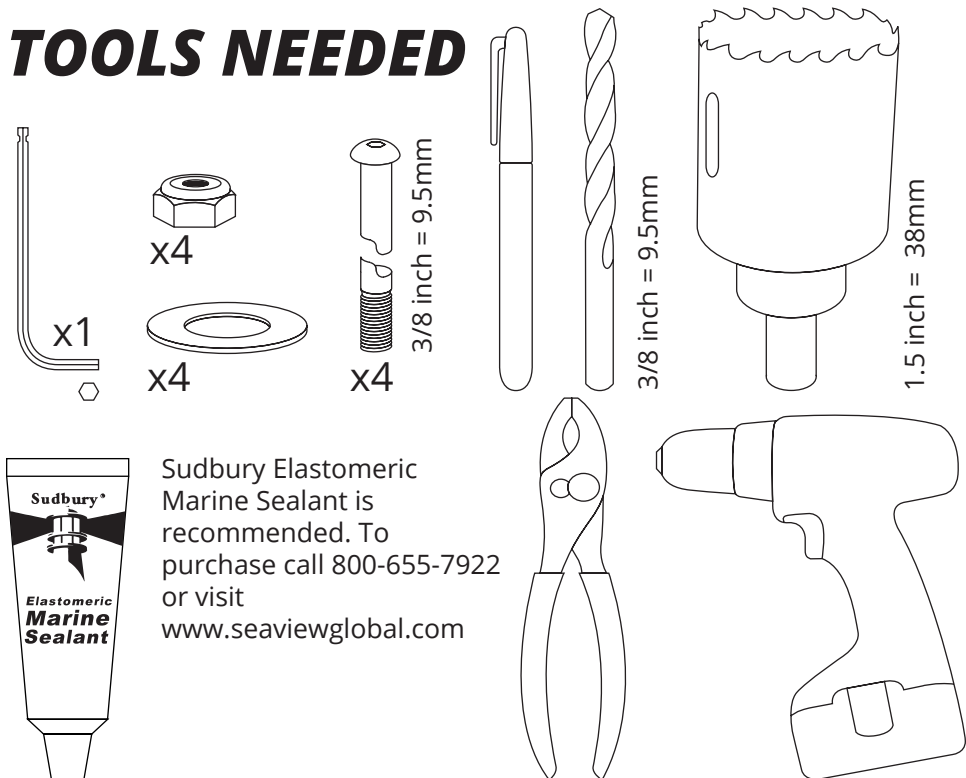


**1** Insert the rubber grommet into the groove located in the light bar hole at the back of the mount.

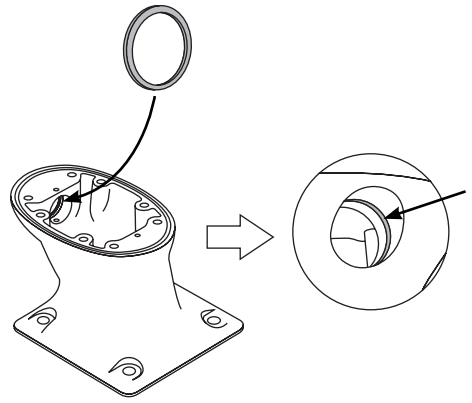

**2** Place rubber gasket in the groove on the top of the mount.

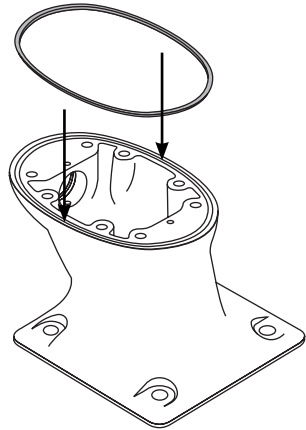


**3A** If you are using a light bar, do not use the provided pin.

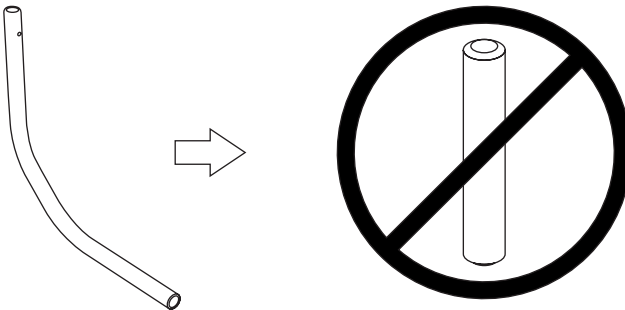

# 3B


If you are not using a light bar insert the pin. Then insert the white plastic plug into the light bar hole. It should snap onto the pin.

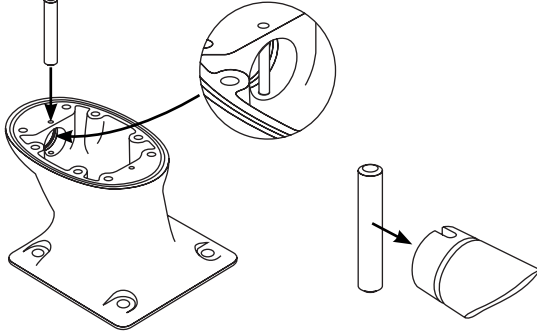

# 4

Insert the rubber radar cable grommet into the center of the Seaview Top Plate (sold separately). Make sure that the lip in the center of the Top Plate hole sits in the groove of the rubber grommet.


Then place the Top Plate on top of the mount, making sure that eight center bolt holes line up.

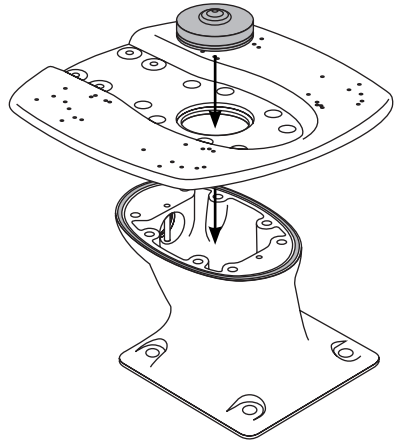


# 5

Using the eight 5/16 - 18x1" bolts from the Seaview Top Plate kit, bolt down the Top Plate.


Refer to the provided Seaview Top Plate installation instructions for more information.

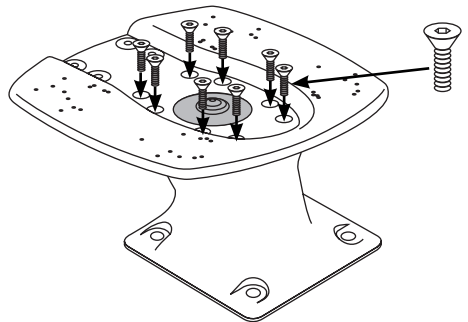


**6** Using a straight edge make sure that the mounting surface is flat.

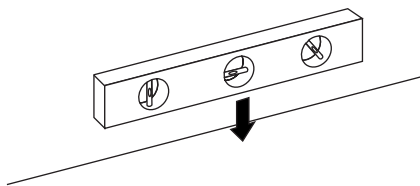


**7** Mark the four bolt holes and center radar cable hole using the foam gasket as a template.

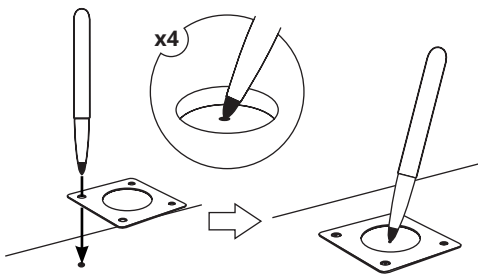

**8** Use the appropriate size drill bit or hole saw to cut a hole big enough for the cables.

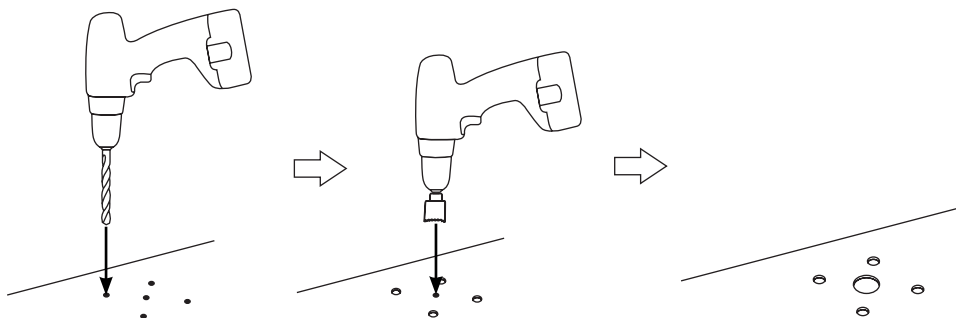


**9** Route the cable(s) through the hole.

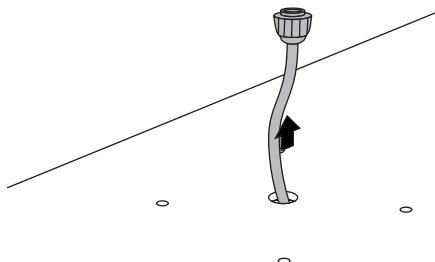

# 10A


Place the foam gasket and cable gland base plate over the bolt holes.

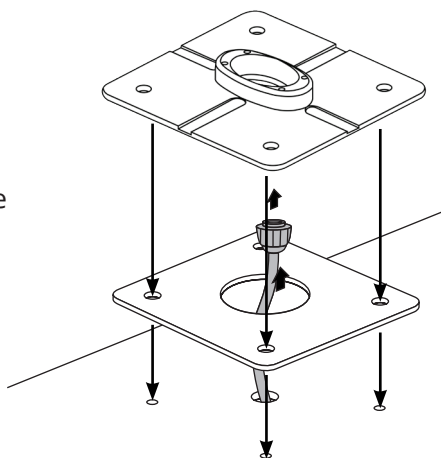

---

# 10B


If you prefer not to use the foam gasket apply marine sealant to the cable gland base plate.

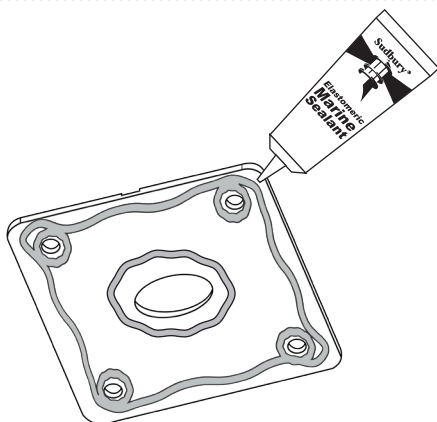



# CABLE GLAND BASE

## INSTRUCTIONS

### PARTS INCLUDED

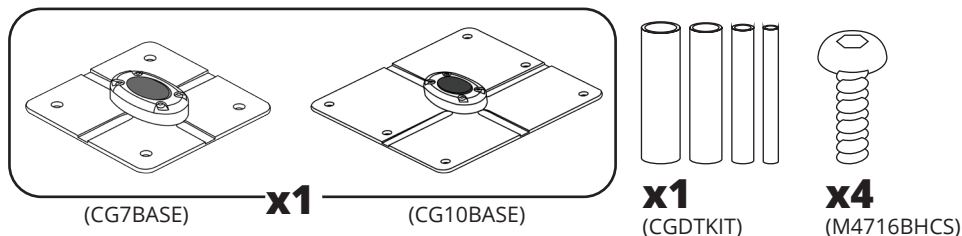


### TOOLS NEEDED

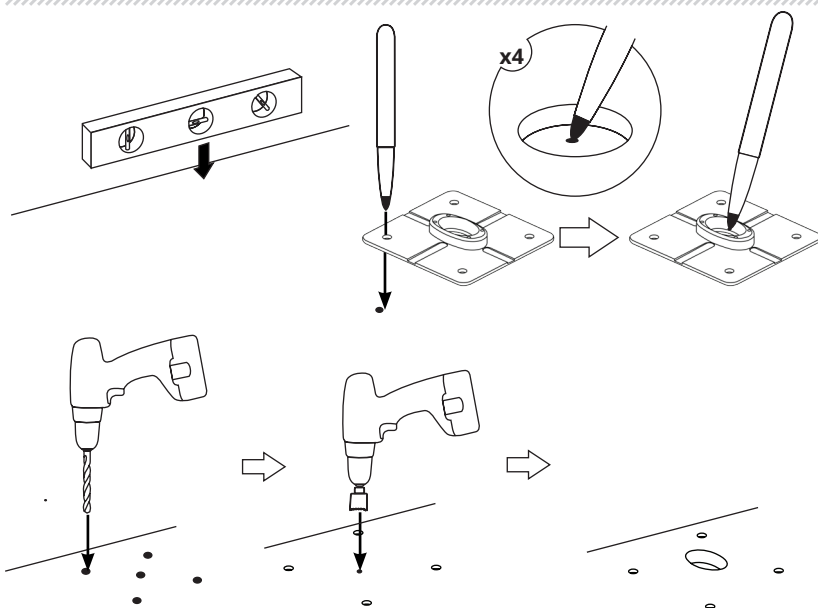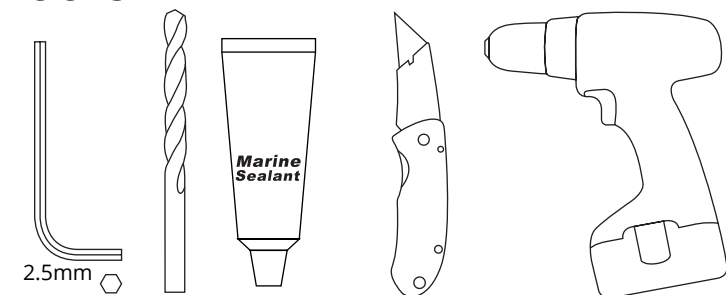


**NOTE: BEFORE YOU BEGIN**

- It is not necessary to dry fit if using drill tubes. Dry fit is recommended if using a drill bit to securely hold the rubber in place.
- Make sure that you do not drill within 1/8" (3.2mm) from the edge of the tapered plug.
- Drill tube is recommended. However, if using a drill bit, a slightly larger drill bit is needed for drilling the rubber.
- This cable gland base will work with multiple cables. Make sure each cable has its own hole and there is at least .125" of rubber between each hole.

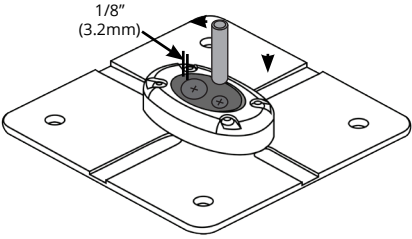

**1**

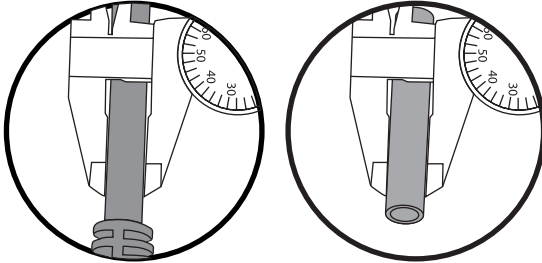

Measure your cable diameter and select the appropriate drill tube provided. Cable diameter +.01/-0.03


**2A**

**1**




Take one of the four drill tubes (included with the Cable Gland). Double check to make sure the tube is the right diameter for your installation.

**2**

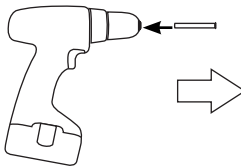

Insert drill tube into drill motor, and leave enough length to get through the tapered plug.

**3**

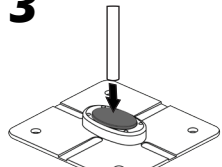


Apply small amount of soapy water to the tube and slowly drill the rubber plug.

**2B**


If using a drill bit, the cover should be securely tightened to help hold the rubber while drilling. The drill bit should be run repeatedly through the rubber.

**3**

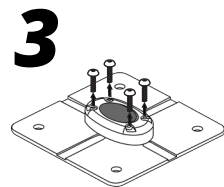


Remove the four screws using a 2.5 mm allen wrench.

**4**

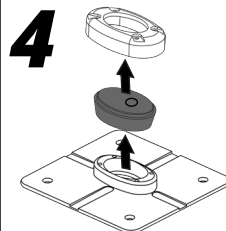


Remove the Cable Gland cover and tapered plug.

**5**

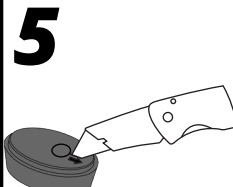


Using a sharp razor blade or knife, cut the tapered plug from the cable hole outward.

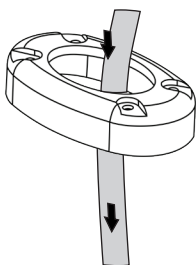


**6**


Slide the Cable Gland cover over the electronic cable.

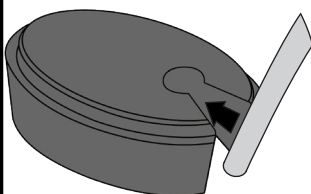**7**


Wrap the tapered plug around the electronic cable.

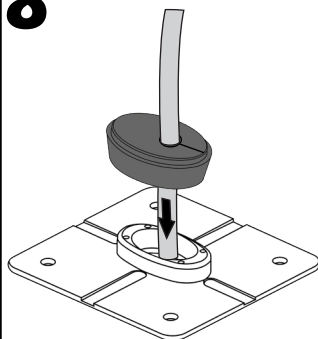**8**


Insert the electronic cable and tapered plug into the plastic base.

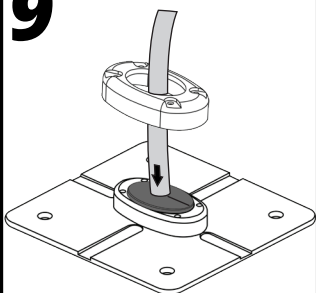**9**


Slide the Cable Gland cover onto the plastic base making sure that all four bolt holes line up.

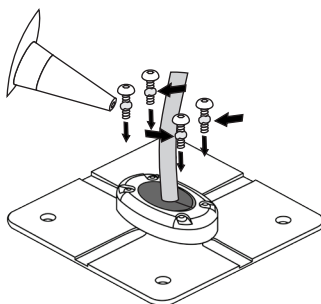**10**

Apply marine sealant to the four allen head screws and tighten.

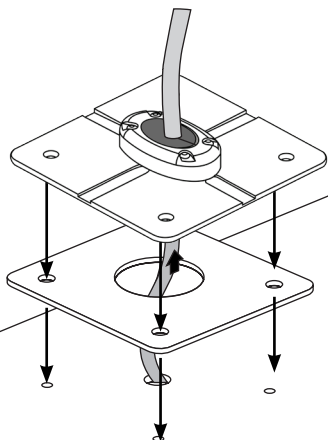**11**


Place the foam gasket and cable gland base plate over the bolt holes.

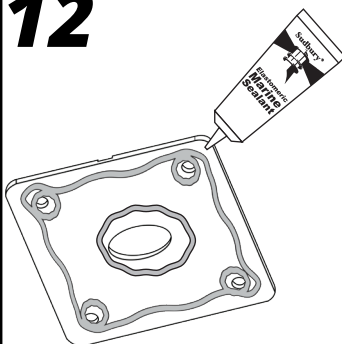**12**


If you prefer not to use the foam gasket apply marine sealant to the cable gland base plate.

**PMA-57-M1, PMF-57-M1 Continued...**


**11** Route the cable(s) through the mount and through the rubber grommet.

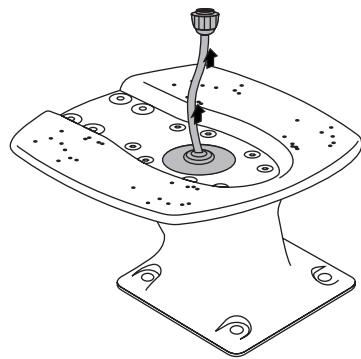

**12** Using your own bolts and the four supplied nylon should washers bolt down the Seaview mount to the mounting surface.


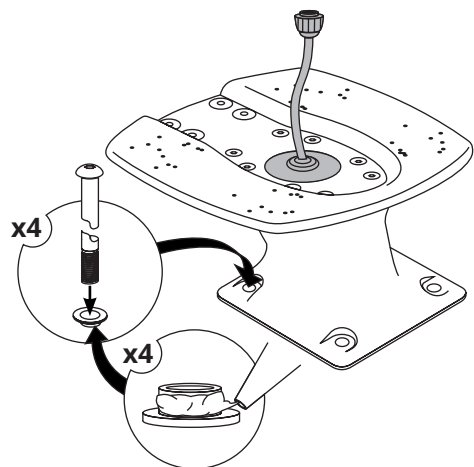


**13** Secure your radar to the Top Plate using four bolts, be sure to follow the Seaview Top Plate instructions on how to do this.

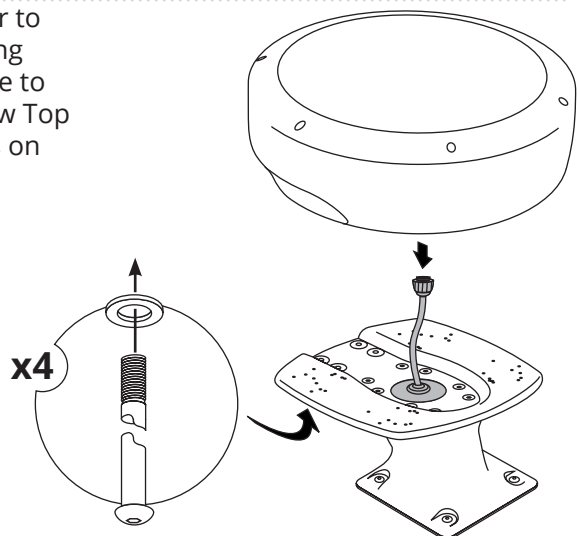

# 14


Be sure to leave some slack on the radar cable.

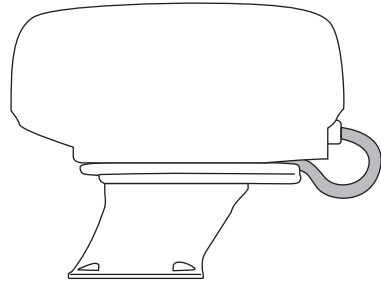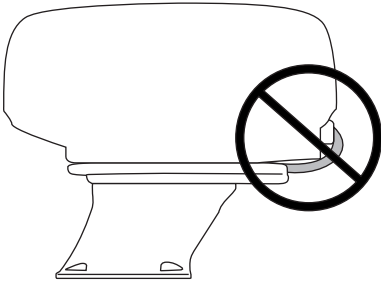

# OPTIONAL ACCESSORIES


Call 800-655-7922 or visit [www.seaviewglobal.com](http://www.seaviewglobal.com) for available accessories.

## LIGHT BARS

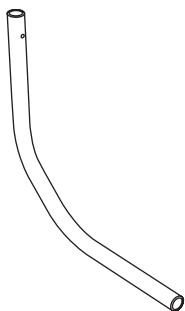

### LTB-R


Fits closed dome radars.

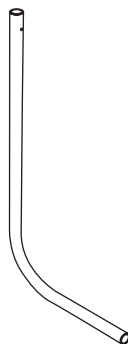

### LTB-S


Fits 20" or smaller satdomes.

## LIGHT BAR TOPS



### LTBP-1197

Perko 1197  
Incandescent  
Light




### LTBP-1697

Perko LED Light.



### LTBU1A1197


Light Bar Top  
with Perko 1197  
Light, can fit GPS.

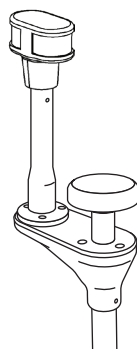

### LTBU1A1697

Light Bar Top  
with Perko LED  
light, can fit GPS.


## SPREADER KIT

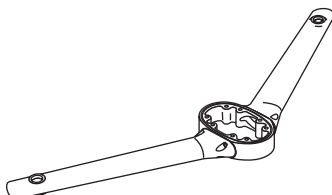

### SP1-MOD


Allows user to mount GPS  
units or antennas onto a  
Seaview Modular Mount.

# HINGES

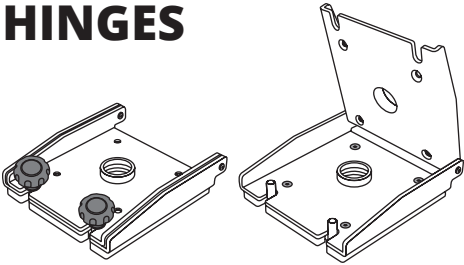

Seaview Hinge Adapters fold in any direction necessary for added height clearance.

# WEDGES

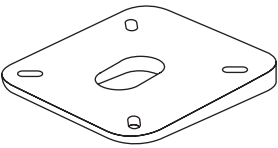

Compensates for plane angle.  
Available in 2, 4 or 6 degree wedges.

The background of the entire page is a light gray topographic map with various contour lines. The lines are more densely packed in some areas, suggesting higher elevations, and more spread out in others.

# ***SEAVIEW***///

***ELEVATE YOUR ELECTRONICS***

***SEAVIEW***///

Tel: 800-655-7922  
[www.seaviewglobal.com](http://www.seaviewglobal.com)

***EUROPEAN OFFICE***

Tel: +33 4 94 53 27 70  
[www.seaviewprogress.com](http://www.seaviewprogress.com)