




INSTALLATION INSTRUCTIONS

SKU: **LK-10233**



2" LIFT KIT SUZUKI KINGQUAD 500/750 (2010+)

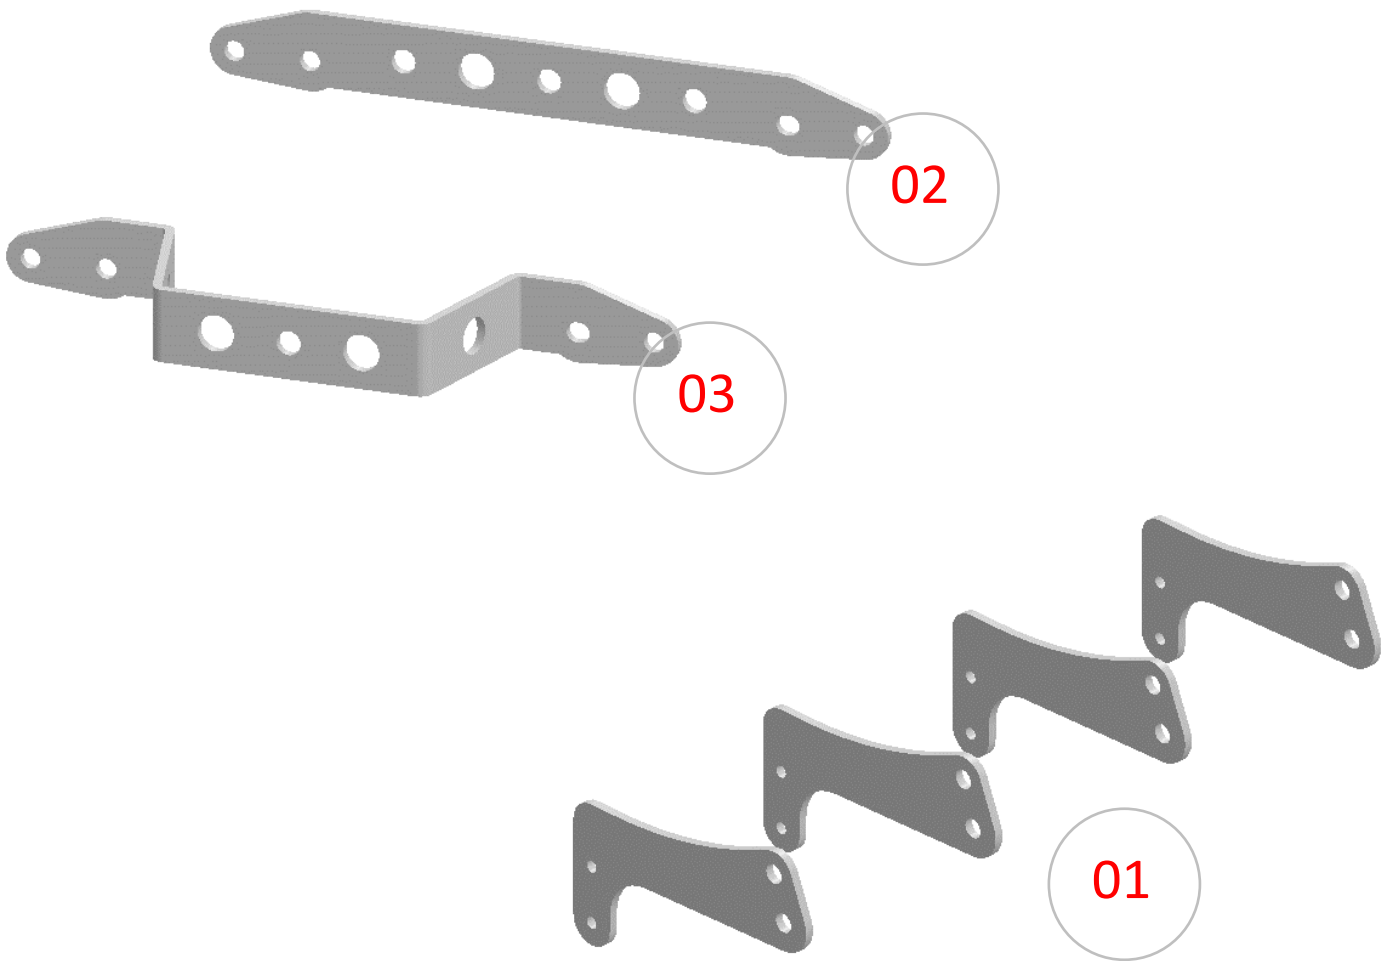

Item	Part No.	Description	Torque	Qty.
LIFT COMPONENTS				
Those items are shown on the first page.				
01	233-01	Front Lift Bracket		4
02	233-02	Rear Lift Bracket		1
03	233-03	Rear Lift Bracket		1

FRONT HARDWARE				
Those items are included with each kit to install the front lift components.				
04	A-1008	M10 Flat Washer		4
05	A-1505	M6-1.00 Flange Lock Nut	7.8 ft-lbs	4
06	A-1509	M10-1.50 Flange Lock Nut	36 to 38 ft-lbs	4
07	A-2621	M6-1.00 x 60mm Hex Flange Bolt	7.8 ft-lbs	4
08	A-3023	M10-1.50 x 65mm Hex Flange Bolt	36 to 38 ft-lbs	4
09	B-5003	10mm ID. x 5/8" OD. x 3/16" Lg. Spacer		4
10	B-5219	12mm ID. x 11/16" OD. x 1-3/16" Lg. Spacer		2

REAR HARDWARE				
Those items are included with each kit to install the rear lift components.				
04	A-1008	M10 Flat Washer		4
06	A-1509	M10-1.50 Flange Lock Nut	36 to 38 ft-lbs	4
11	A-3021	M10-1.50 x 60mm Hex Flange Bolt	36 to 38 ft-lbs	4
10	B-5219	12mm ID. x 11/16" OD. x 1-3/16" Lg. Spacer		2

PLEASE READ AND UNDERSTAND BEFORE THE INSTALLATION

CUSTOMER AND/OR END USER:

This product is designed for use on ATVs and/or UTVs to increase ground clearance and fender clearance. Purchasers should be aware that use of this product may increase the frequency of required maintenance, part wear...

Using a lift kit will raise the center of gravity on your ATV and/or UTV, increasing risk of roll-over, injury and death on ALL types of terrain. It's YOUR RESPONSIBILITY to always inform other operators and passengers of this vehicle about the added risks.

Our products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any OEM or aftermarket parts will void warranty. PERFEX Industries products could interfere with other aftermarket accessories. If the user has aftermarket products on machine, please contact PERFEX Industries to verify that they will work together.

Adding aftermarket suspension components and/or more aggressive tires can cause breakage of other OEM driveline components such as differentials, axles or drive shafts.

We ALWAYS recommend that wider tires and/or wheel spacers be used to achieve a wider stance and to improve stability of the ATV and/or UTV. Riders should be advised that the handling characteristics of a taller ATV and/or UTV are different and require extra care when riding, particularly on side hills or off-camber situations. If you further raise the center of gravity by adding taller tires, heavy loads to racks or seats, or by any other means, the ATV and/or UTV must be operated with even more care, at slower speeds and on relatively flat ground. All turns should be done at a slow speed, even on level ground.

Operation of an ATV and/or UTV with or without modified suspension components, while or shortly after consuming alcohol or drugs, subjects the rider to the risk of serious bodily harm or possible death. This risk is compounded if the rider does not wear an approved helmet and other safety gear.

PERFEX Industries urges that all approved safety gear be worn when riding an ATV and/or UTV as a driver or passenger.

By purchasing and installing PERFEX Industries products, user agrees that should damages occur, PERFEX Industries will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. WE (PERFEX Industries) will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from PERFEX Industries.

PLEASE TAKE NOTE: The total liability of seller to user for all damages, losses, and causes of action, will never exceed the total purchase price paid for the product that gives rise to the claim.

DEALER AND/OR OTHER INSTALLERS:

You are responsible for informing your customer and end user of the information contained above and the increased potential hazards of operating an ATV and/or UTV equipped with modified suspension components.

If you install any suspension modifying components, it is your responsibility to also install a warning label prominently in view of the driver and in prominent view of the driver and passenger on UTVs and multi-passenger ATVs.


They should also be instructed to notify anyone operating the vehicle, as well as any passengers, that said vehicle is modified.

As discussed above, it is critically important that they be instructed in the need for slower speed operation, regardless of terrain, after this lift kit is installed.

FRONT INSTALLATION INSTRUCTIONS

PREPARATION


- Using a jack under center of front end, lift until the front wheels leave the ground.
- Remove the wheels.
- Disconnect the bottom of the shocks from the suspension arms. Use a 14mm wrench and socket.

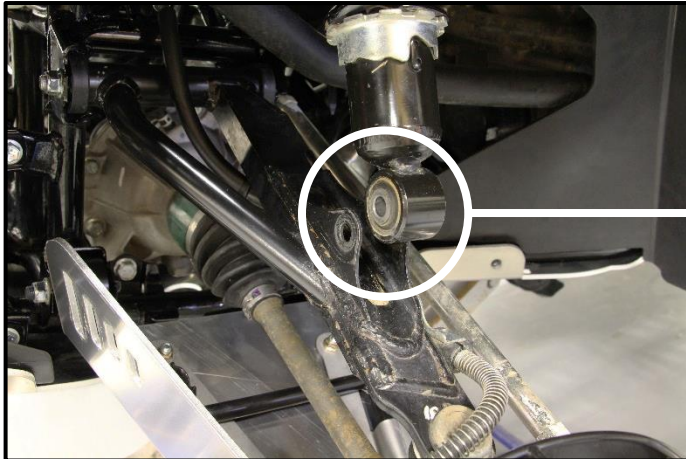

DISCONNECT SHOCK BOTH SIDE


INSTALLATION

1. Install the front brackets to the shock mount. Use M10-1.50 x 65mm bolt, washer, 1-3/16" Lg. spacer and M10-1.50 lock nut.

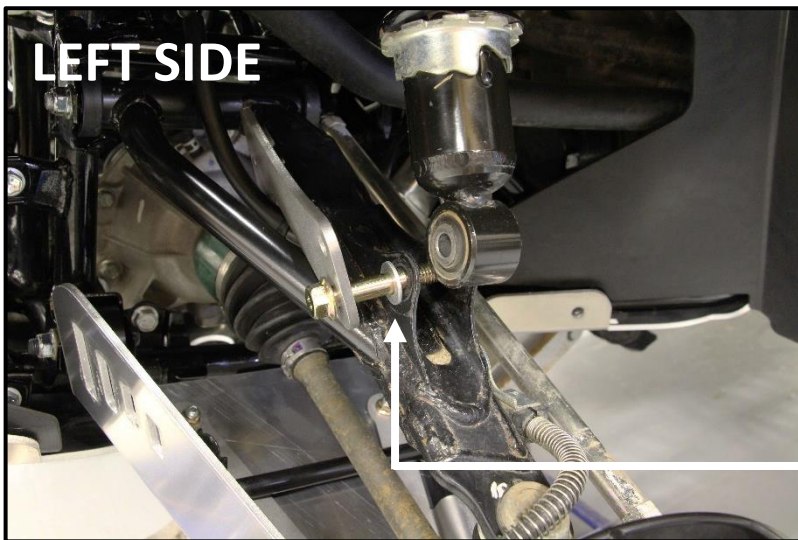

LEFT SIDE

M10 WASHER

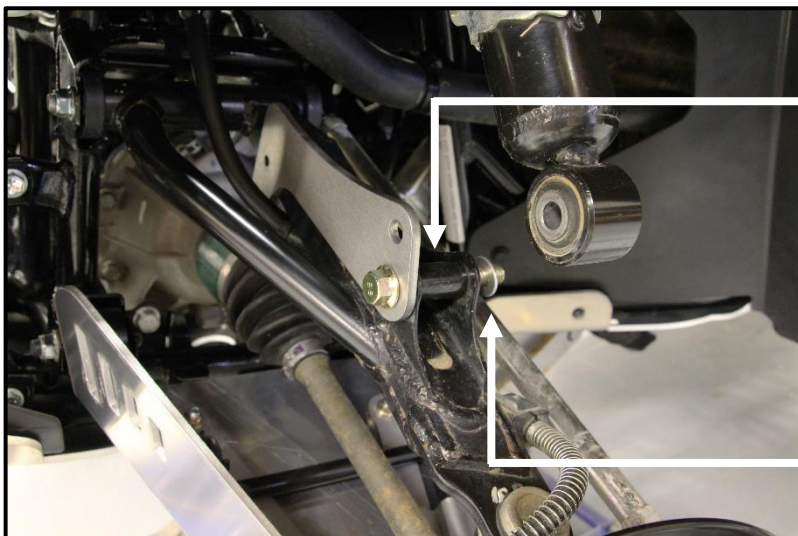


SPACER

M10 WASHER


2. Secure the bracket to the suspension arm. Use M6-1.00 x 60mm bolts and M6-1.00 lock nuts.



3. Connect the bottom of the shock to the new shock location on the brackets. Use M10-1.50 x 65mm bolt, 3/16" Lg. spacer and M10-1.50 lock nut. Put one spacer on each side of the shock eyelet, inside of the bracket.

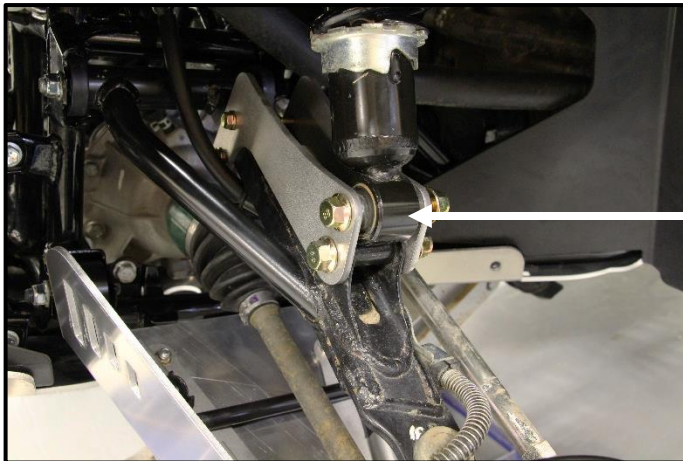

SHOCK EYELET

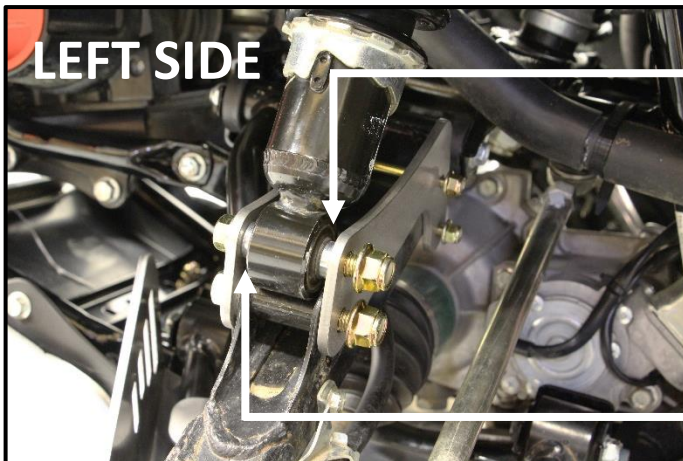

LEFT SIDE

SPACER


SPACER

4. Tight all the hardware appropriately at this point.
- Use a 10mm wrench and socket for the M6 hardware.
 - Use a 14mm and 15mm wrench and socket for the M10 hardware.
5. Repeat the same steps for the opposite side.
6. Put the wheels back on the vehicle when the installation is finished. Torque all lugs to factory specification.

REAR INSTALLATION INSTRUCTIONS


PREPARATION

- Using a jack under center of rear end, lift until the rear wheels leave the ground.
- Remove the wheels.
- Disconnect the top of the shocks from the frame shock mount. Use a 12mm and 14mm wrench and socket.
- Remove the storage box from the ATV. Use a star screwdriver and 8mm socket. Save hardware for later.

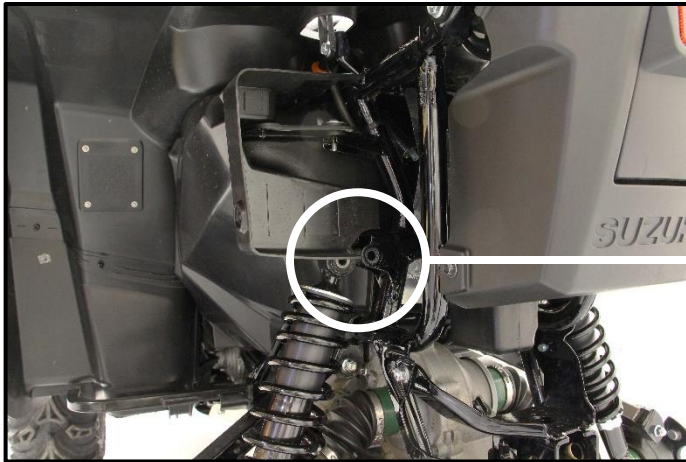

DISCONNECT SHOCK BOTH SIDE


- Trim a small area of the plastic to clear the rear lift bracket. See image below for your reference.

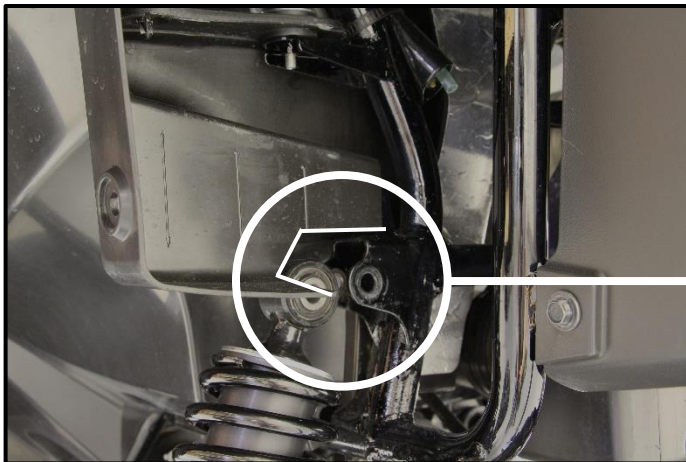


TRIM

INSTALLATION


1. Insert the rear brackets on each side of the frame shock mount. Put the rear bracket (03) face of the rear.
2. Install the brackets to the shock mount. Use M10-1.50 x 60mm bolts, 1-3/16" Lg. spacers and M10-1.50 lock nuts.

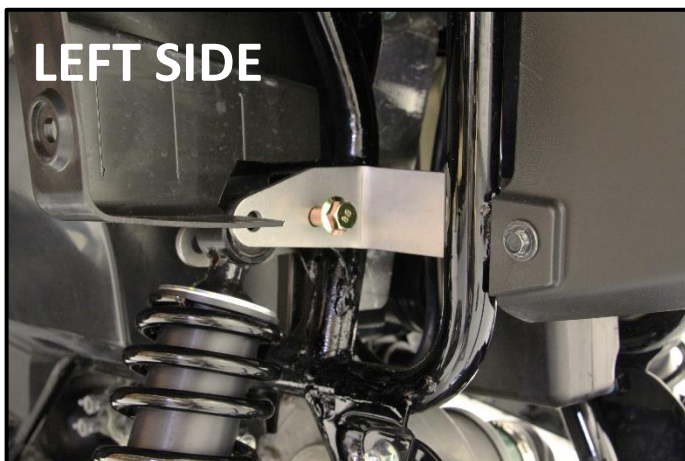

3. Connect the top of the shocks to the new shock location on the brackets. Use M10-1.50 x 60mm bolts, washers and M10-1.50 lock nuts. Put one washer on each side of the shock eyelet, inside of the brackets.

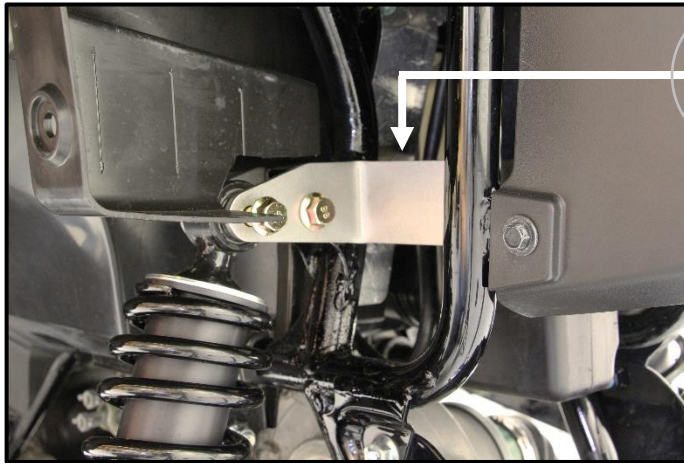


03

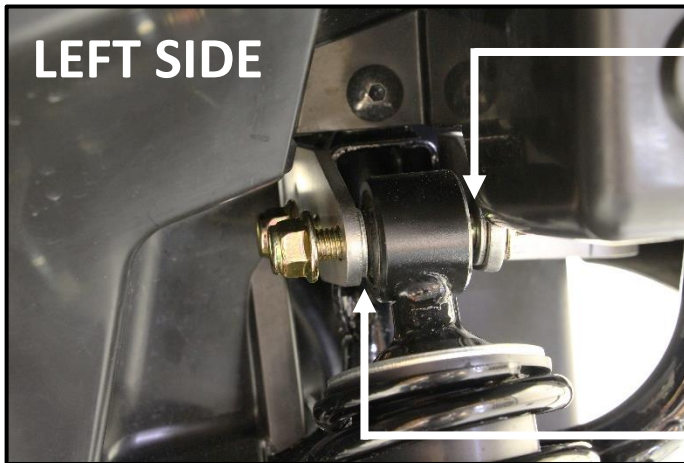

LEFT SIDE

M10 WASHER

M10 WASHER

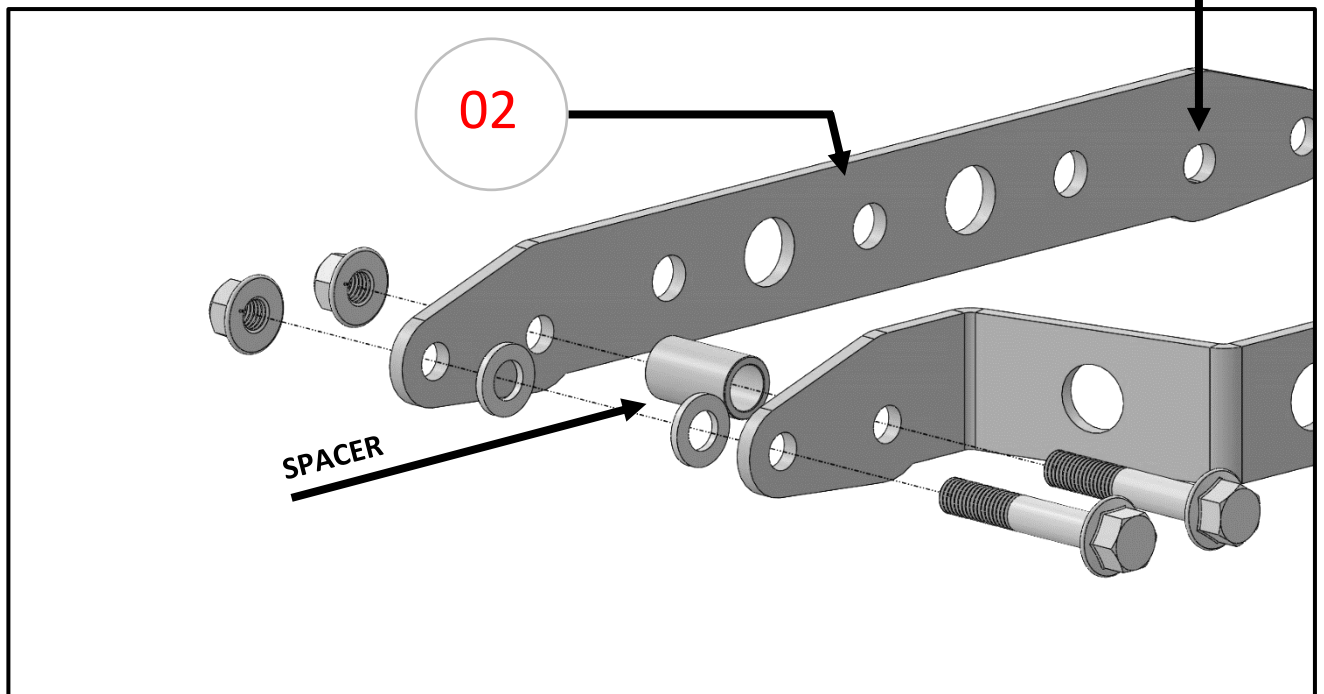

02

SPACER

SLOTTED HOLE

4. Tight all the hardware appropriately at this point. Use a 14mm and 15mm wrench and socket.
5. Put the storage box back on the ATV using the factory hardware.
6. Put the wheels back on the vehicle when the installation is finished. Torque all lugs to factory specification.