

INSTRUCTIONS



MODEL: *High Boost SideKick with Intercooler*

FITS: *2019 Polaris PRO-RMK 850
2019 Polaris SKS 850 (155)
2019 Polaris ASSAULT 850*



AUTO
SideKick

Table of Contents

Contents

INSTRUCTIONS	1
Contents List.....	3
User Manual.....	4
Prep Work Area.....	6
Initial Teardown	7
Deep Snow Muffler	27
Oil System	35
Intercooler.....	51
Cooling System.....	56
Turbo / Exhaust.....	60
Intercooler cont'd.....	72
Exhaust cont'd.....	77
Deep Snow cont'd.....	79
Turbo / Air Intake	84
Fuel System	87
Charge Air.....	89
Cold Air.....	97
Electronics.....	104
Reassembly.....	120
Clutching.....	125
Reassembly, cont'd.....	126
Fueling Mode.....	129
Control Box.....	130
HAVE FUN	132

Contents List

REPLACE WITH STOCK IMAGE

(1) F47 Turbocharger including:
 (1) Bracket w/cotter key
 (1) Air solenoid
 Hoses, fittings, hardware
(1) Exhaust Inlet
(1) Tunnel Plate Assembly w/sleeve
(1) Exhaust Collector
(1) Muffler (depends on kit)
(1) Charge Air Box w/ Injectors & Bosch Sensor
(1) Charge Tube
(1) Exhaust Block Off Plate
(1) Coil Mount Bracket
(1) Cold Air Intake Plenum
(1) Fuel Control Box
(1) 20mL Syringe
INLET KIT BAG
 (4) Long exhaust springs
 (4) 8x25mm SS Hex bolt
 (4) 8mm SS top lock nut
 (4) 8mm SS washer
CHARGE TUBE KIT BAG
 (3) #40 Hose Clamp
 (1) #32 Hose Clamp
 (1) 2.5x2" Reducing Coupler
 (1) 2.5" Silicon 90
AIRBOX KIT BAG
 (2) 1.75 x 2.25 Silicon, notched
 (2) #36 Hose Clamp
 (2) T-bolt clamp, notched
MUFFLER KIT BAG

Possible KIT variations:

1. Standard-exit muffler will not include tunnel plate assembly or exhaust block-off. Springs may differ.
2. High Boost kit will include:
 - (1) Lightweight water-to-air Intercooler
 - (1) Oil Pump Relocation Bracket
 - (18) 3/16 Steel Rivets (small)
 - (4) 3/16 Steel Rivets (large)
 - (2) 5/16 x 5/16 x 5/16 Brass Tee
 - (1) Radiator & Plate
 - (1) Water pump
 - (1) 2"x 3" Silicon Hose

(3) Short Exhaust Springs
(10) 8" Zip Ties
(5) 4" Zip Ties
(4) 3/16 Steel Rivet (small)
(2) 3/16 Steel Rivet (large)
COIL/BLOCK OFF KIT BAG
 (3) 3/16 Steel Rivet (large)
 (4) 1/4-20 x 3/4 bolt
 (4) 1/4-20 nylon lock nut
COLD AIR INTAKE KIT BAG
 (4) 70-90 mm Worm Drive Hose Clamp
 (2) 3" Silicon 90
 (1) Dart fastener
OIL LINE KIT BAG
 (1) Oil line
 (1) 1/8" Brass Tee
 (1) Polaris Oil Line
TUNNEL PLATE KIT BAG
 (2) Spring Tab
 (2) Short Exhaust Springs
 (2) Long Exhaust Springs
CLUTCH KIT BAG
 (1) 57-81g weights
 (1) Almond Primary Spring

Possible KIT variations:

- (2) #32 Hose Clamp
- (5) #4 Hose Clamp
- (10) 8" Zip Ties
- (1) 5/16 x 6.8" Push Lock Hose
- (5) Vibration Resistant Pinch Clamp
- (1) 15" Zip Ties
- (1) Rubber Insulated Clamp
- (2) Zinc-plated Hose
- (1) #8-32 x 3/8 Zinc Phillips Pan
- (1) 8" length, 3/16 Boost Reference tubing

User Manual

GENERAL SAFETY

1. ALWAYS wear your seatbelt (if applicable), helmet, and PPE when operating your vehicle.
2. Clutching, belts, motor, exhaust components and drivetrain may be HOT enough to burn you. Do not touch until vehicle has had sufficient time to cool. Wear proper PPE to prevent burns.
3. Clutching, belts, motor, exhaust components and drivetrain may be sharp. Wear proper PPE to prevent laceration.
4. ALWAYS follow the safety suggestions of your owner's manual.

GENERAL

1. Print entire instruction manual. In the print settings, you can choose to print multiple tiles per page (we suggest 4-6). However, the tunnel-cut-pattern needs to be printed full size.
2. Installation IS YOUR RESPONSIBILITY. During the first ride, take the time to pull over, OFTEN, and check for excess heat, leaks, rubbing wires, and general installation fit and completion. BoonDocker does not cover or warranty parts against melting. We strongly recommend venting and heat-shielding as necessary. These items may not be included in the kit, but are YOUR RESPONSIBILITY!

OPERATION

1. ALWAYS allow your vehicle to reach proper operating temperatures before driving. Refer to your owners manual.
2. Your Polaris comes with ECU-programmed "break-in". During this time, your SideKick may not perform at the optimum level. Once break-in is complete, you will likely notice more power and cleaner engine performance. During break-in, expect your snowmobile to run rich.
3. Because of excessive oiling, during break-in mode, you will need to replace your plugs more frequently. After break-in mode, replace plugs AT LEAST every 500 miles for maximum performance.
4. The SideKick turbo kit is a HIGH PERFORMANCE accessory. Proper fuel and maintenance is critical (see "FUEL")
5. High performance machines are more prone to belt failure. ALWAYS carry a spare belt, and understand how to change/replace your belt BEFORE you get out in the field. Properly inspect your belt and clean your clutches before each ride.
6. **ANY "DET" or Detonation codes are not acceptable.** If you get a DET code during normal operation, you likely have bad gas. Drain all of the fuel, and replace with fresh fuel from a different source. If the problem continues, immediately contact your dealer.
7. SideKick is calibrated for operation above 5,000 feet. Use below that elevation is at your own risk.
8. Check coolant levels after the first 10 minutes of operation. Coolant system may need to be bled.
9. Run your sled in "**PREMIUM**" mode. Switching to "ETHANOL" mode will make the vehicle run Richer (approx. 7% richer). Some sleds/fuel may require "ETHANOL" mode for a richer running condition. ONLY run "ETHANOL" mode if instructed. Refer to your owners manual to correctly configure your vehicle. DO NOT connect the "Map Jumper" unless instructed by BoonDocker.



User Manual

FUEL

1. The SideKick is a HIGH PERFORMANCE accessory. Proper fuel is critical.
2. ALL KITS are initially calibrated for a 50/50 mix from BoonDocker. Using any other blend or straight pump gas may cause engine failure.
3. 50/50 Mix tunes require an exact 50% mix of 91-octane (up to 10% ethanol, and 50% 100LL Av-Gas. Using a 50/50 mix of 91/110 race gas is also acceptable.
4. When available (coming soon for Patriot 850) - Pump Gas tunes REQUIRE 91-octane fuel (or higher). Non-ethanol fuel is recommended. DO NOT use fuel with >10% Ethanol. If you're concerned about the quality of pump fuel, mix NO MORE than 15% Av-Gas. Using higher octane than required will cause poor performance.
5. When available (coming soon for Patriot 850) - AV-Gas tunes REQUIRE 100LL (or higher), Av-Gas tunes: INTERCOOLER REQUIRED.
6. USE ONLY THE FUEL DESIGNED FOR YOUR KIT!
7. Fuel degrades with time. Fuel stored in plastic containers should be used within two weeks. Fuel in the tank of your vehicle will also degrade. DO NOT run fuel from any previous season or extended period of non-operation. .
8. Operating your vehicle with old/degraded fuel may cause engine failure
9. Operating your vehicle with the incorrect fuel for your tune may cause engine failure.

CLUTCHING & CLUTCH MAINTENANCE

1. A primary-clutch puller is REQUIRED for clutching installation. If you do not have one, you can have your dealer install the clutching. BoonDocker sells clutch pullers, and most dealerships also stock them, some even rent them.
2. Our clutching is engineered and validated for the SideKick. Using other clutching may cause a loss of performance, and is not supported or suggested.
3. Clutch springs wear out over time. We suggest replacing clutch springs every 500 miles.
4. Clutch maintenance is CRITICAL on high performance machines. We suggest you clean your clutches after each ride: Remove the belt. Use compressed air to blow any remaining debris from the clutch internals. Use a red scotch-brite pad to loosen any rubber/debris from the clutch-sheave faces. Dampen a rag with acetone and wipe the clutch sheave faces. Inspect belt for damage and/or wear.
5. Weights may ship pre-loaded, or may be blank. Load weights 2-3-3-2 (from heel to toe). Total weight should be approximately 73g per weight for 50/50 SideKick.
6. Any clutch-weight modification MUST be done to all three weights in unison. DO NOT run unbalanced weights. Additionally, the magnets are polar. To change weighting, pull ALL magnets from the weights (all holes), align in a stack, and repopulate weights with magnets to preserve polarity. DO NOT just add one weight without preserving polarity of the entire magazine of weights. Failure to preserve polarity will lead to magnets being 'thrown' from weights and potential clutch damage and/or personal injury.
7. Turbocharged Polaris Patriots are expected to turn 8550 +/- 100 RPM's. Use provided adjustable weights to keep RPMs at recommended levels.
8. Adjusting peak RPM is possible by adding/removing weight from the toe.
9. It is possible for magnets to be ejected from weights if they're not properly seated. We suggest using a small amount of glue as a precautionary measure.

Prep Work Area



Verify kit contents against included contents list.

DO NOT lift turbo assembly by the plastic bag. Carefully remove turbo assembly from bag to avoid dropping and/or damaging turbo assembly!

READ THE ENTIRE INSTRUCTION PACKET BEFORE PROCEEDING!

Initial Teardown



Remove hood and side panels. To remove hood, disconnect dash/headlight harness at connector, located on the mag side, near the overstructure/on top of air-box.

Initial Teardown



Remove "dart" fasteners from console ①. Remove Torx fasteners from airbox assembly ②. Repeat on both sides. Cut the zip tie holding the EGT & Hood Harness.

Initial Teardown



Lightly pull the rope handle to allow slack. With console piece slightly pulled back, disconnect the wiring harness for the console switches, located on the back side of the console. Slide console piece behind rear of seat and secure as shown.

Initial Teardown



Use OEM provided clutch-tool to spread sheaves on secondary and remove belt. Remove secondary clutch.

NOTE: There are washers/spacers behind the secondary clutch. These may "stick" to the secondary clutch. Do not lose or misplace them. Keep note of their orientation.

Initial Teardown



Disconnect level-sensor wire harness from oil tank. Remove bolts that secure oil tank/clutch guard to the snowmobile. Slide tank/guard out of location and secure (oil feed line remains attached)

DO NOT allow oil tank to drop.

Initial Teardown



Remove rear fasteners from stock air intake.

Initial Teardown



Disconnect OBDI port from airbox plenum and cut Zip-Tie ①. Leave the grey fastener. Remove both fabric-covered stock air intake plenum (not reused) ②. Save plastic dart-fasteners for later use.

Initial Teardown



Disconnect ECU wiring harnesses by pressing the release tab(s) and gently pulling down on harness to prevent wire fatigue. Unbolt ECU from air intake/overstructure and set aside for future use.

Initial Teardown



Remove air intake fasteners

Initial Teardown



Remove wire-harness fastener (loom dart) from air intake. Remove and set aside air intake to prep for assembly and for ease of access.

Initial Teardown



Remove stock TBAP sensor from stock air-box.

Initial Teardown



Loosen throttle body clamps (prepare to remove airbox)

Initial Teardown



Unbolt the two coils from stock air-box

Initial Teardown




Cut zip-tie as shown to free wire harness from stock air-box

Initial Teardown



Remove stock air-box as shown (not reused). Use caution to avoid stress to wire harness.

Initial Teardown

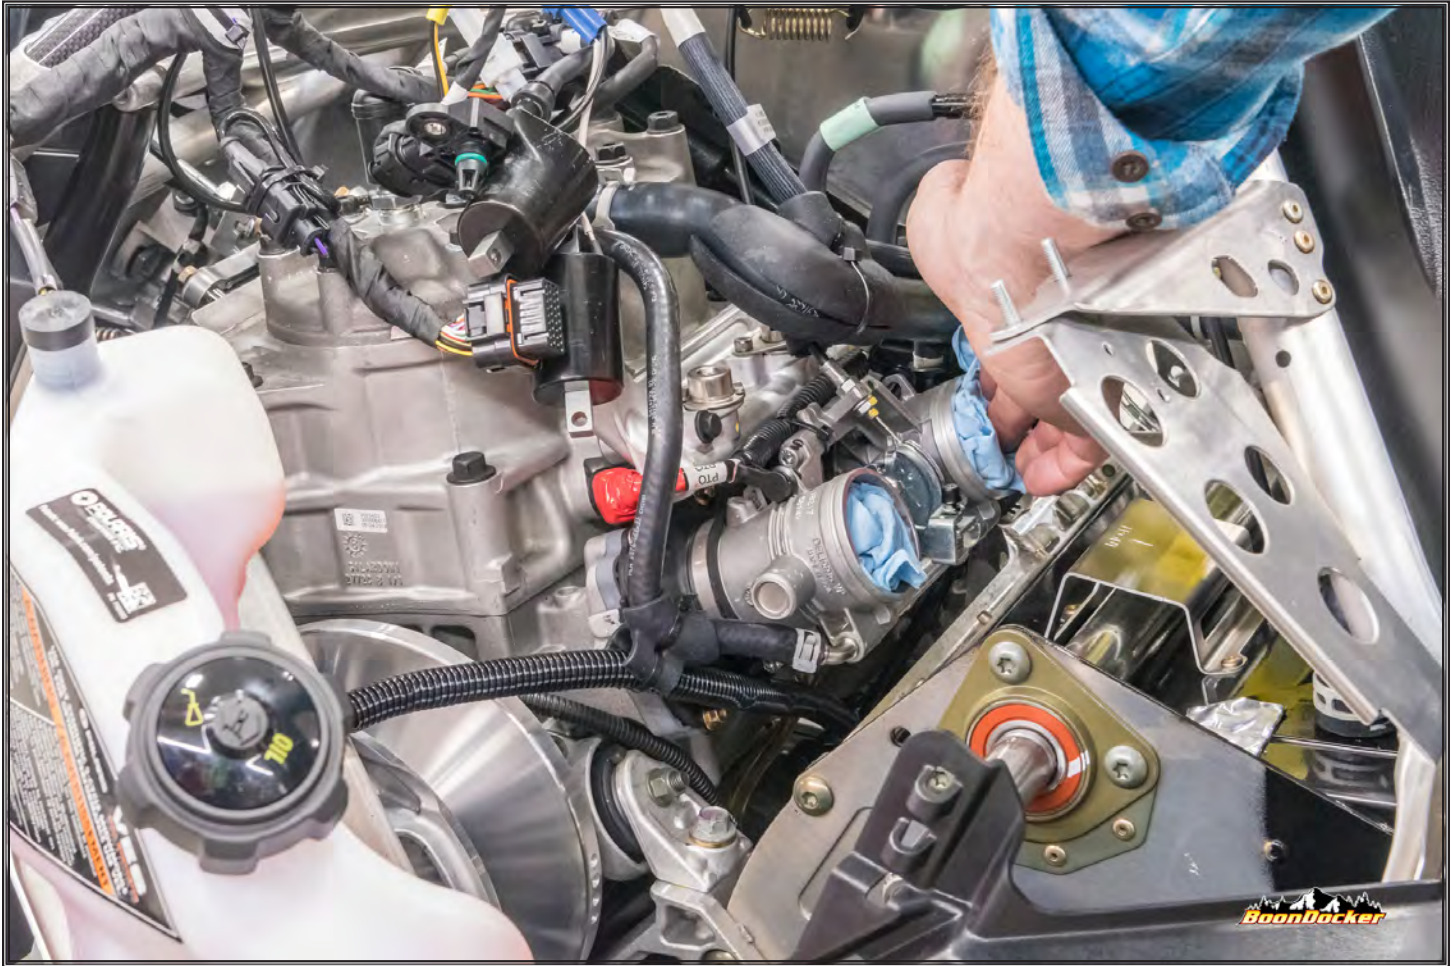

Prevent any foreign-object contamination by blocking off throttle bodies.

DO NOT USE any rag or towel that will shed particulates. DO NOT USE a rag or towel that is dirty or can shed debris.

Initial Teardown



Remove exhaust springs from muffler assembly

Initial Teardown



Cut the Zip-Tie to allow you to unplug the factory muffler-temp sensor. Unplug sensor from harness. Leave stock muffler-temp sensor probe installed in muffler (this part is not re-used with turbo installation). Remove muffler assembly from snowmobile.

Initial Teardown



Plug supplied resistor into harness, directly in place of factory muffler temp-sensor. Resistor is packaged with the control box and electronics.

Initial Teardown



Drill out rivets to remove jack-shaft guard. Remove jack-shaft guard. Clean up debris.

Deep Snow Muffler



DEEP SNOW MUFFLER INSTALLATION ONLY: Remove rear-skid bolts: (Mag side only on front ①, both sides for rear suspension attachment brackets ②). This will ease tension on the track and allow for easier access and re-installation.

NOTE: Slightly loosen rear hardware from both sides before removing hardware, otherwise, the hardware adhesive on those bolts may be difficult to remove

Deep Snow Muffler



DEEP SNOW MUFFLER INSTALLATION ONLY: Remove hardware from bulkhead/tunnel as shown (4 nuts and washers). You may need to use a screwdriver to loosen washers, as the factory will have applied glue to the back-side of the washer(s).

Deep Snow Muffler



DEEP SNOW MUFFLER INSTALLATION!

If you have a standard exit exhaust, skip next steps

Drill out rivets to remove stock exhaust guard and grommet.

NOTE: Before tipping sled, secure oil tank.

Deep Snow Muffler




DEEP SNOW MUFFLER INSTALLATION ONLY: Use supplied rivets to install exhaust block-off plate. Install the rivets from the bottom side, as shown. Some customers prefer to use silicone to seal the plate to the belly-pan. Either way is OK.

Deep Snow Muffler



DEEP SNOW MUFFLER INSTALLATION ONLY: Drill out rivets to remove foot-plate. Remove foot-plate (used in future steps)

Deep Snow Muffler

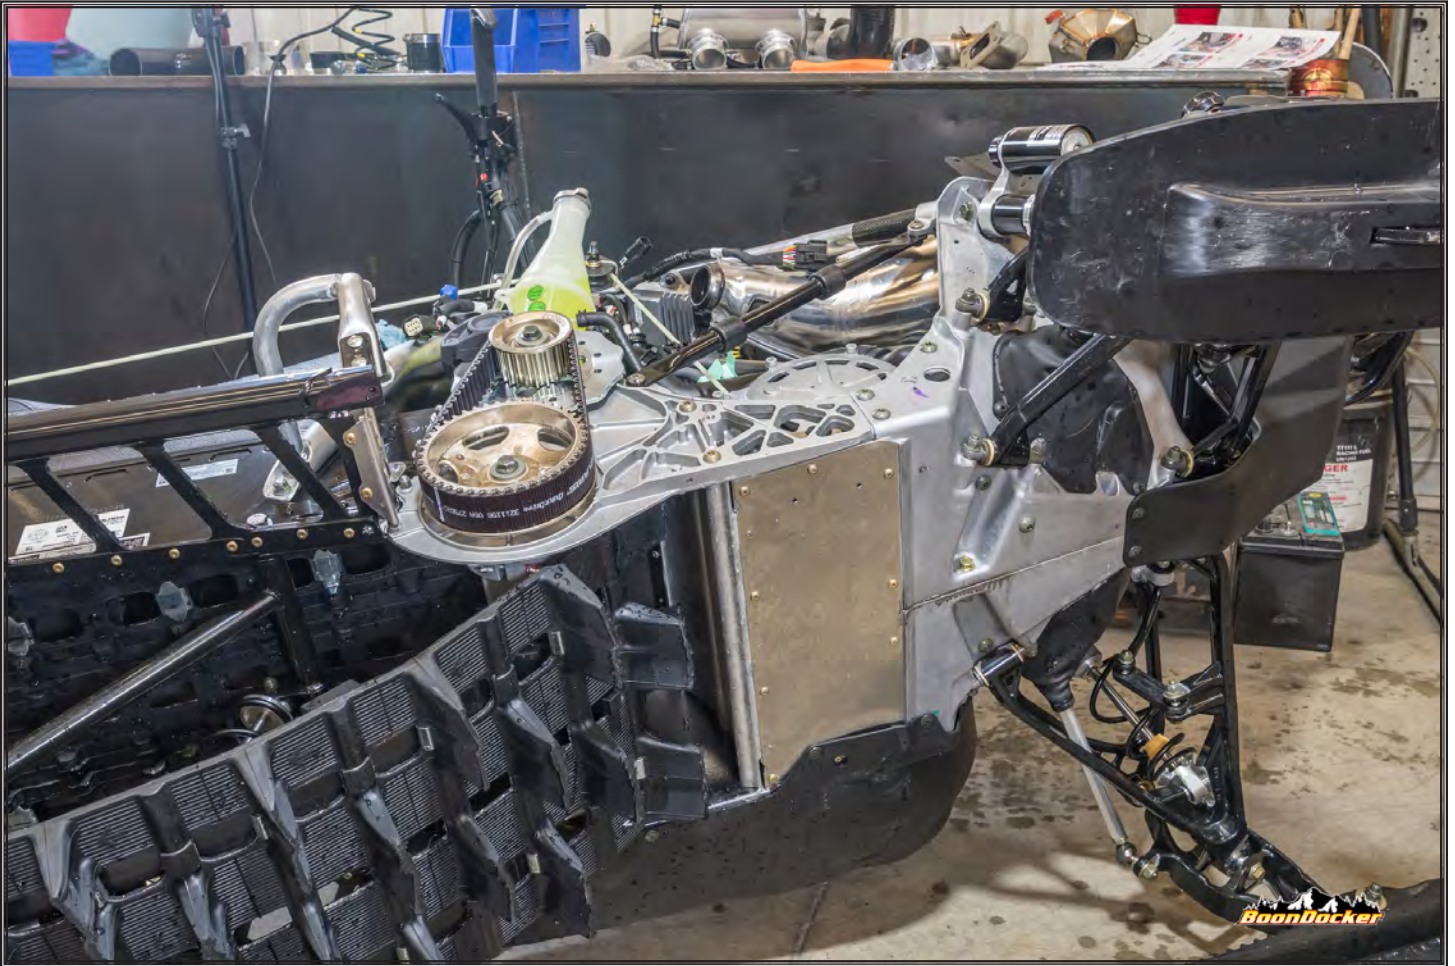

Remove the PTO-side belly-pan body panel

Deep Snow Muffler




DEEP SNOW MUFFLER INSTALLATION ONLY: Print off tunnel bracket template (included in instruction packet). Be sure to print it full-size. Cut out and align with bulk-head bolts AND rear-skid mounting hole. Properly printed, the template will exactly fit the pattern of bolts. Trace cut line per template. Cut hole in tunnel. Use a 2 3/4 hole saw to start the process, using existing rivet as a pilot hole. Use a saw and/or die-grinder to complete cut.

MAKE SURE TRACK IS CLEAR WHEN CUTTING HOLE TO PREVENT DAMAGE.

NOTE: If you tip the sled to drill this hole, cover the engine compartment to prevent metal shavings from entering the MAG side of the motor.

Deep Snow Muffler

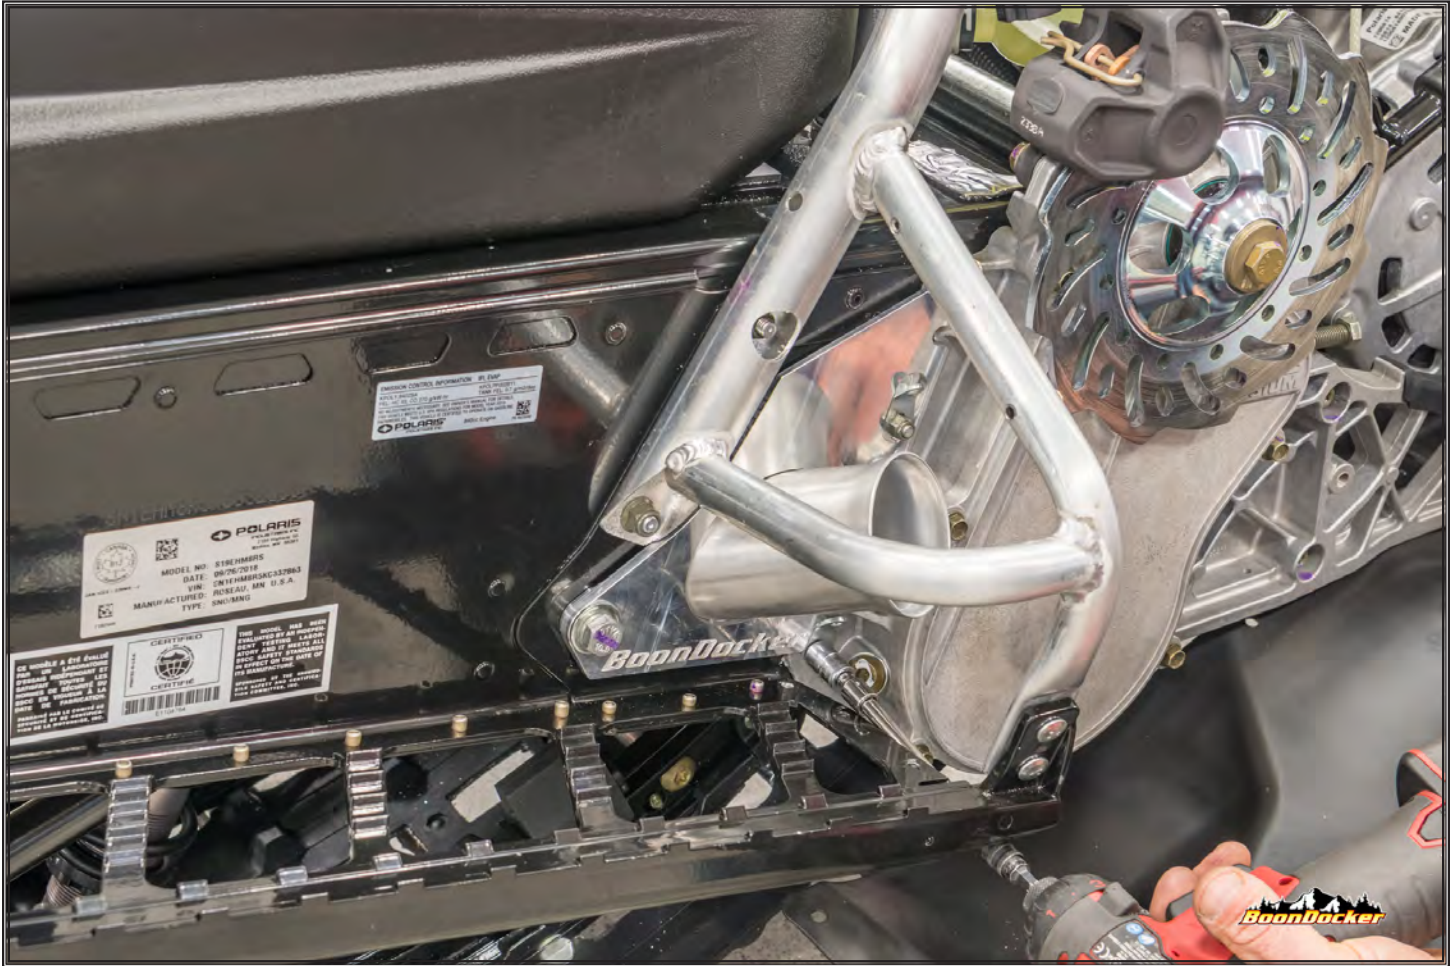

DEEP SNOW MUFFLER INSTALLATION ONLY: Install tunnel-bracket and spring tabs as shown. Don't install the supplied stainless exhaust sleeve into the bracket, yet. Tabs should be oriented "up", following the recessed groves in the tunnel plate. Re-install rear-skid mounting hardware. Tighten to factory spec. Expect to use the track as leverage to align bolt holes. Start with the front bolt, then do the rear bolts.

Oil System



Use a hammer and punch to knock the centers out of the rivets that secure the belly-pan access panel. Drill out all rivets. Two rivets are located beneath the PTO-side belly-pan body-panel, that can be accessed by using a pry-bar on that panel.

Oil System



Use a torch to heat the glue that secures the belly-pan access panel to the chassis.

NOTE: It will take significant heat to release the glue. Snowmobiles may have fuel and/or oil residue that may be flammable. Clean up any spilled fuel/oil in the work-area. Make sure you have a fire extinguisher nearby as a safety precaution.

Oil System




Use a pry-bar to free the access-panel from the snowmobile.

Oil System



Use a hammer and cold chisel to knock down the high spots of glue.

Oil System

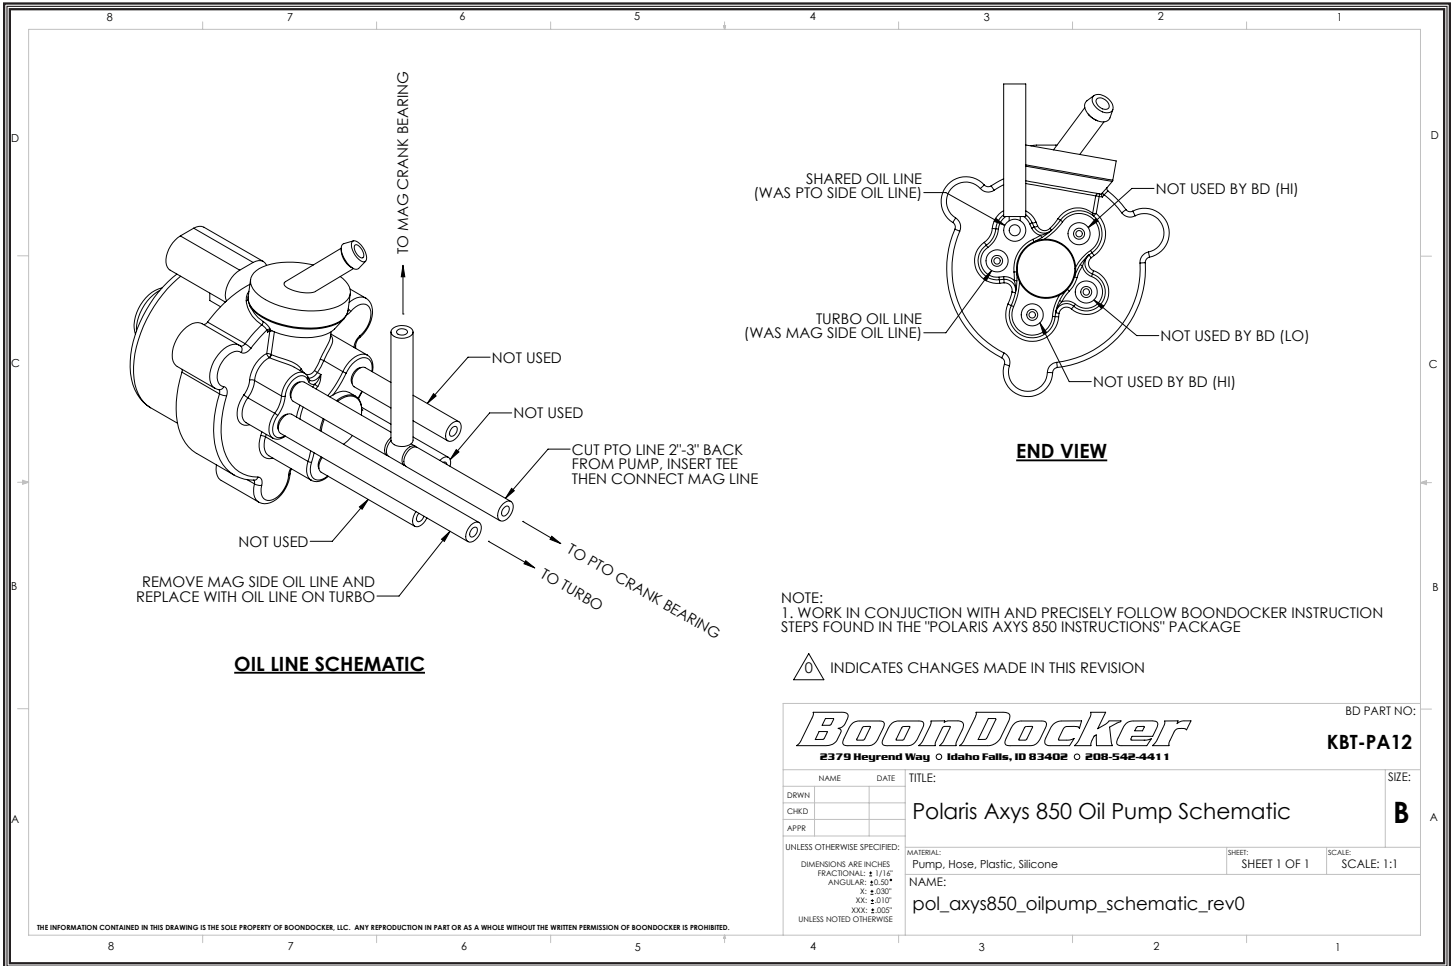

Oil Pump plumbing schematic (for next steps)

Oil System



Push the top of the oil pump, down, towards the PTO-side of the snowmobile and twist towards the nose of the snowmobile to remove oil pump from bracket.

DO NOT APPLY EXCESSIVE FORCE. The oil pump bracket is plastic. Do not break.


NOTE: Cut the Zip-Tie that secures the wiring connector for the oil pump from the harness. **PAY ATTENTION** to how this is secured, especially how the Zip-Tie prevents the connector from accidental disconnection. This Zip-Tie provides strain relief to the wires, prevents the wires from rubbing, and acts as a secondary lock to prevent the wires from coming unplugged.

Oil System



With oil pump pulled AND oriented as shown, cut oetiker clamp from MAG-side crank-end bearing oil feed line as shown. Remove line from pump.

Oil System

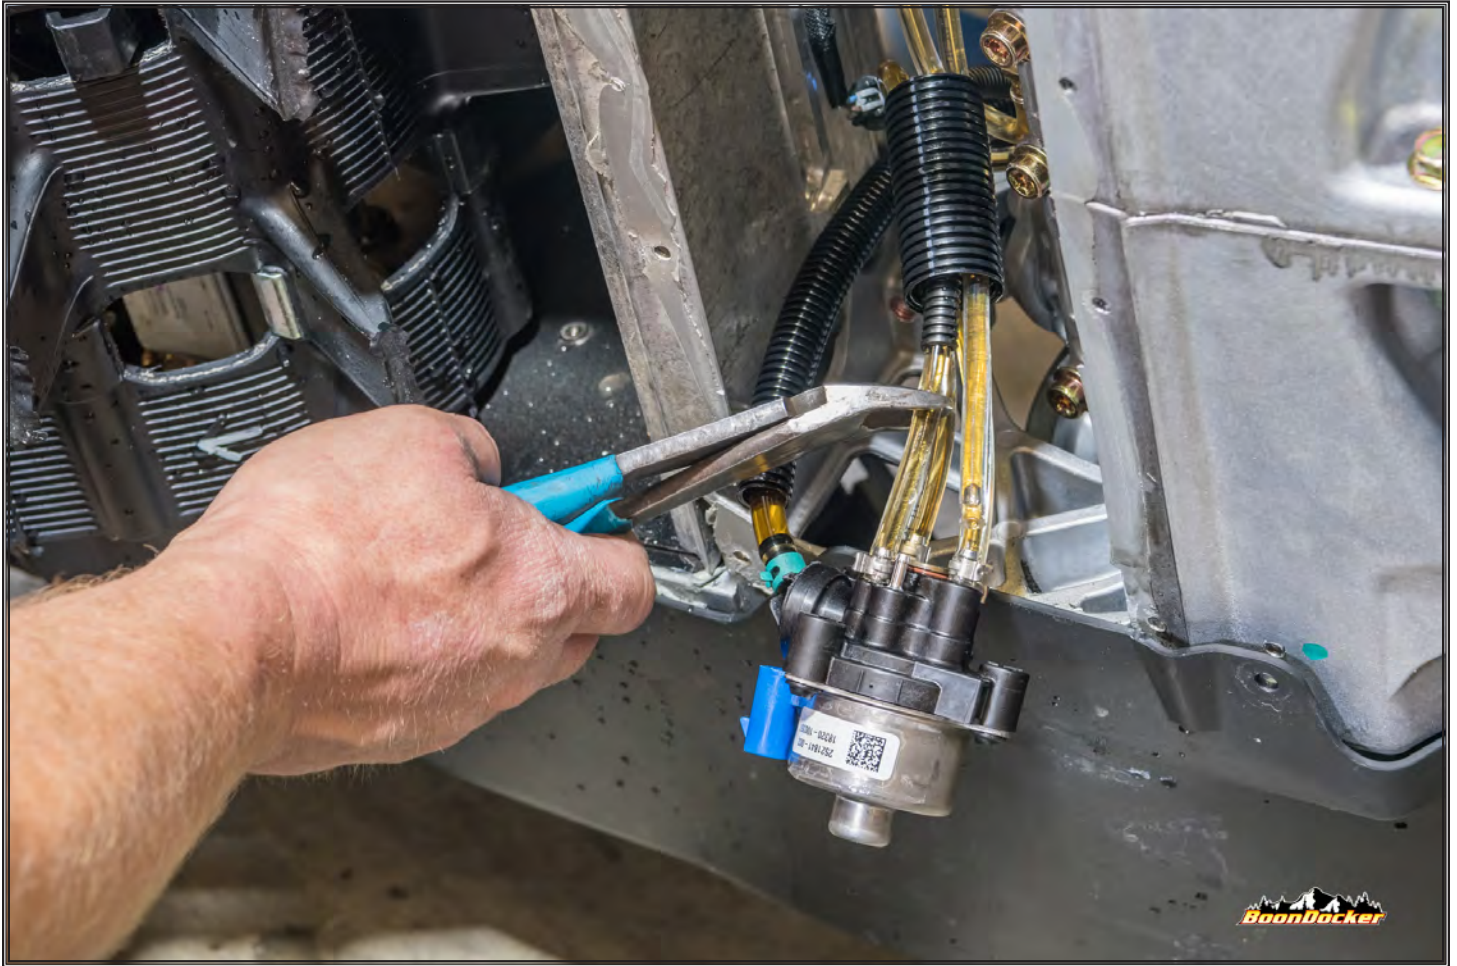

Cut PTO-side crank-end bearing oil feed line approx 2-3" below barb from oil pump. NOTE: Mag-side has been disconnected in previous step.

Oil System



Pull the PTO-side crank-end bearing oil feed line that was cut in the previous step from the large-diameter convoluted tubing, as shown.


Oil System



Install supplied barbed-Tee as shown, teeing together the MAG and PTO crank-end bearing lines.


NOTE: Zip Ties are not necessary on the oil lines terminating to the barbed Tee

Oil System

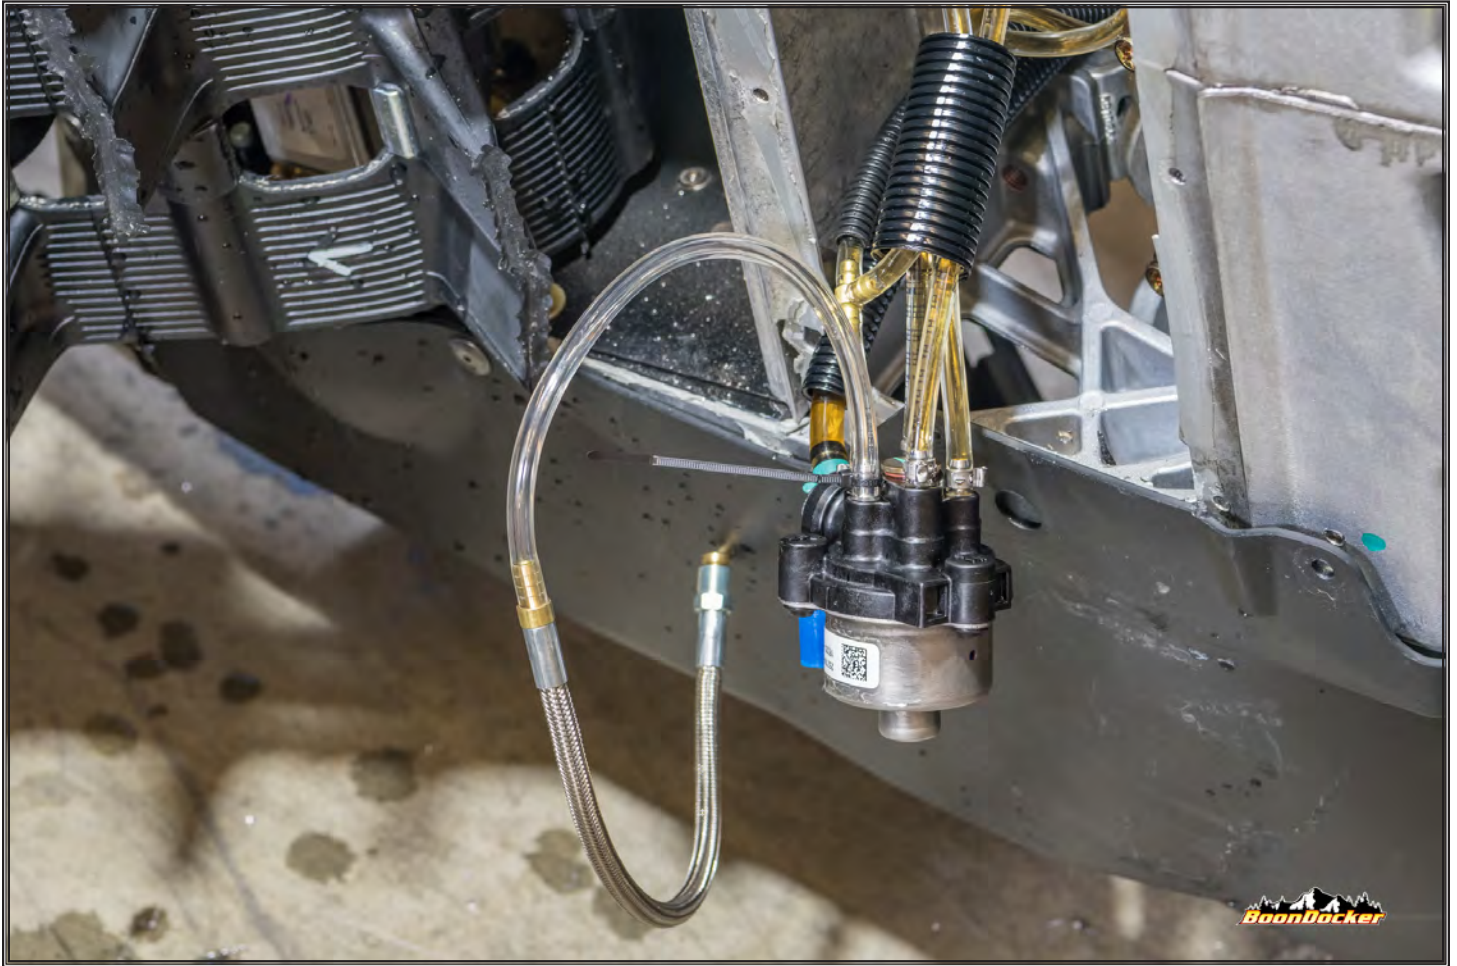

Install provided oil line (clear hose to stainless-braid) to remaining barb on the oil pump. Use Zip Tie to secure line to oil pump. Feed the braided stainless end beneath motor and out the MAG-side of the chassis (shown in next step).

Oil System

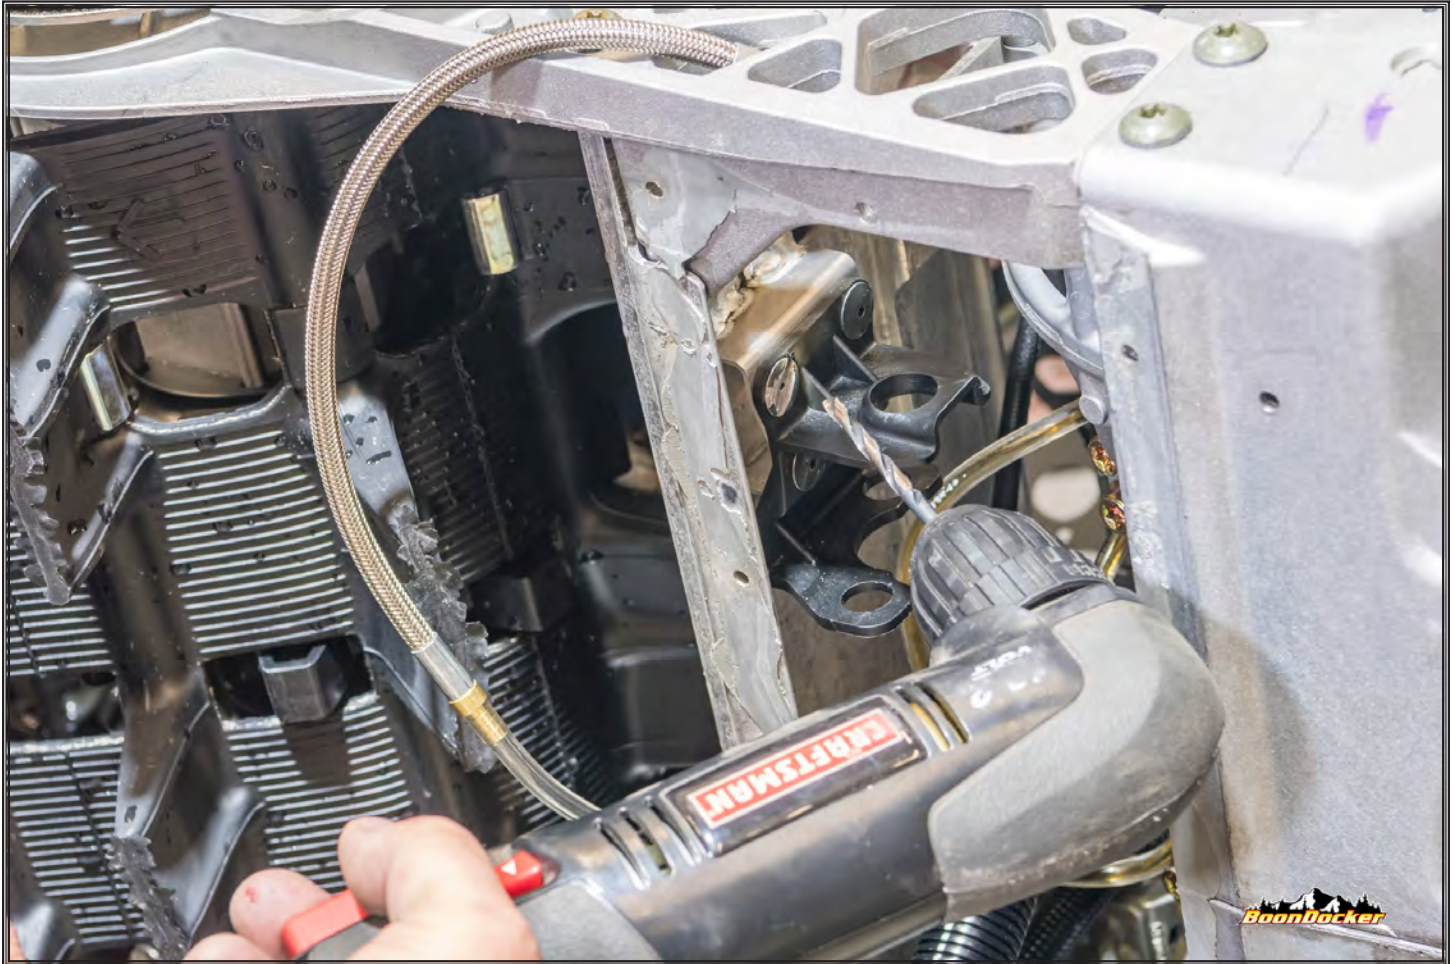


With oil pump set aside, use a angle-head drill to remove rivets securing oil pump bracket.

Oil System




Using supplied rivets, attach factory oil pump bracket to provided relocation mount, as shown. YOU MUST do this step before installing the relocation bracket into access panel.

Oil System

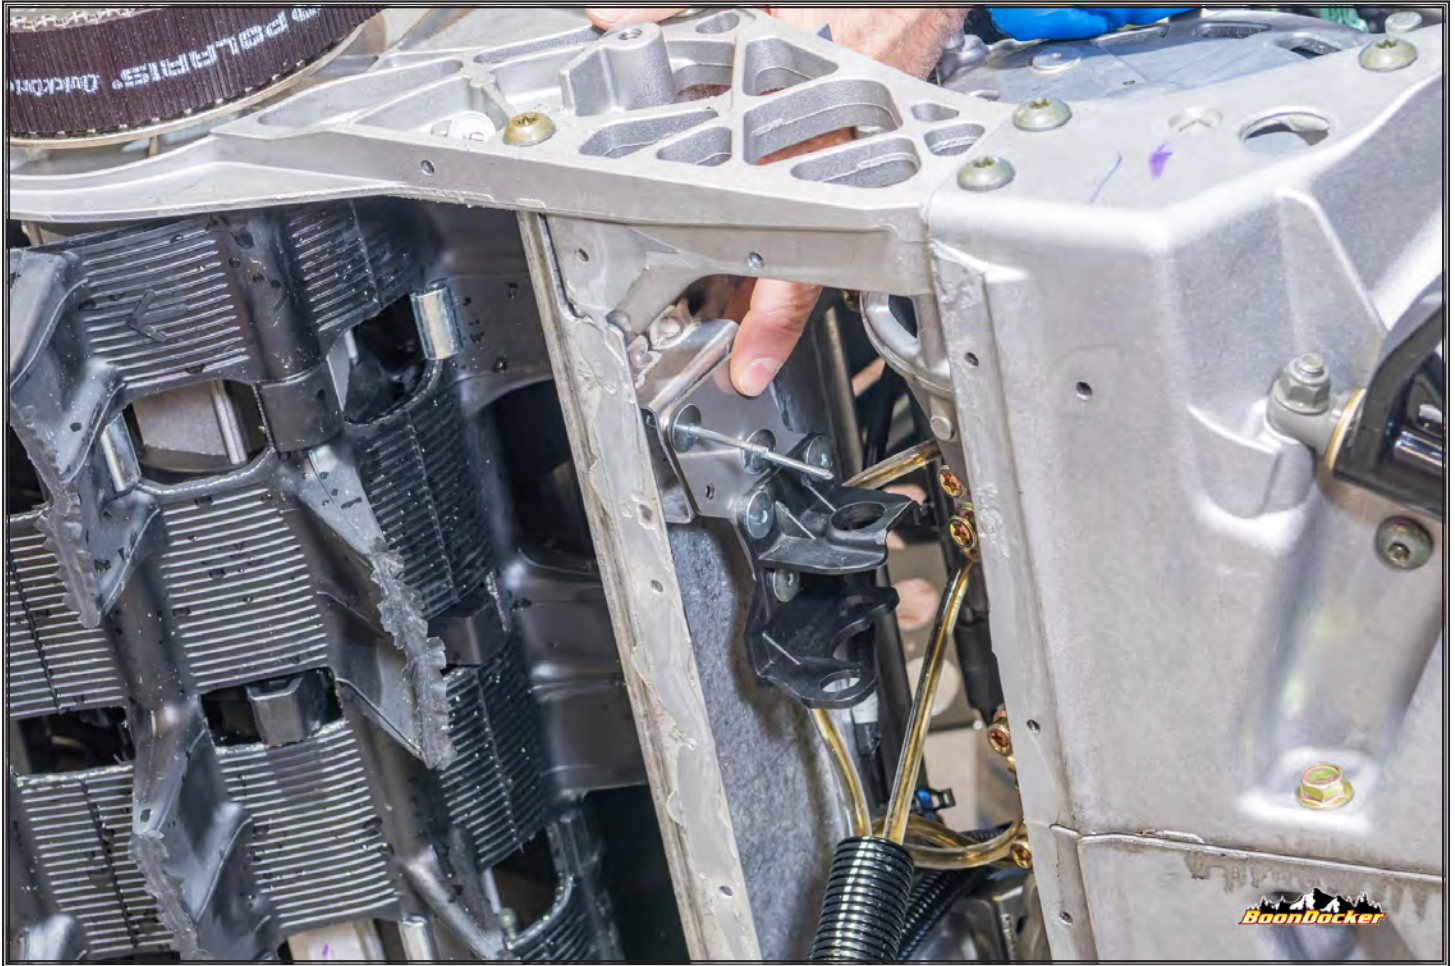

Use supplied rivets to attach oil pump relocation mount as shown.

Oil System

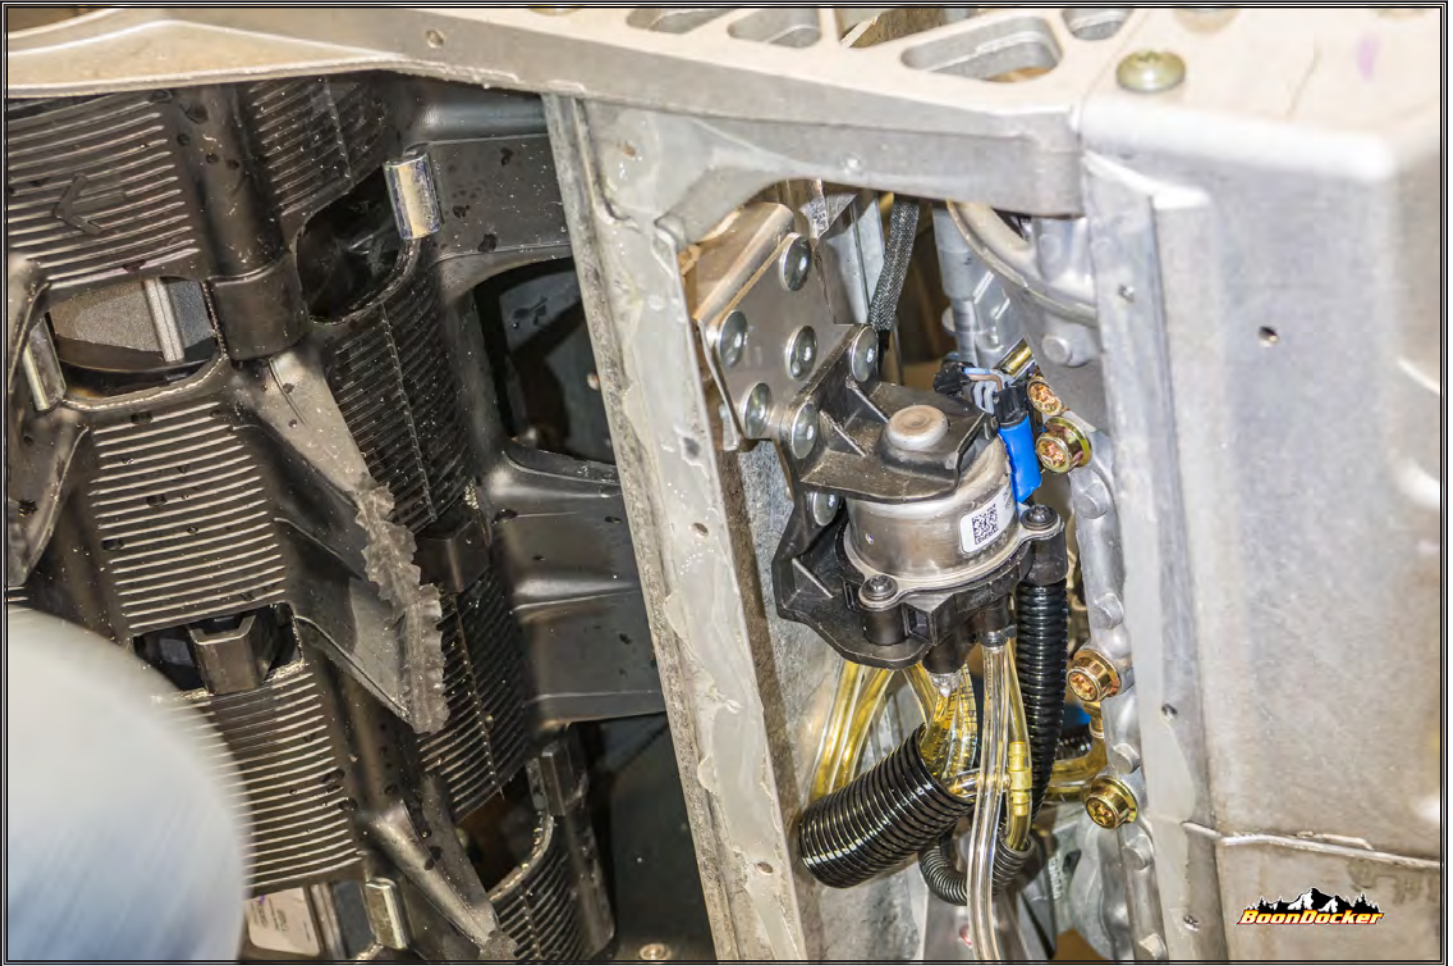


Reinstall oil pump. Connect the factory harness plug to the oil pump. Take caution to avoid excessive force and/or breaking the oil-pump bracket.

NOTE: Verify oil lines are free of kinks. Using zip ties to prevent chafing. If you have chafing concerns, use 1/4" split-loom tubing (provided, trim to fit, install on exposed oil lines) to restrain oil-feed lines.


NOTE: When reconnecting the factory harness to the oil pump, Zip-Tie the plug/connector exactly how it came from the factory. Specifically verify that the Zip-Tie is holding the locking mechanism on the connector and that you're providing proper wire-tension relief.

Oil System

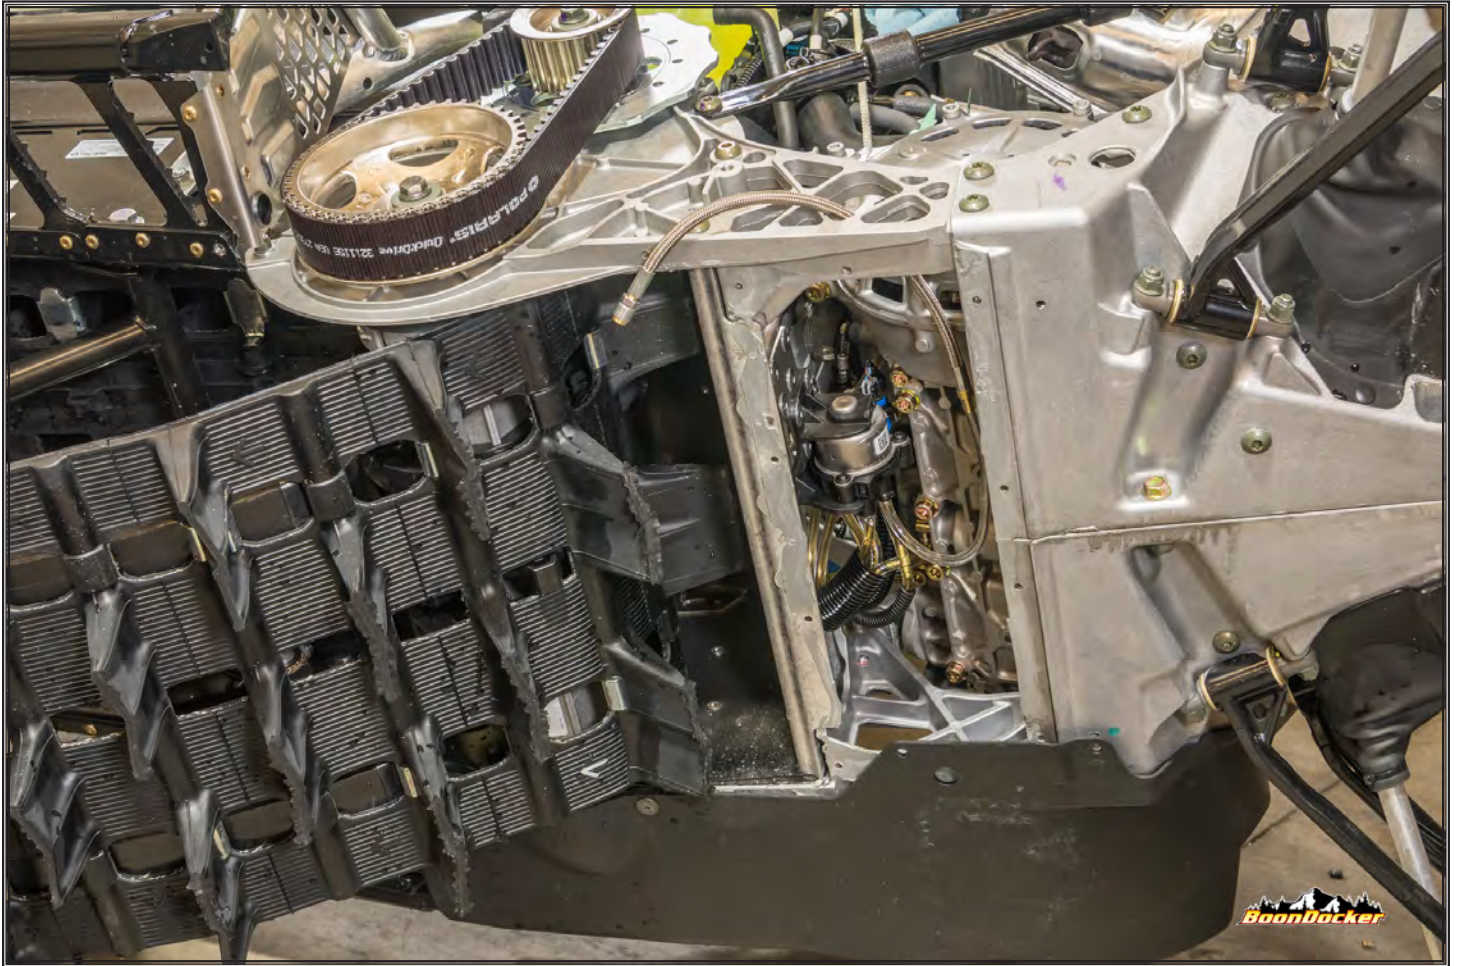


Route the turbo-oil-feed line installed previously, out the MAG-side of the chassis as shown.

Intercooler

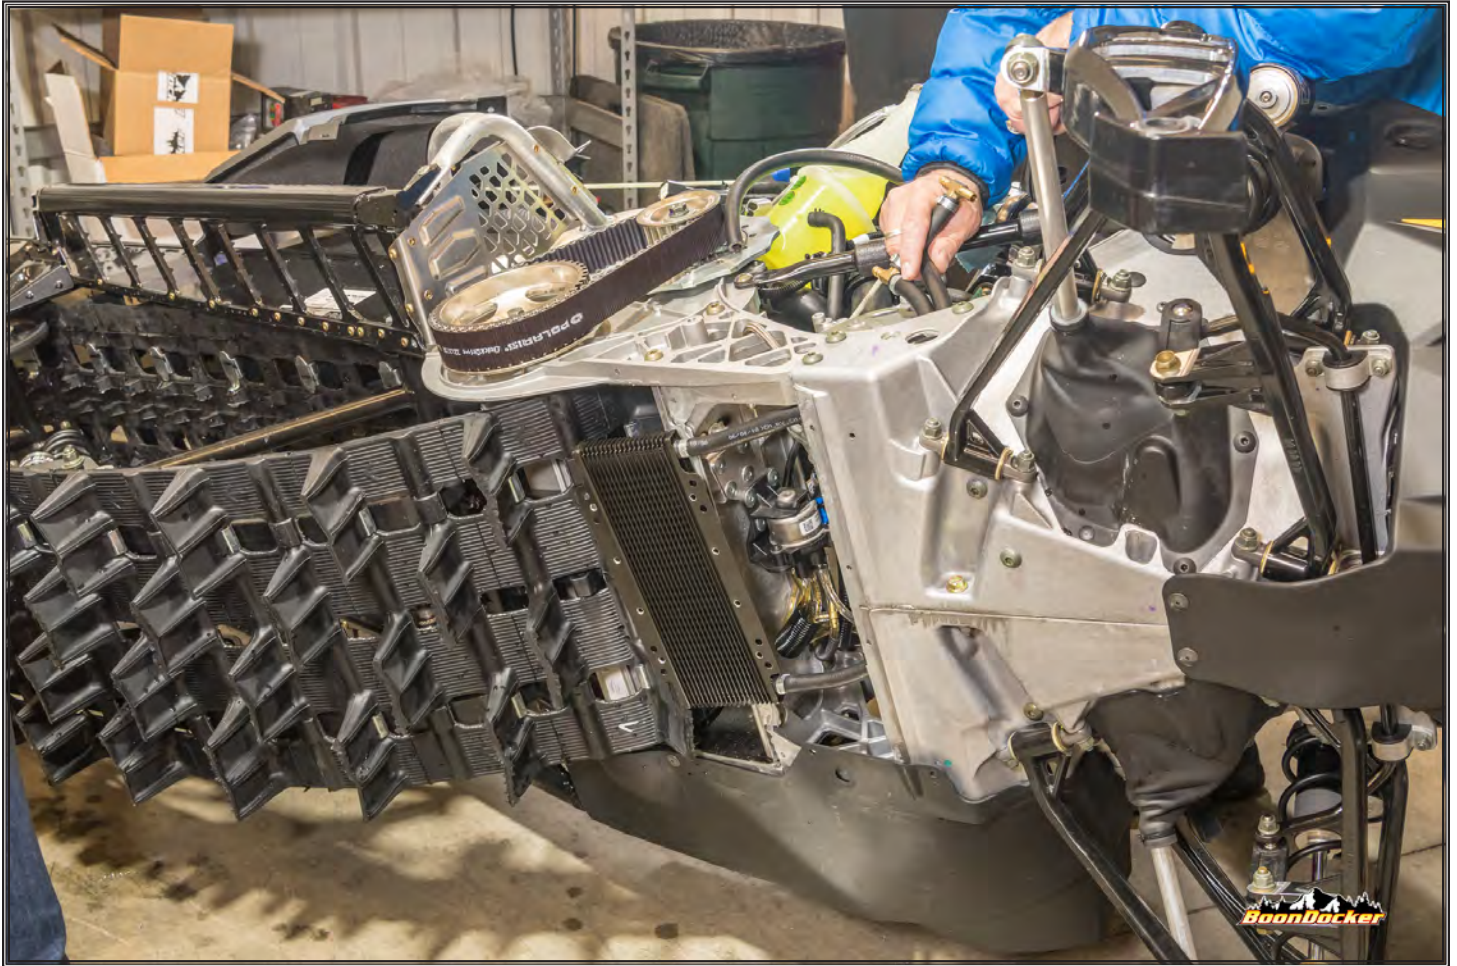

Feed the coolant lines for the radiator to the forward side of the chassis, as shown. Loosely route along the MAG cover for next steps. Verify coolant lines do not interfere with steering.

Intercooler

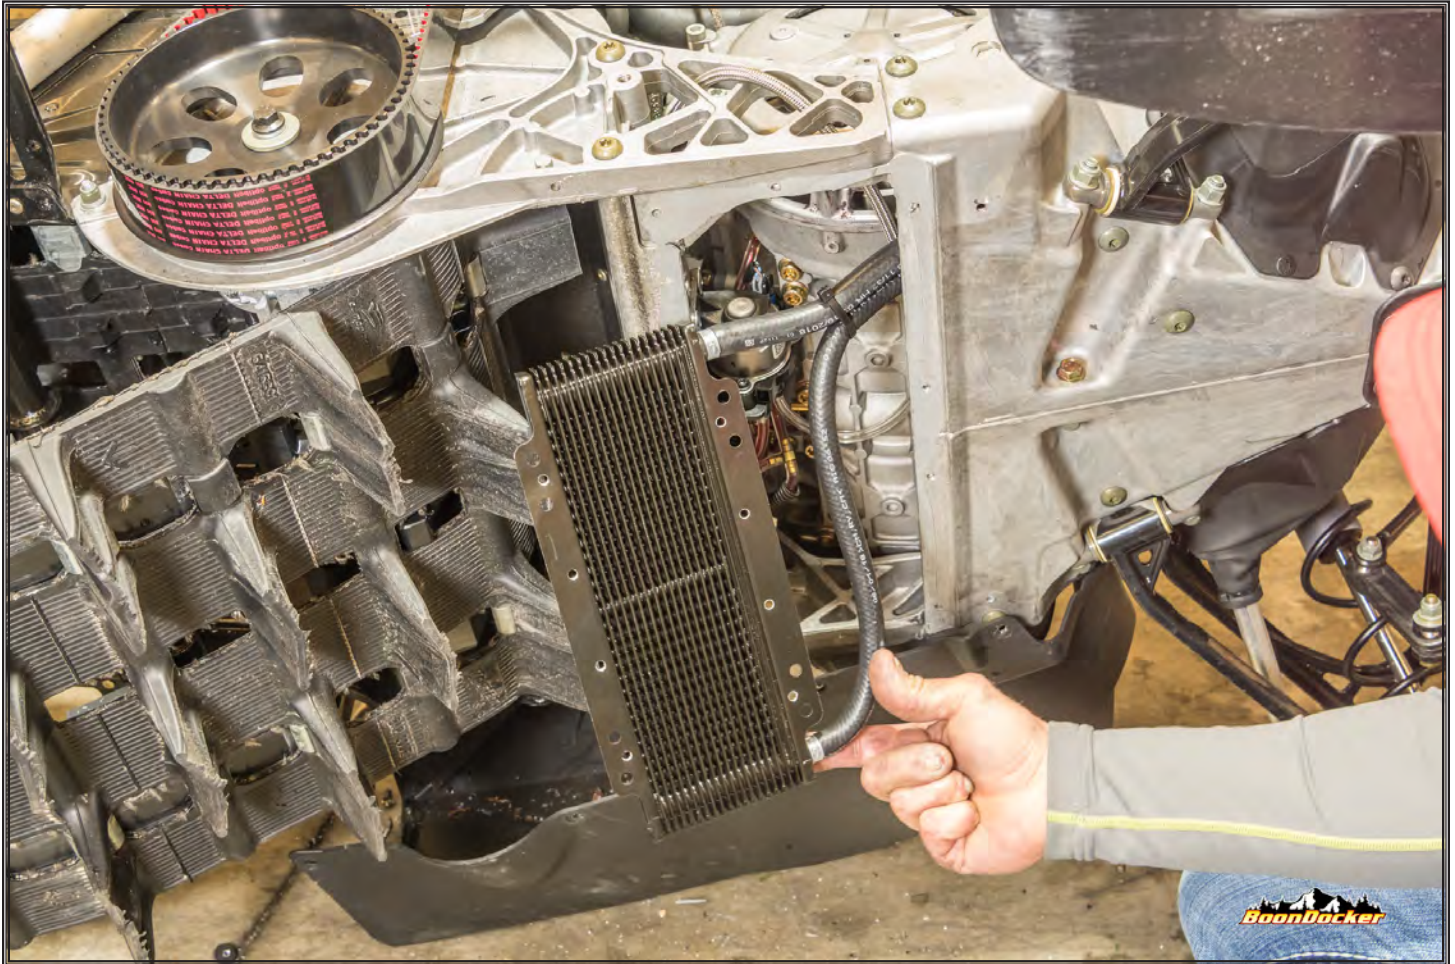

Zip Tie coolant hoses together to minimize strain and wear. Verify coolant lines do not interfere with steering.

Intercooler




Use supplied rivets to attach the radiator-trim plate to the chassis. The radiator will be loose. **ONLY** install the four (4) outer-corner rivets, that **DO NOT** attach to the radiator.

Intercooler



Use a pry bar to GENTLY hold the radiator against the trim plate. Take EXTREME caution to not damage the radiator. Keep several rivets (unattached), on opposing sides of radiator, as a guide. Once the holes line up, begin fastening rivets.

Intercooler

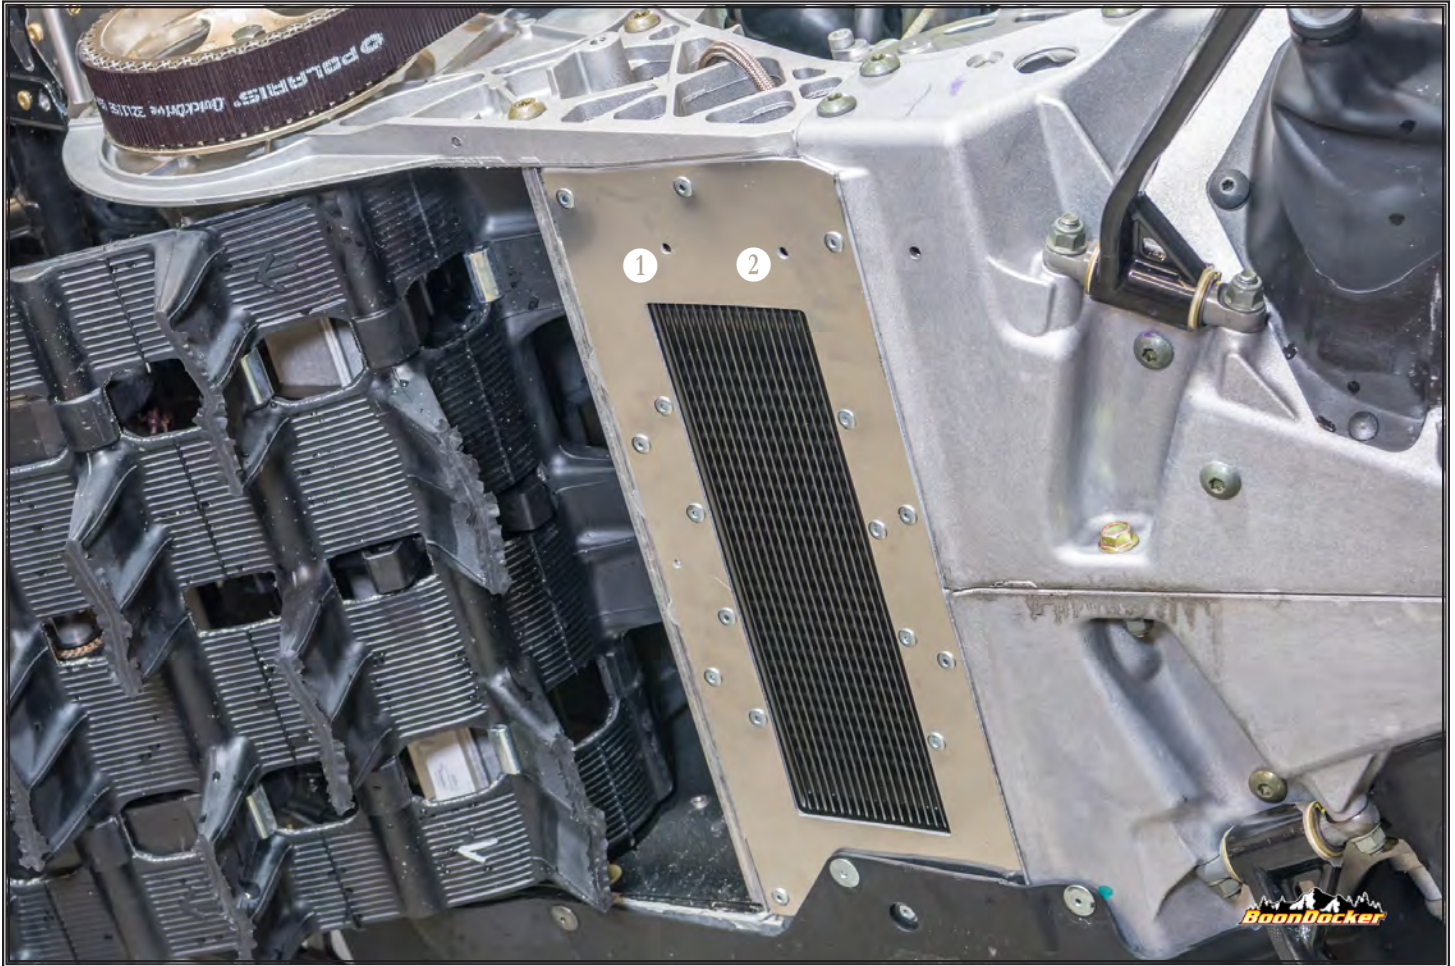

Once the radiator is secure and the trim plate is properly in place, install the remainder of the rivets as shown. Leave demarcated holes ①, ② vacant (will be installed during re-assembly of body panels).

Cooling System



Use hose-pinch tool to block off coolant line to throttle bodies on PTO side to prevent back-feeding while draining coolant bottle.

Cooling System



Loosen tension clamp on outer barb of coolant bottle as shown. Have catch container available to contain coolant spillage. Drain fluid from coolant bottle. Use hose-pinch tool to prevent coolant from spilling out of coolant line.

NOTE: Vapor lock may prevent coolant from escaping coolant bottle. Crack the lid of the coolant bottle, once you have a catch-pan in place, to relieve vacuum.

NOTE: There is a baffle inside the bottle, so you cannot siphon coolant out.

Cooling System



Remove hose-pinch tool and drain coolant from line that runs to MAG-side of throttle bodies.

Cooling System



Set aside coolant to reuse. Remove coolant hose and clamps (running from PTO-side of throttle bodies to coolant bottle). Clamps are used in future steps. (Hose is not reused).

Turbo / Exhaust




REMOVE PIPE: Remove EGT probe from pipe to allow working space. Remove exhaust springs and factory pipe. Take care to preserve exhaust graphoil gasket.

Turbo / Exhaust



Inspect graphoil gasket. Replace if necessary. Use high-temp silicon to coat the outer surface of the graphoil gasket.

Turbo / Exhaust

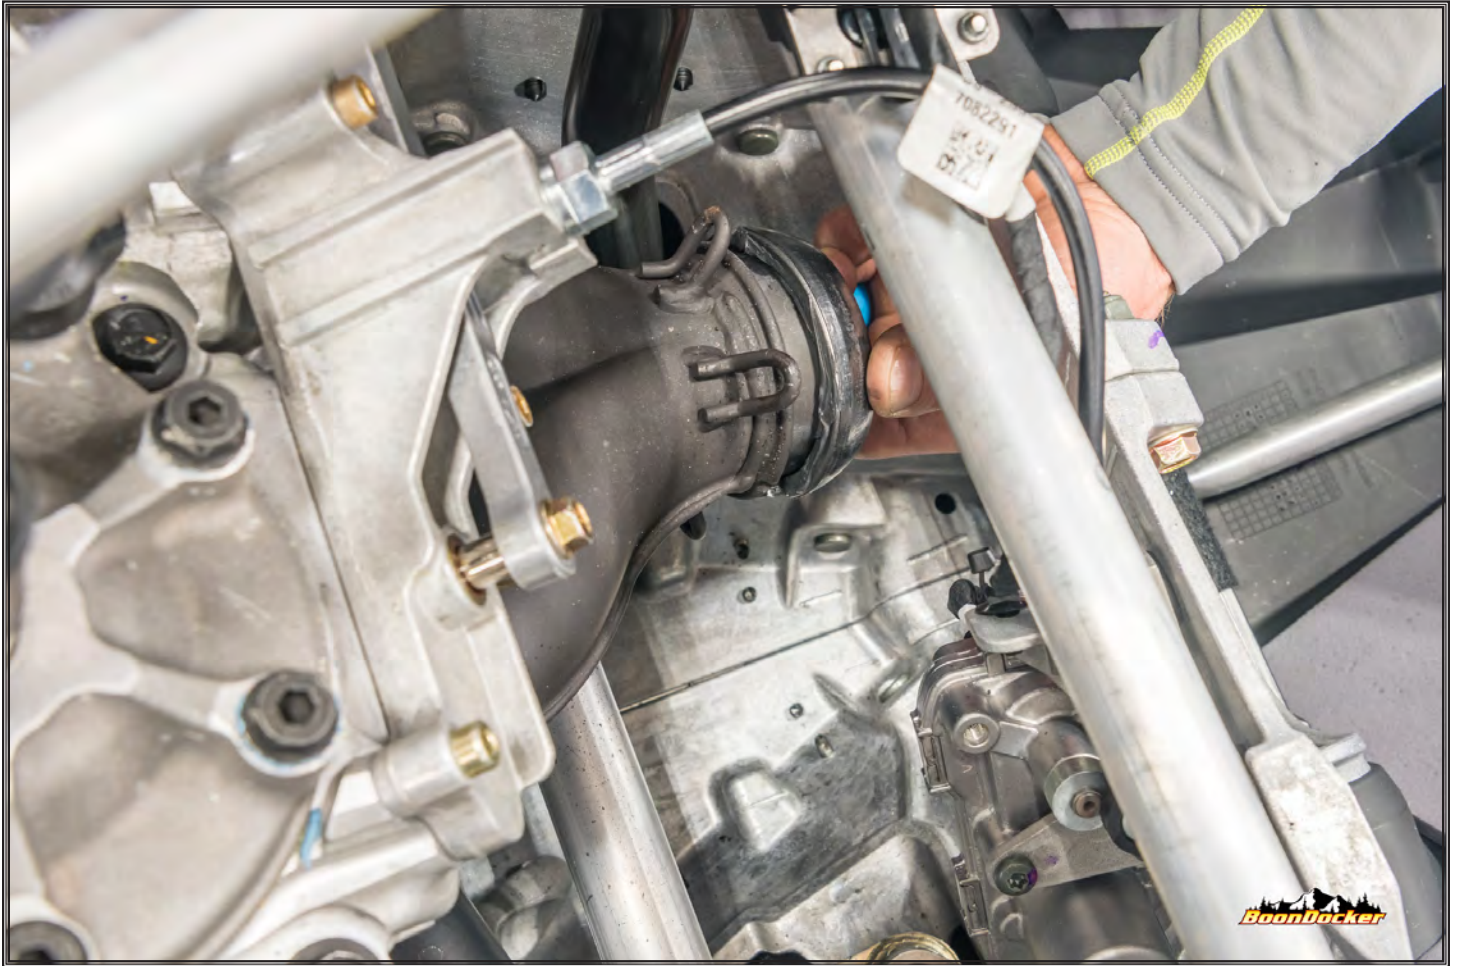


Reinstall graphoil gasket using alignment tab on Y-pipe.

Turbo / Exhaust



Use high-temp silicon to coat the inner surface of the factory pipe, on the motor-side.


Turbo / Exhaust

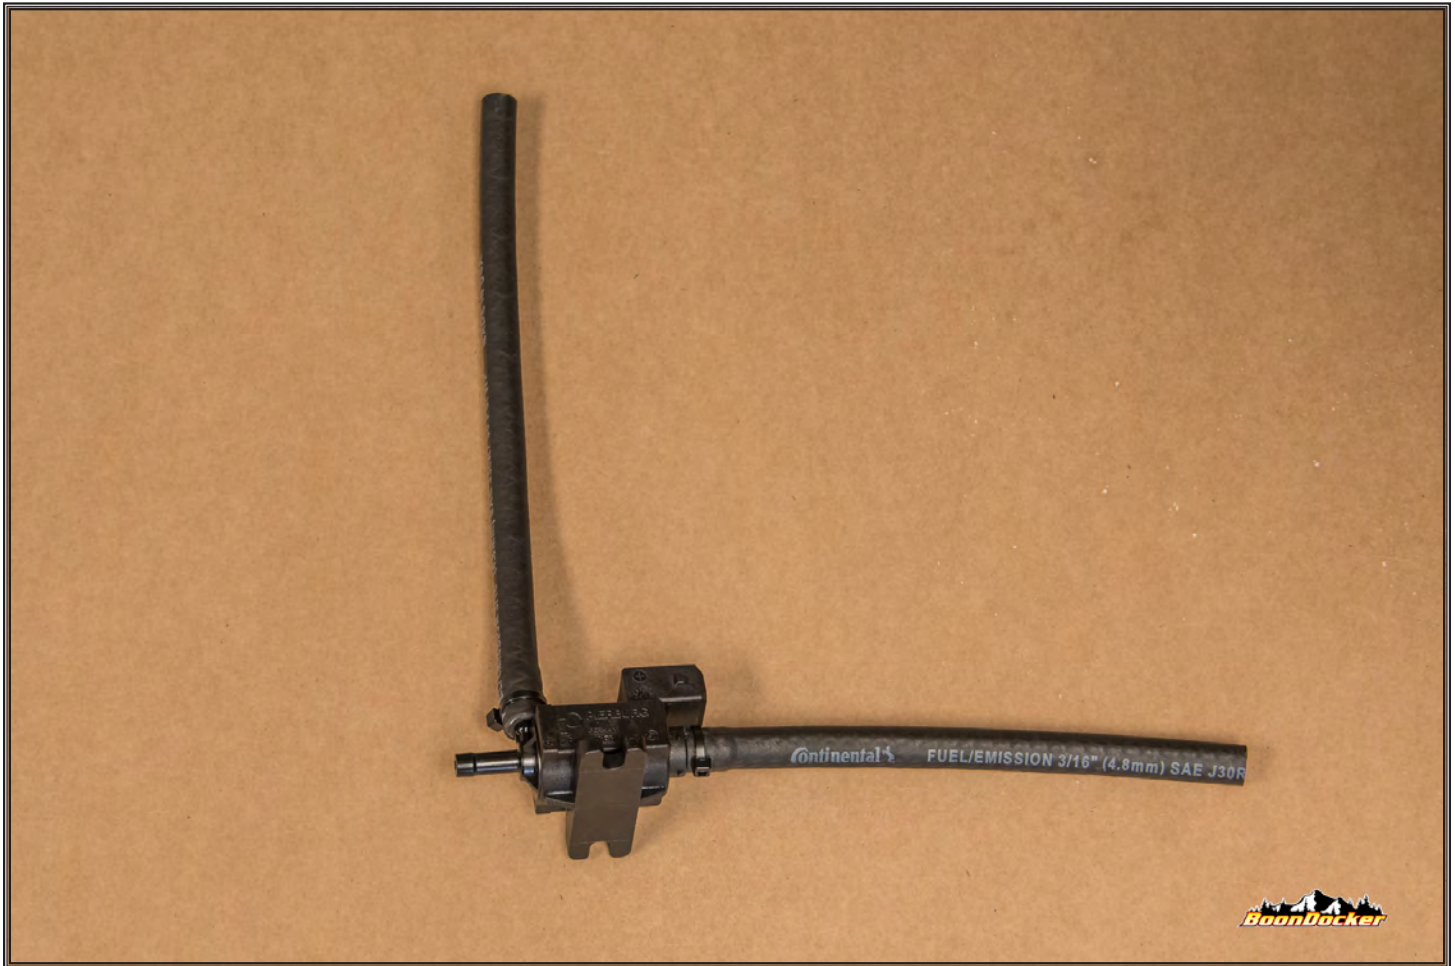

Replace Boost Reference Line: This solenoid, for shipping is partially fastened to the turbo bracket. Orient as shown, and follow the next steps.


NOTE: Solenoid ships with "non-intercooled" length of hose between solenoid and charge tube (or intercooler). This needs to be replaced with the 8" section of hose provided in the Intercooler Kit Bag.

Turbo / Exhaust

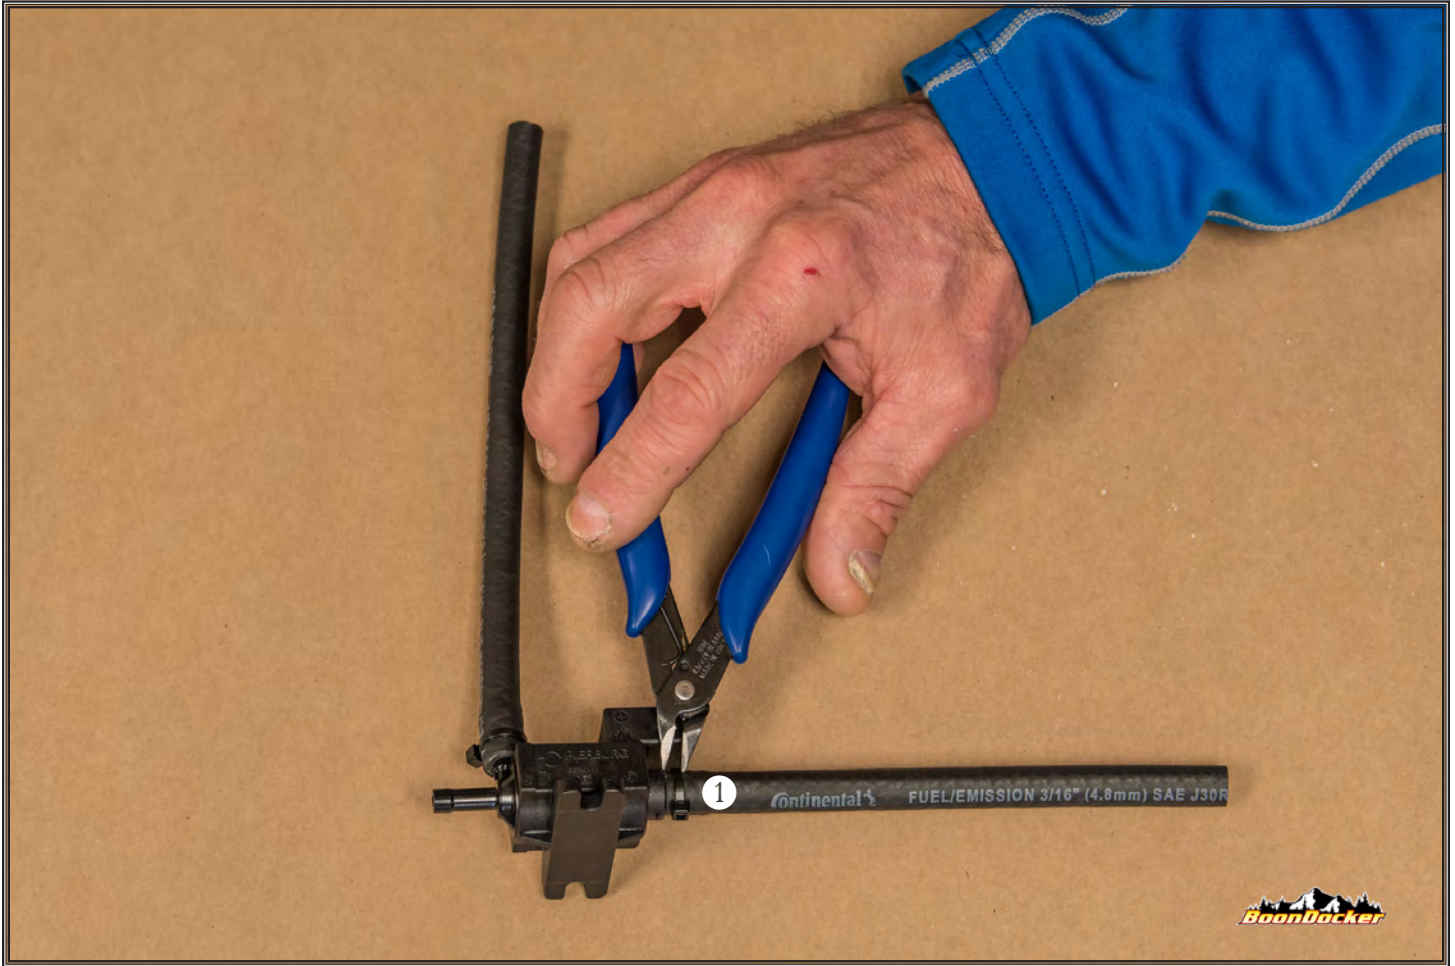


Cut Zip Tie ❶ and remove tube from solenoid.

Turbo / Exhaust

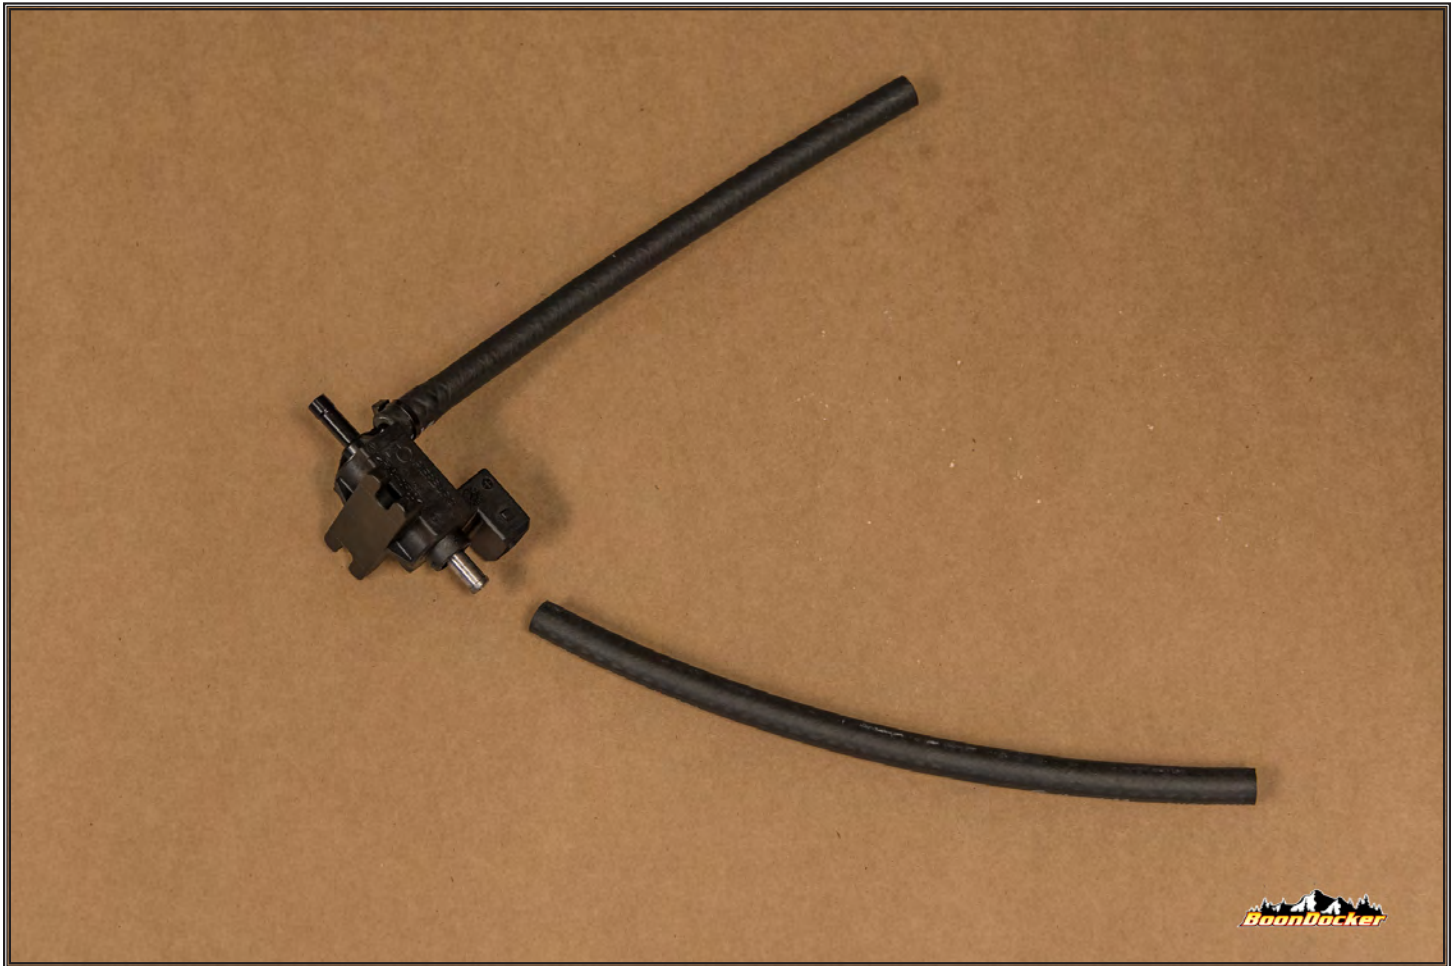

Install "Intercooler" 8"-length of tube.

Turbo / Exhaust

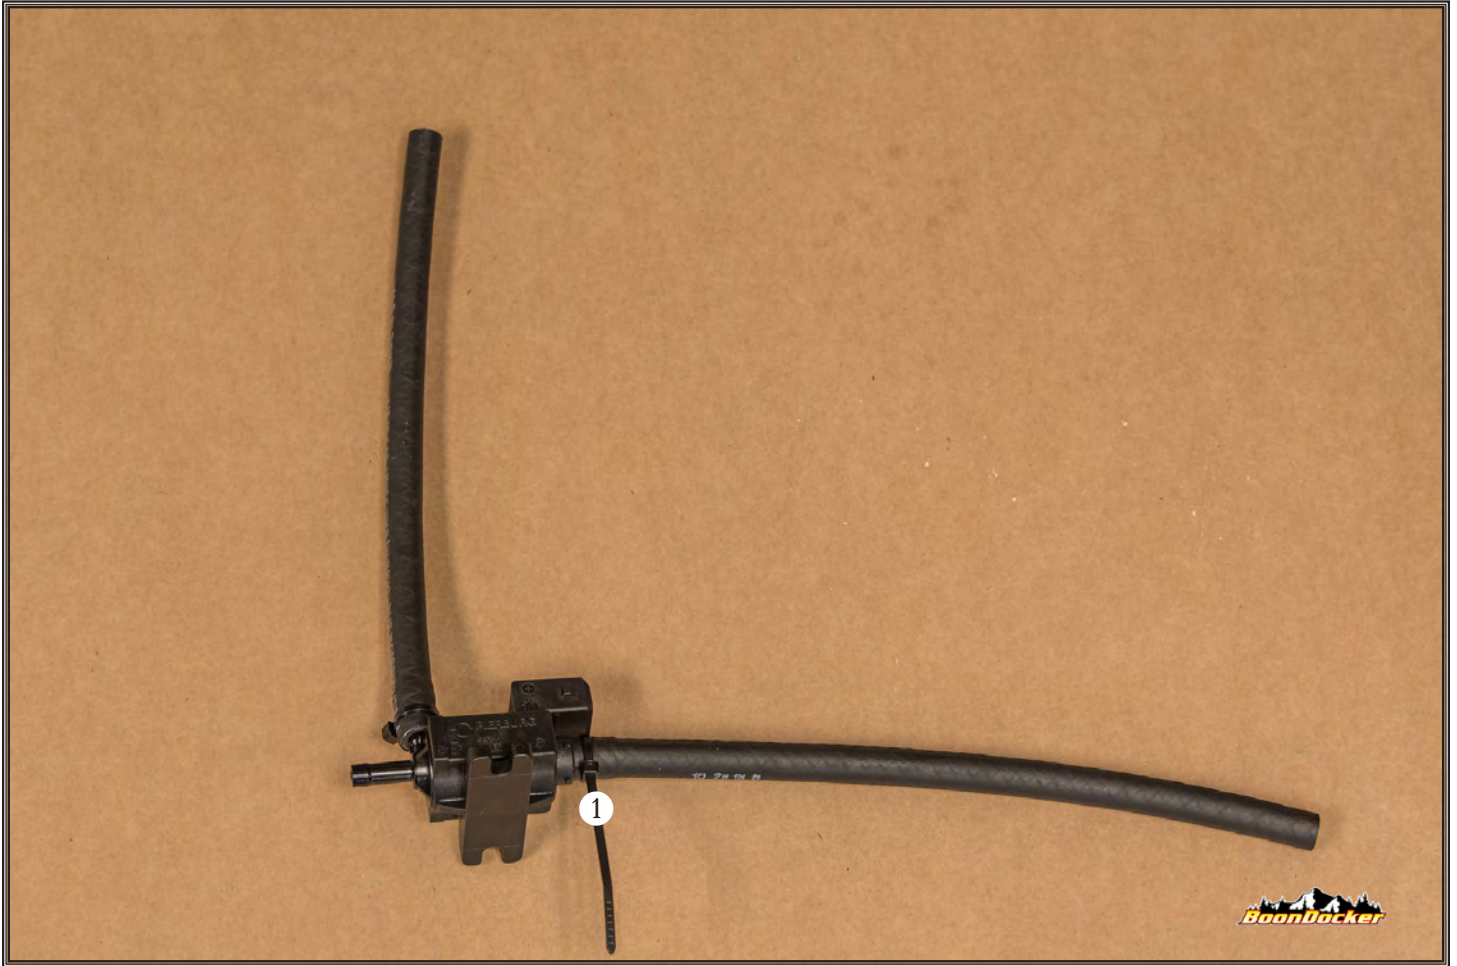

Secure with Zip Tie ❶, and trim Zip-Tie tail.

Turbo / Exhaust



Install supplied air solenoid on turbo bracket as shown.


Turbo / Exhaust



Use supplied syringe to create a vacuum (you **MUST** use vacuum to suck the oil, **NOT** push oil) that will prime 2-stroke oil through the factory pump and through the line to the turbocharger (turbo-feed line). Once line is primed, connect oil-feed line to turbocharger.

NOTE: Immediately connect the oil-feed line to the turbocharger to prevent oil from spilling out of the line and losing the oil-prime that was conducted in this step.


Turbo / Exhaust

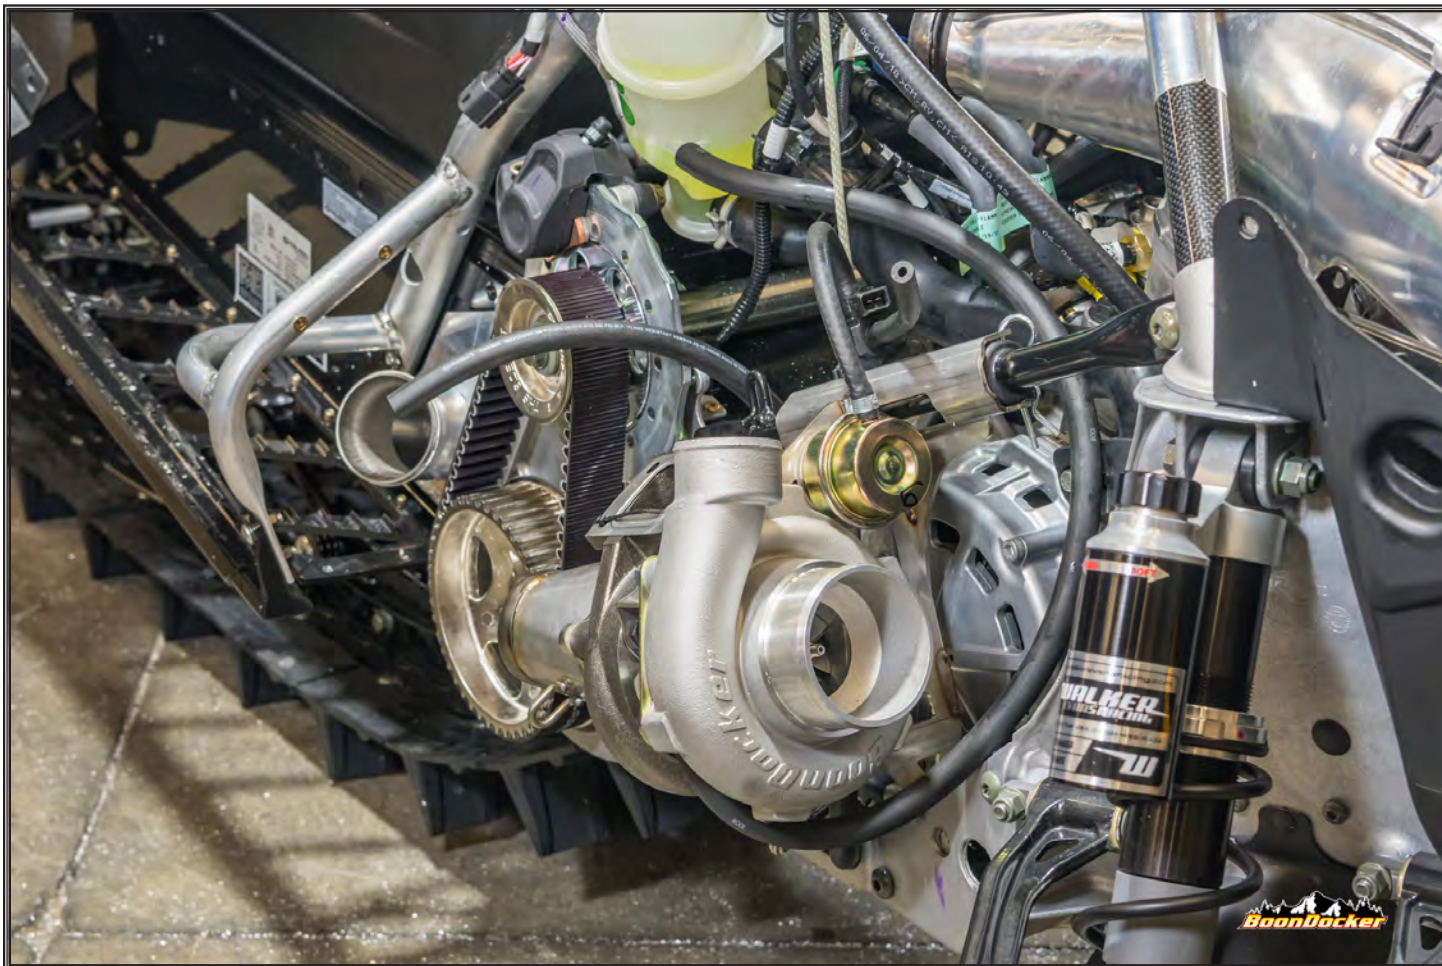

Route outer coolant line from turbo forward (as shown) and connect to coolant bottle. This is temporary, to allow you to make a cut. Don't worry about hose-clamps at coolant bottle. [THIS IS DIFFERENT THAN NON-INTERCOOLED ROUTING].

Route the inner coolant line on the turbo to the throttle-bodies. Route it through the chassis, in the same window as the turbo-oil-feed-lin (previous step).

Intercooler cont'd

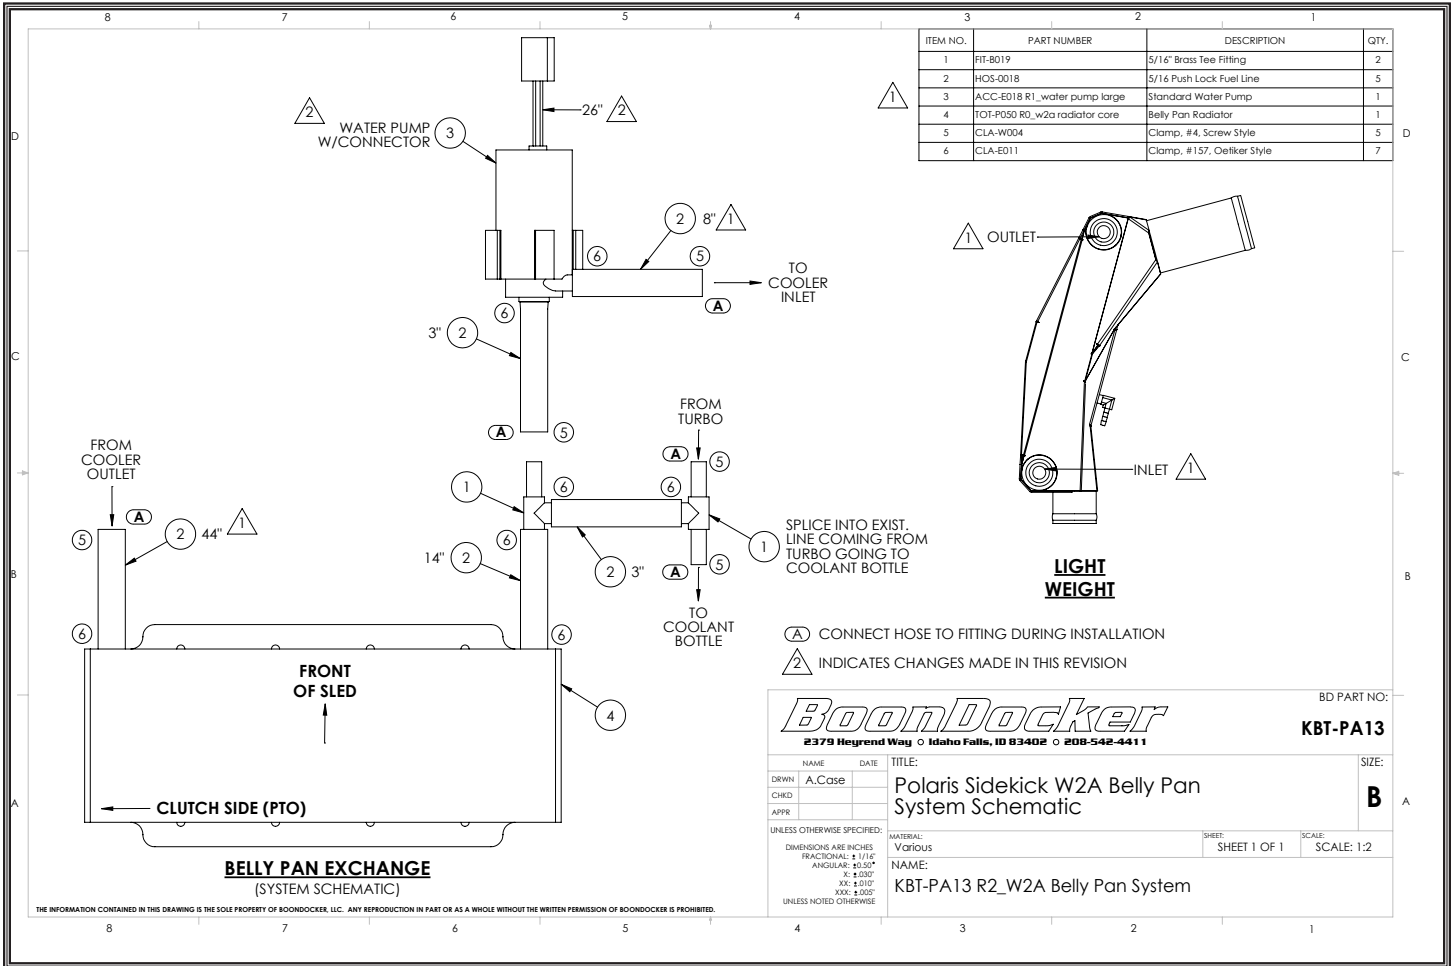


Schematic showing proper routing of Intercooler plumbing.

Intercooler cont'd



Cut coolant line between turbo and coolant bottle as shown ①, and install barbed-T as shown, to connect supplied radiator. Secure T with hose clamps. Attach hose clamp at coolant bottle to secure, as shown.

Intercooler cont'd

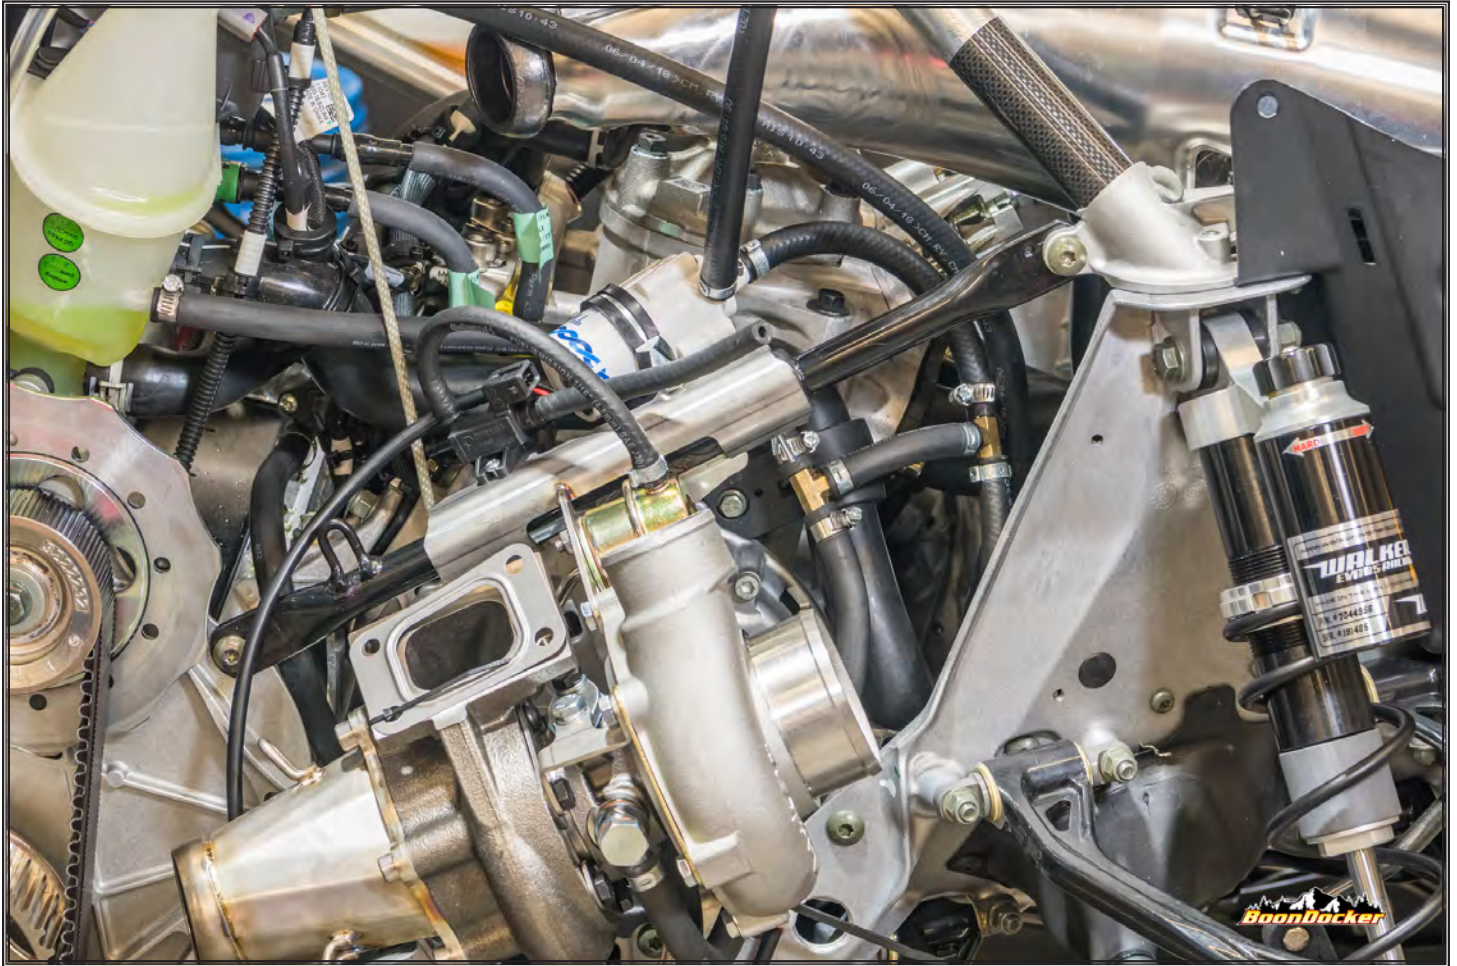

Use provided water pump bracket and hardware to attach water pump to turbo-bracket, as shown. Connect the water pump-inlet to the radiator plumbing as shown. Secure with hose clamps.

Intercooler cont'd



Additional View

Intercooler cont'd



Inspect graphoil gasket (between factory pipe and muffler). Replace if necessary. Apply high-temp silicon to graphoil gasket and slide onto pipe. Apply high-temp silicon to inner-surface of supplied exhaust inlet in preparation for installation.

Exhaust cont'd



Using supplied gasket and hardware, install exhaust inlet to turbo. Bolts are installed from the top, with the head facing up. Washer will go beneath the bolt-head, on the top-side. Use anti-seize on threads to prevent gaulding.

NOTE: Be careful to not damage graphoil gasket. A damaged graphoil gasket or incorrect use of high-temp silicon may cause a boost leak. Boost leaks are difficult to diagnose.

Exhaust cont'd



Using four (4) supplied (long) exhaust springs, connect factory pipe to exhaust inlet. PRO TIP: Use a small amount of high-temp silicon along the edge of the spring to reduce vibration and/or breakage of springs.

Deep Snow cont'd



DEEP SNOW MUFFLER INSTALLATION ONLY: CUT FOOT-PLATE: Measure up 1" from the bottom. Use a straight edge to draw a line from the measure-point to the bottom right corner of grate and cut as shown leaving (3) graded lines above the cut mark.

NOTE: Due to manufacturing tolerances, you may have to nip or bend for final fit.

Deep Snow cont'd



DEEP SNOW MUFFLER INSTALLATION ONLY: Coat inner surface of ball-and-socket joint with high-temp silicon as shown.

NOTE: Standard muffler will appear different than deep snow muffler. In either case, coat inlet bell/socket with high-temp silicon.

Deep Snow cont'd



DEEP SNOW MUFFLER INSTALLATION ONLY: Coat inner surface of ball-and-socket joint of stainless sleeve through tunnel with high-temp silicon as shown.

Deep Snow cont'd



DEEP SNOW MUFFLER INSTALLATION ONLY: Install muffler as shown. Use supplied exhaust springs (short springs go on upper tabs of muffler, long springs go on lower tabs). Spring muffler to spring tabs on tunnel-bracket AND exhaust collector on turbocharger.

Turbo / Air Intake



Loosely install T-bolt clamps to notched silicon fittings as shown.

Turbo / Air Intake




Install fittings to throttle bodies. Verify notches on clamps and fittings are in alignment with tabs on throttle bodies.

CRITICAL: Verify clamps and silicone has complete seated. Trim clamps if necessary for fit.

NOTE: PTO-side has only one (1) tab utilizing slots in fitting/clamp. MAG-side will utilize both slots.

Turbo / Air Intake

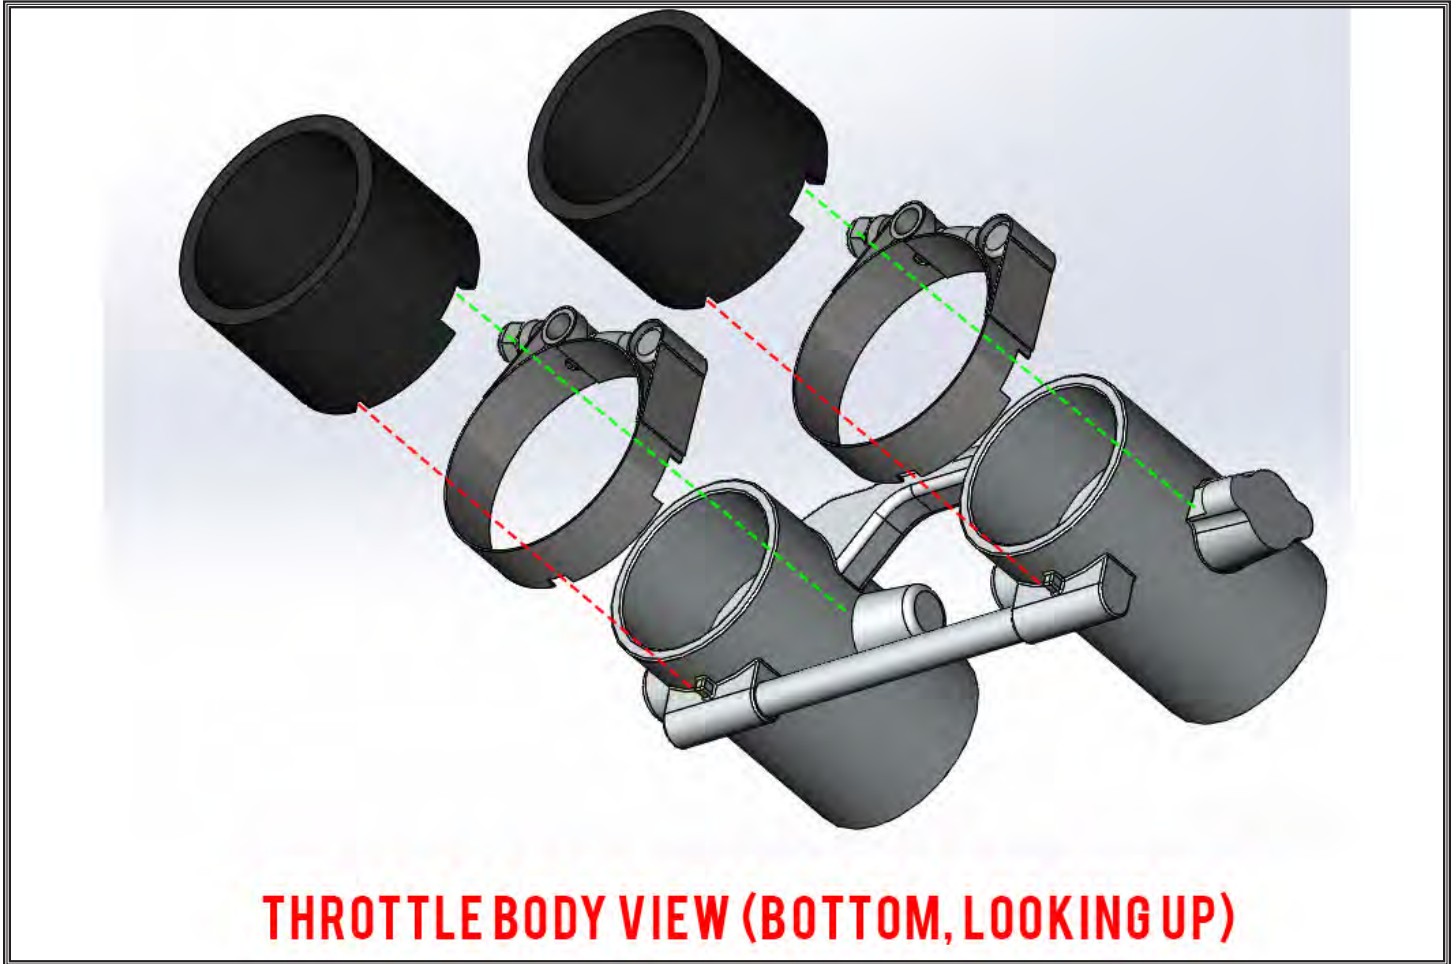

View showing clamp & fitting alignment on the throttle bodies

Fuel System



Install BoonDocker airbox. Secure by tightening hose clamps. Verify routing of auxiliary injector hoses: Auxiliary injector hoses should run along back side of airbox, and wrap around to factory fuel plugs without kink(s). Unplug fuel-sending line ① (green). Install auxiliary injector connection in-line. Remove foam line-isolator ②.

Fuel System



Verify routing of fuel lines. Secure with Zip Tie as shown ①. Verify clearance of fuel lines by turning skis each direction (check clearance of pitman arm and steering rod).

Charge Air



Install silicon 90 as shown. Verify throttle cable runs “on-top” of silicon 90 ❶.


NOTE: Loosely install hose clamps to allow for easy adjustment/fit for next steps.

Charge Air



Install provided intercooler and connect lines as shown. Do not secure hose clamp on upper-barb of intercooler. Trim lines to fit, as necessary to prevent excess tubing slack. Connect lower barb of intercooler to outlet side of water pump. Connect upper barb to long coolant tube from supplied radiator.


Charge Air

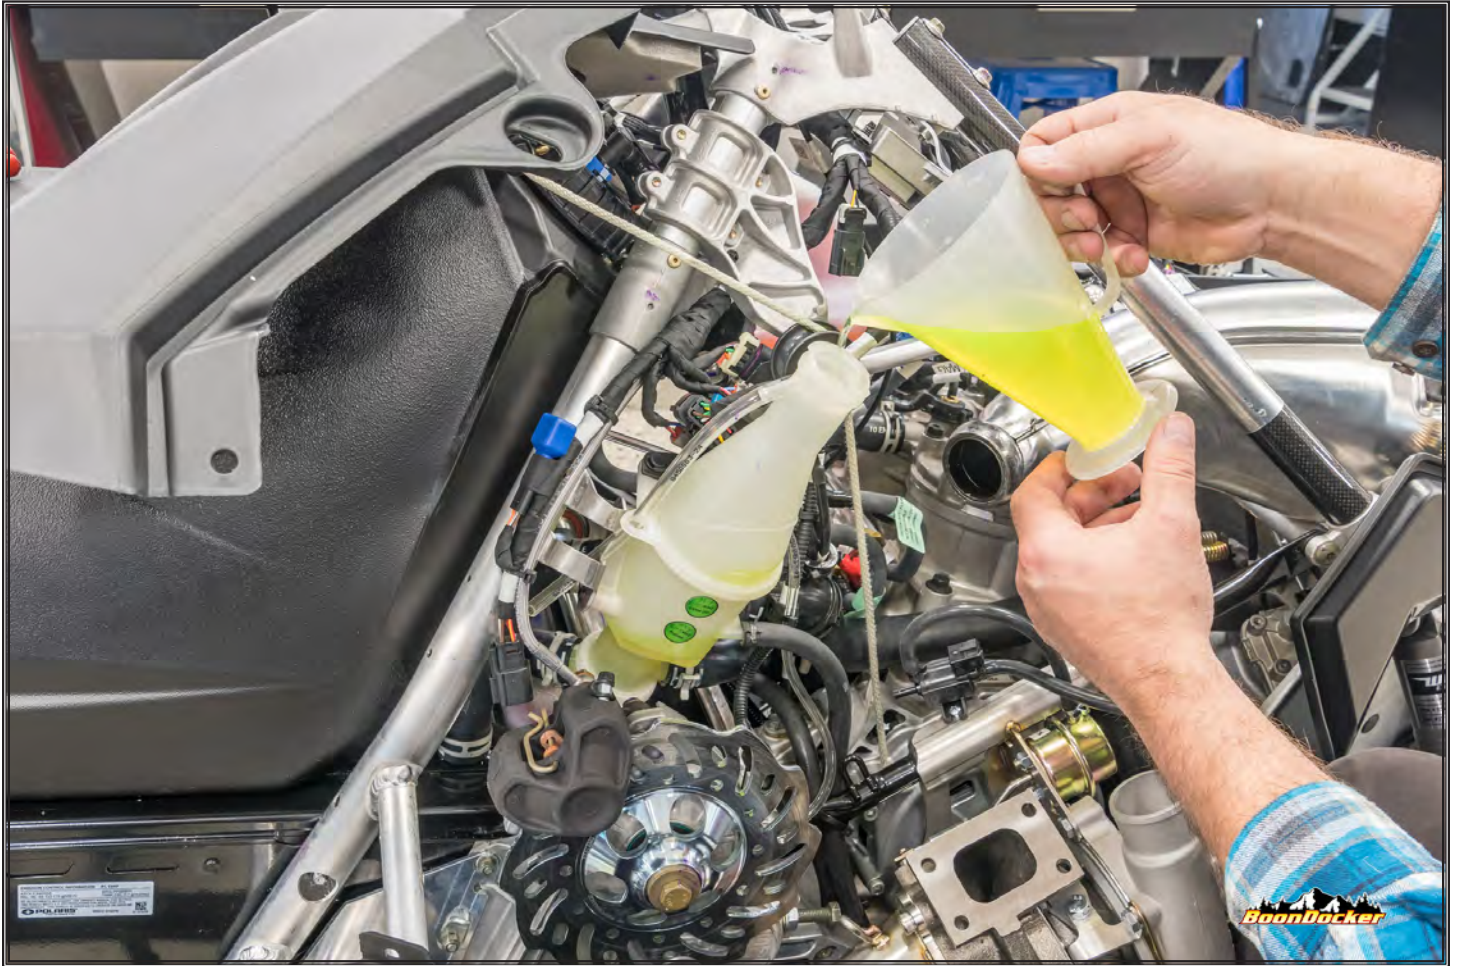

Refill coolant bottle to OEM spec.

NOTE: Check coolant levels after installation. Coolant system may need to be bled.

Charge Air

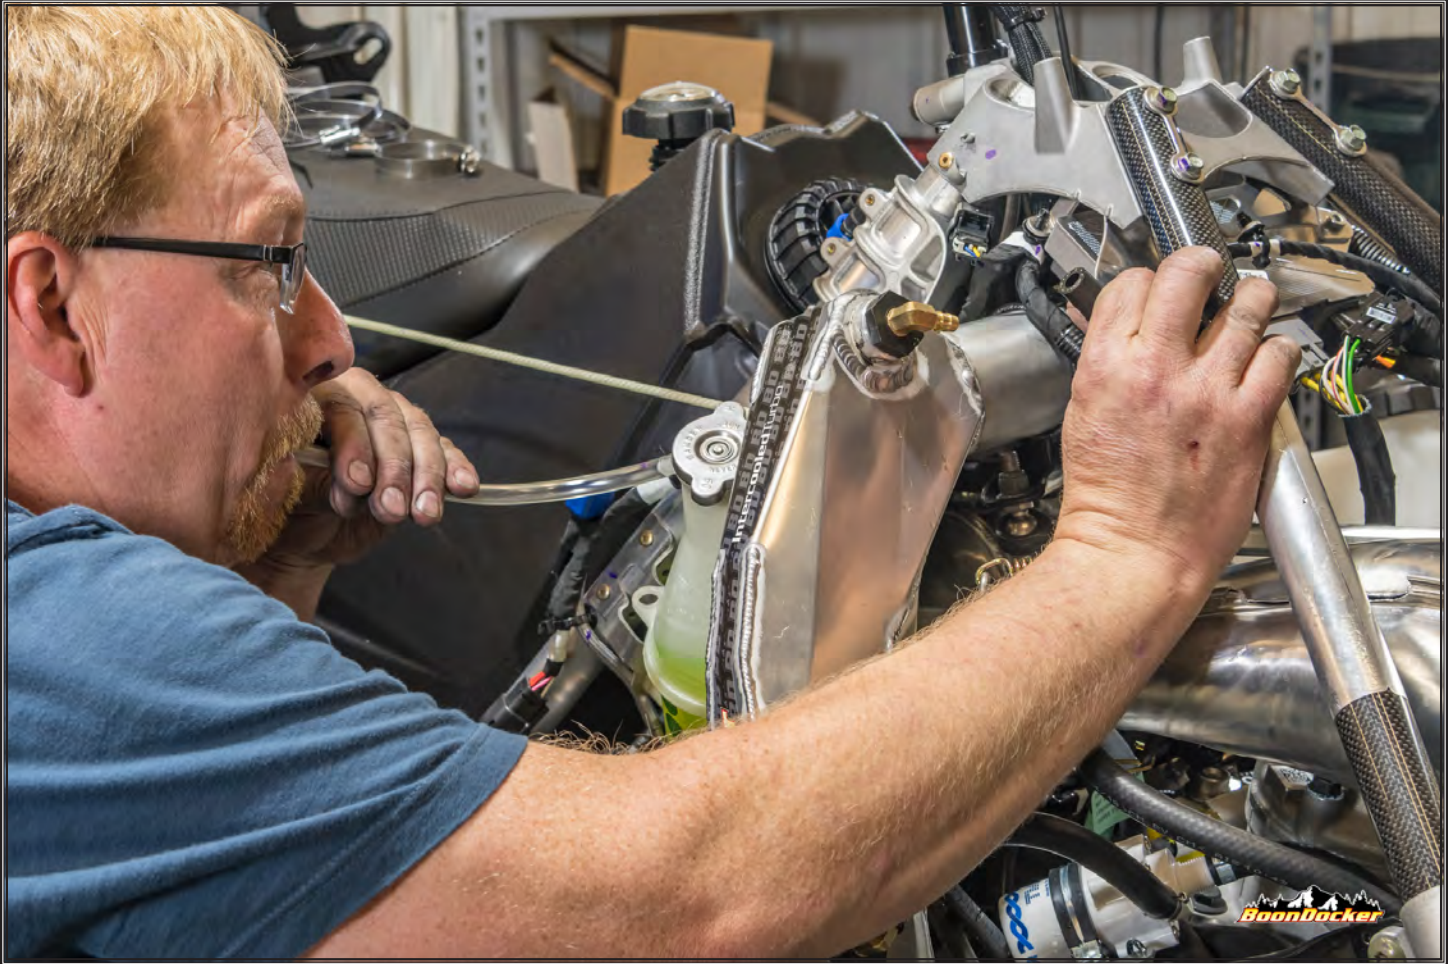

Remove coolant line from upper barb and hold in an elevated position. With coolant bottle full and coolant-bottle cap securely in place, blow on the coolant-bottle vent line, while holding the coolant line from supplied radiator (as shown) as the highest point of the intercooler plumbing system. Continue blowing until coolant comes out of end of the exposed coolant line. THEN, plug the opening of the exposed coolant line, and continue blowing until coolant reaches the barb on the intercooler. Without allowing an air bubble, connect coolant line to upper barb of intercooler and secure with hose clamp. Tighten all hose clamps for intercooler plumbing system.

NOTE: You may have to add additional coolant to reservoir and repeat step if necessary. A small air-bubble will work itself out of the coolant system.


IMPORTANT: check coolant level frequently after installation, during first ride, and bleed as necessary

Charge Air



Verify routing of coolant lines, and secure with zip ties as shown.

Charge Air

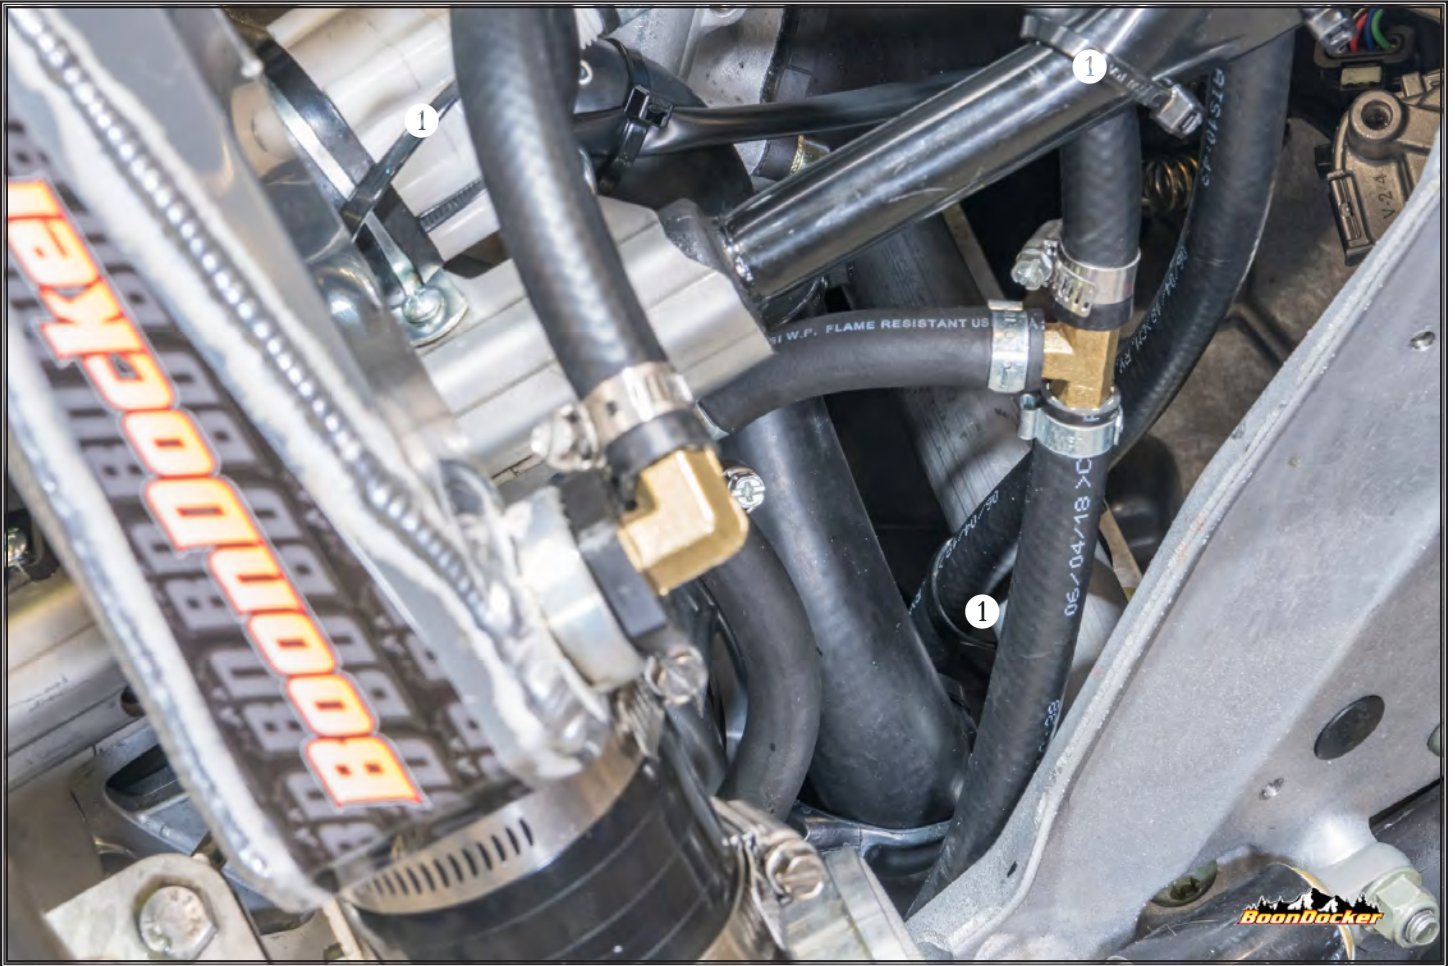

Verify routing of coolant lines, and secure with zip ties as shown.

Charge Air



Verify routing of coolant lines, and secure with zip ties as shown. Verify lines are secured from turbocharger, through chassis.

Charge Air



Install boost reference line, from charge-air intake tube to air-solenoid on turbo bracket.
Secure with Zip Tie ① to prevent boost reference line from disconnecting from barb

Cold Air



Lift factory air-collector off sled. Slide provided cold-air intake plenum onto factory air collector. Mark and drill hole using 5/16 drill bit. Remove supplied cold-air plenum for additional pre-assembly.

Cold Air



Measure down 2 3/4" from air collector box seam and align with the CENTER of the stock hole. Mark and drill 1/2" hole. Reinstall provided cold air intake plenum and fasten with push-darts (two darts from stock intake plenum, and one provided with kit).

IMPORTANT: Prior to installing cold-air intake plenum, make sure ALL debris from drilling has been removed from cold-air intake collector box. Debris can damage turbo components.

Cold Air



Install TBAP sensor by pushing probe through 1/2" hole drilled previously. Use original screw to fasten TBAP sensor.

NOTE: DO NOT OVER TIGHTEN

Cold Air



Install coils onto supplied coil bracket. Coils go in the bracket with wires facing towards nose.

NOTE: MAG goes on bottom, PTO goes on top

Cold Air



Reinstall cold air intake assembly as shown.

Cold Air



Using stock hardware, install ECU and coil mount bracket. Bracket goes behind the ECU, with the coils angling inward. Use supplied velcro between ECU and coil bracket to prevent vibrations and to stabilize ECU / bracket.

Cold Air



Route water-pump power wire around the back side of the intercooler, avoiding the exhaust system. Secure with Zip-Ties. Pair power wire with dash harness as shown. (Any time the hood is removed, both the water pump power harness and the dash harness need to be disconnected, this keeps that process easy.)

NOTE: DO NOT ALLOW coolant lines, intercooler, or cold air system to contact the steering mechanism. Verify by swinging bars (fully) both directions and watching for contact or interference.

Electronics



WIRING DIAGRAM:

- ① Goes to stock wiring harness (you removed this from the ECU in a prior step)
- ② Plugs directly into the stock ECU
- ③ Attach ground wire to PTO side of snowmobile, where stock ground wires are attached (near bumper mount)
- ④ Plugs to boost control solenoid on turbo bracket
- ⑤ Plugs to 4-bar MAP sensor on BoonDocker supplied charge air box
- ⑥ Plugs into the PTO side auxiliary fuel injector (supplied installed on BoonDocker charge air box)
- ⑦ Plugs into the MAG side auxiliary fuel injector (supplied installed on BoonDocker charge air box)
- ⑧ Plugs into exhaust valve servo motor and stock plug (underneath pipe, in nose cone)

Electronics



Lay out wire harness and start to connect as per the WIRING DIAGRAM. The next steps review each connection.

NOTE: Polaris uses white demarcations to show where the factory expects wiring harness to be secured with Zip Ties.

Electronics



Reconnect stock TBAP harness to relocated TBAP sensor as shown.

Electronics



Install wire harness for auxiliary injectors. Route wires around MAG-side of air-box. Run the main wire to the PTO side of the airbox, and route the shorter tail back to the MAG side of the airbox.

Electronics




Connect BoonDocker wire to the 4-BAR MAP sensor on the BoonDocker charge air box ①.

Electronics




Route and secure wire harness as shown. Connect to ECU. Control box is extended out of the way for photo.

Electronics

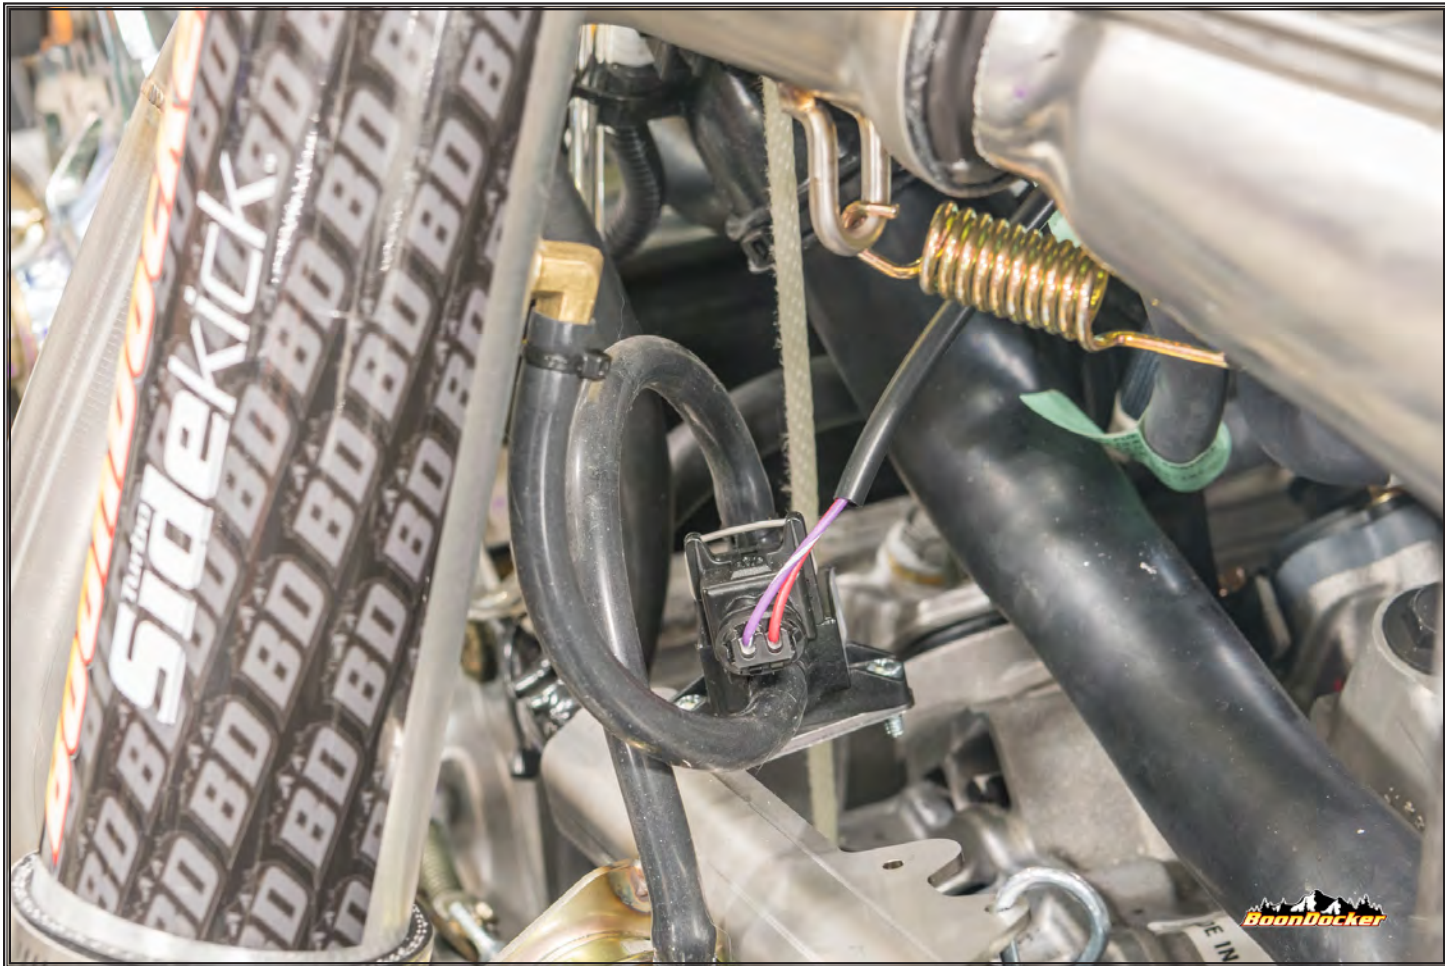

Route boost control solenoid harness. Connect plug and secure wire harness as shown.

Electronics

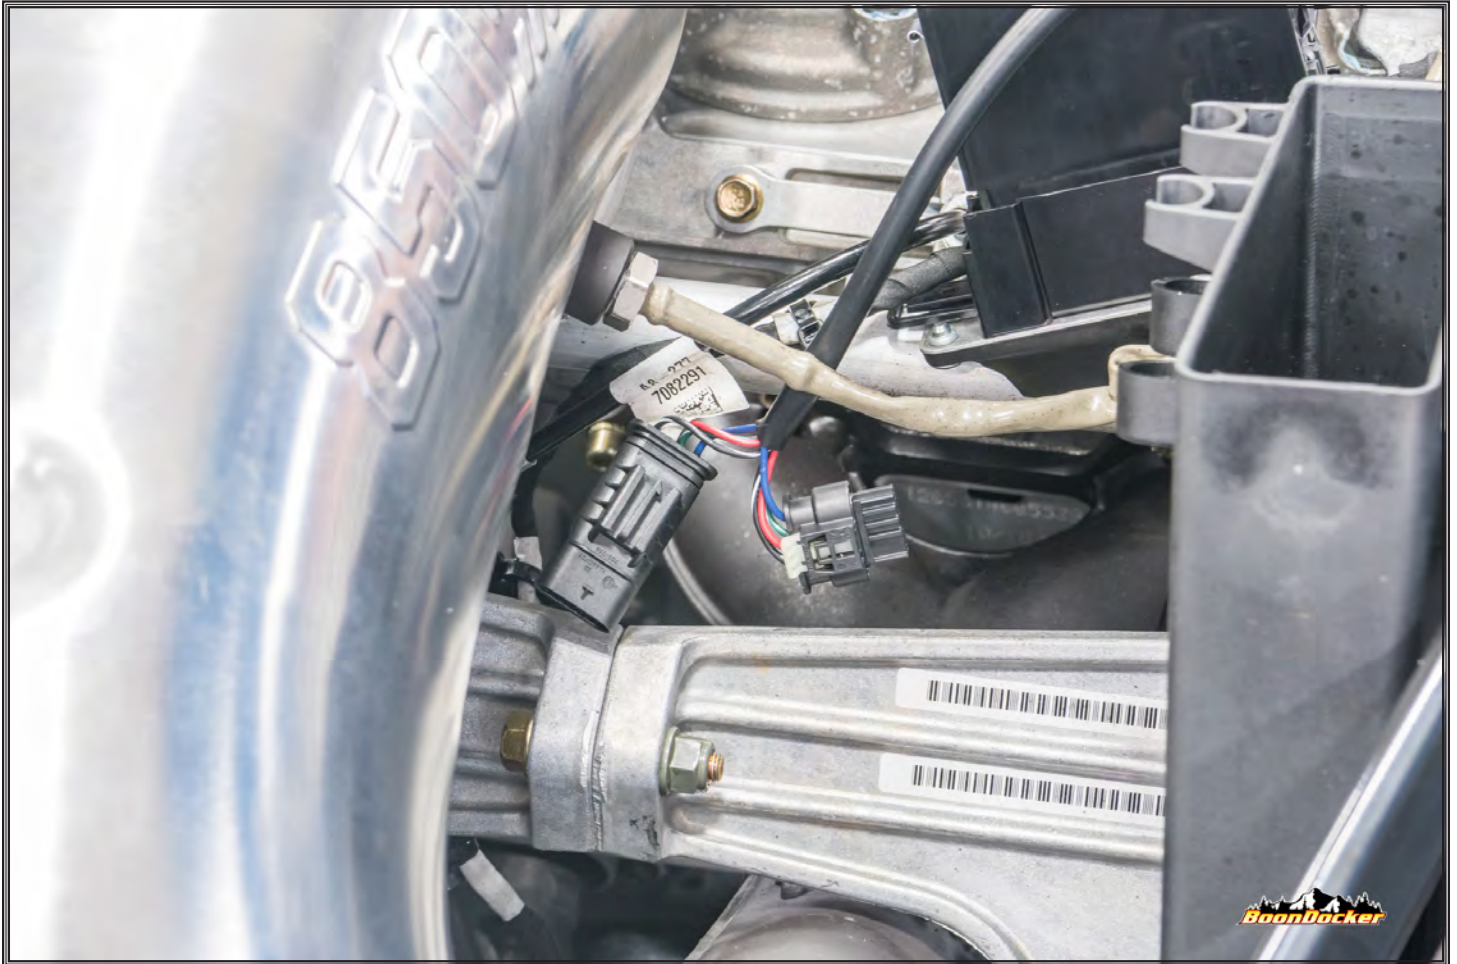

Route harness for exhaust valve servo motor.

Electronics



Plug connections into exhaust valve servo motor. Zip-tie connector to servo-motor-harness to prevent wires from contacting or being too near to exhaust components.


TAKE THE TIME TO PROPERLY HEAT-SHIELD THESE WIRES AND CONNECTIONS. The exhaust pipe at the Y-pipe is going to read in excess of 1,000 degrees. We suggest a heavy application of heat tape and shielding.

Electronics



Secure wire harness to overstructure and existing wiring harness as shown.

Electronics

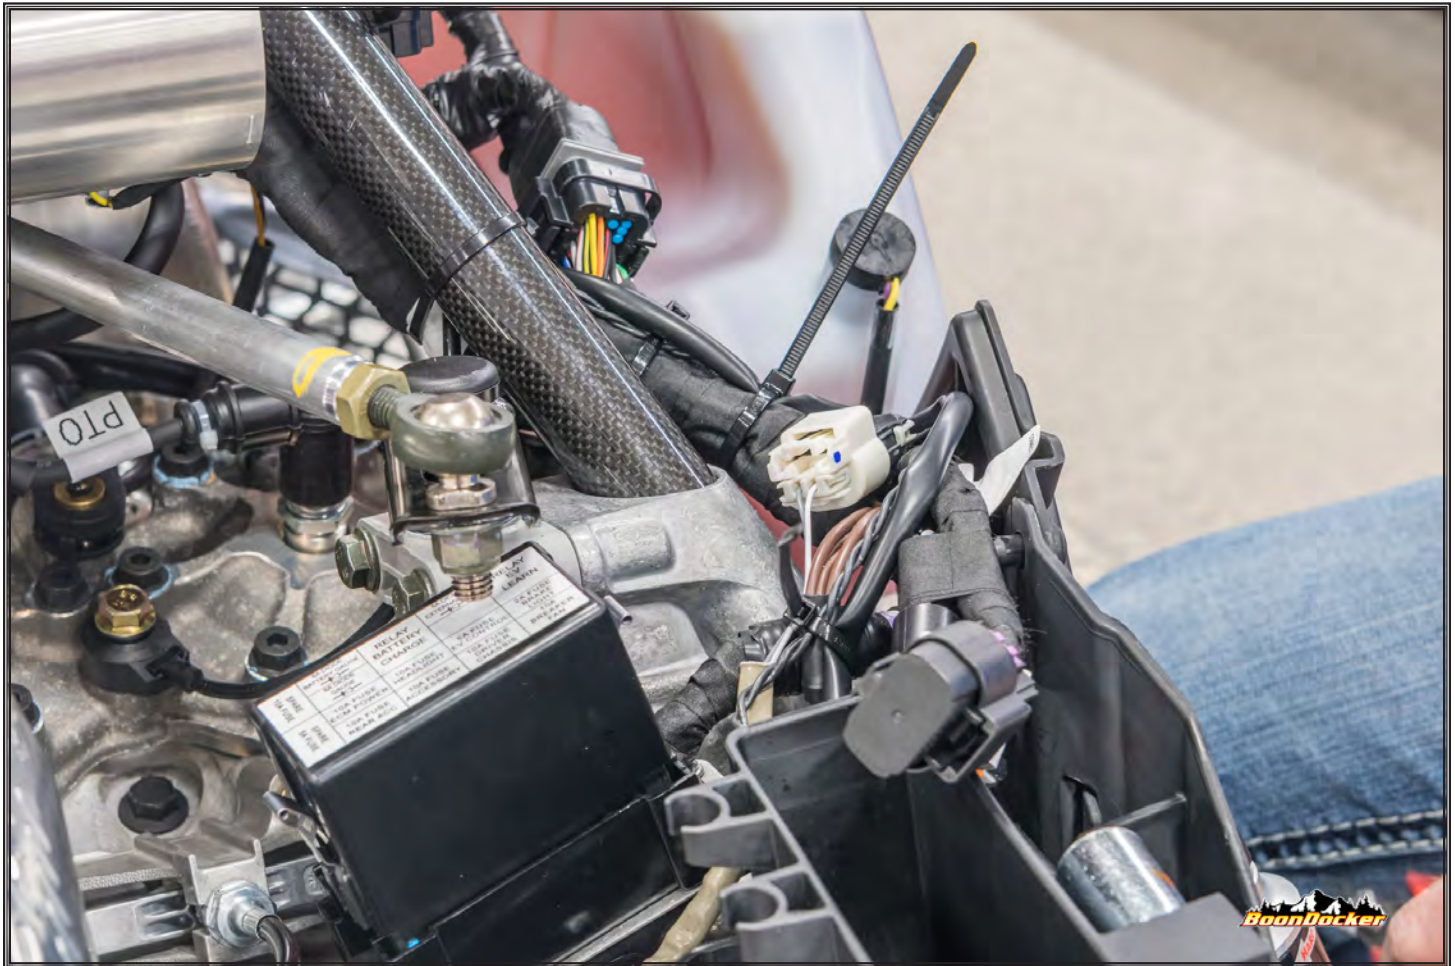


Additional View

Electronics



Additional View

Electronics

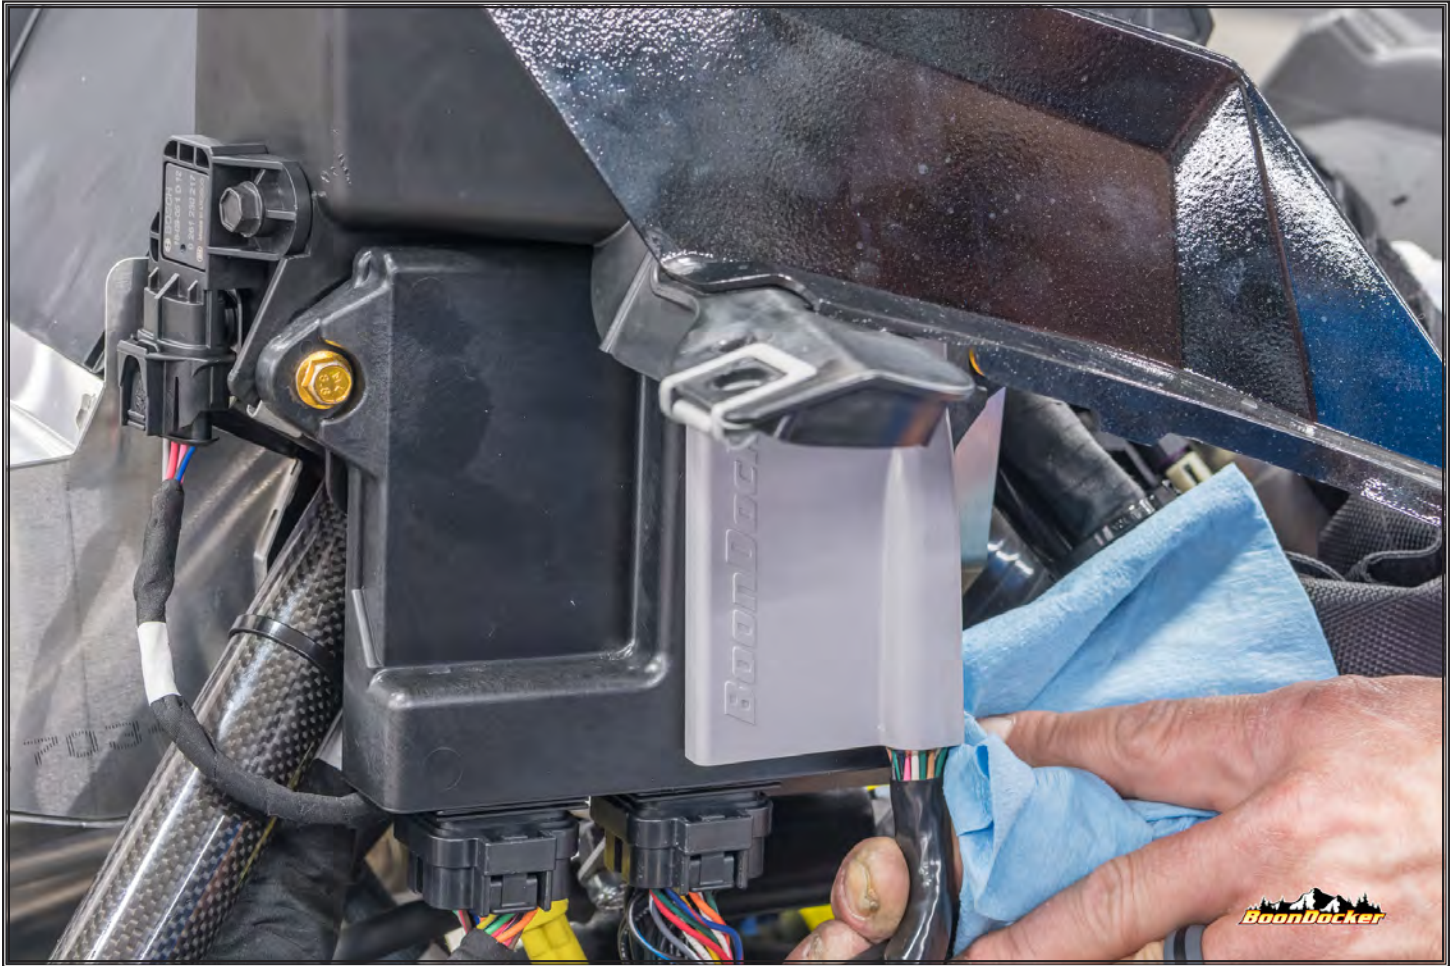

Affix BoonDocker control box as shown. Remove adhesive barrier from supplied Velcro (both sides of Velcro are supplied, installed on control box). Heat the adhesive on the back side of Velcro, just enough to make the adhesive shiny. Lightly heat the attachment point to provide additional adhesion. Secure the wire harness with Zip Tie in case adhesion-bond of Velcro breaks, to prevent control box from falling into clutches and becoming damaged.


NOTE: Do NOT use a torch to heat adhesive or airbox, instead, use a heat gun. Snowmobiles contain flammable liquids. Open flame can create a combustion hazard.

Electronics



On the hood, route the factory accessory power wire along with the dash harness, as shown. Secure with Zip-Tie. After installing body panels and hood, connect both the dash/console harness and the water-pump power supply to complete the circuit. Allow sled to run to temperature. Check and bleed coolant if necessary.

Reassembly

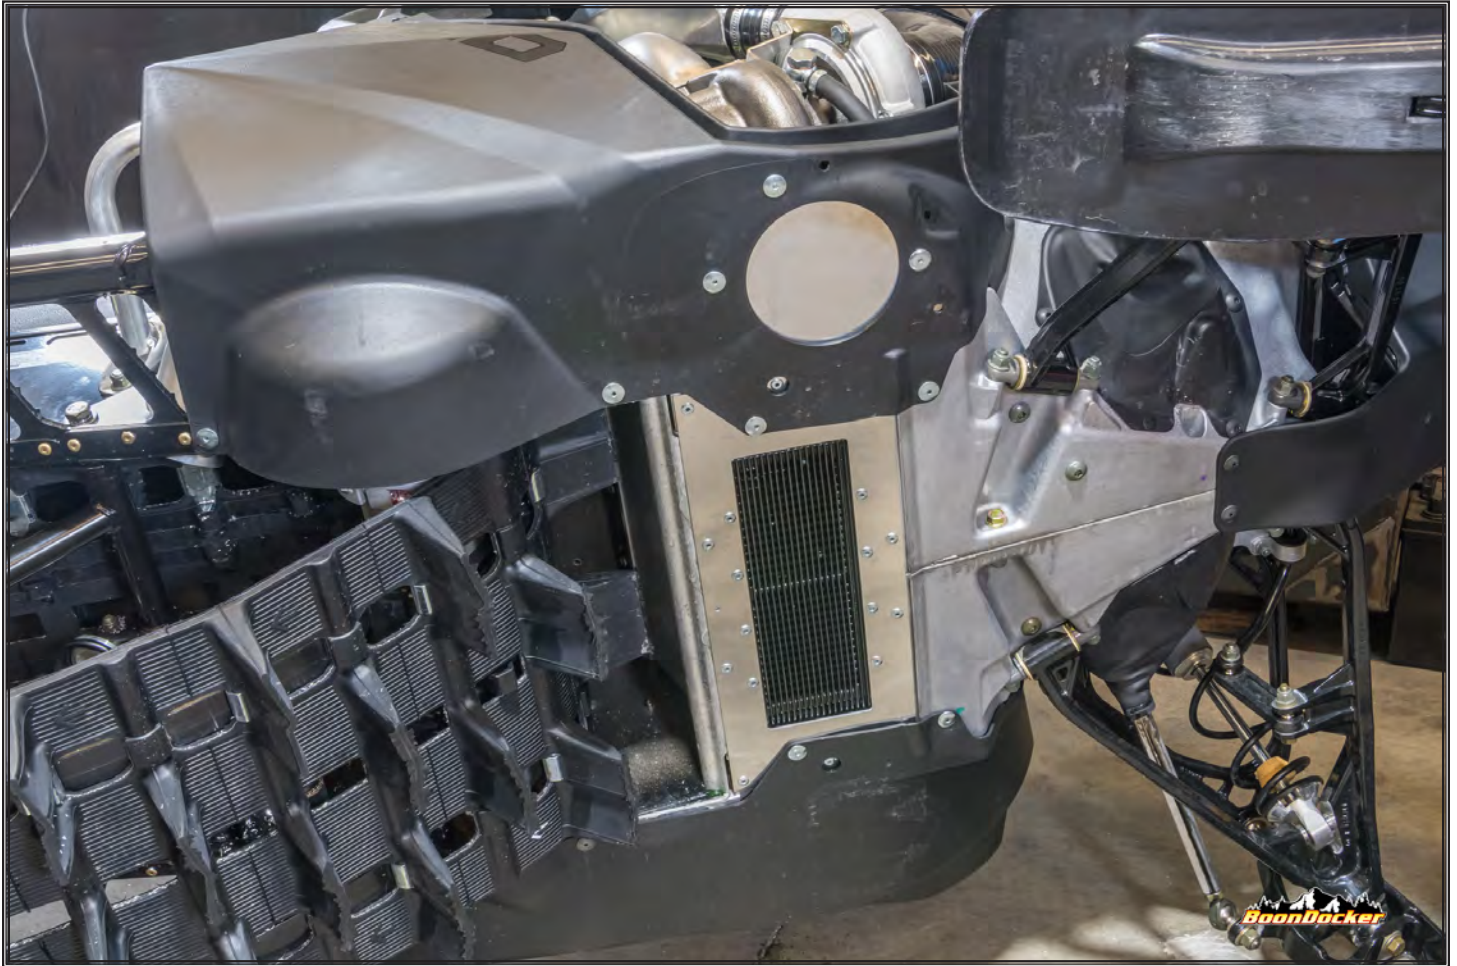

Reinstall MAG-side body using supplied rivets. Reinstall PTO-side rivets (taken out for intercooler trim plate installation).

Reassembly



Install cold-air intake silicon and tubing. Tighten clamps. (non-intercooled model shown for reference)

Reassembly



Additional View (non-intercooled model shown for reference)

Reassembly



Additional View. (non-intercooled model shown for reference)

Reassembly



Re-attach lower plastics using supplied rivets.

Clutching



Install supplied clutching.

Reassembly, cont'd



Ensure tab ❶ correctly seats into groove on factory air intake box.

Reassembly, cont'd



Reinstall console plastics.

Reassembly, cont'd



Reinstall hood and plastics. Don't forget to plug in gauge harness


Fueling Mode



Configure your snowmobile for "Premium Mode" using your gauge. Refer to your owners manual or: "<http://www.polaris.com/en-us/rider-support/owners-manual>" to properly configure the fuel mode.

NOTE: PIDD and Standard Gauge will have different instructions


Control Box

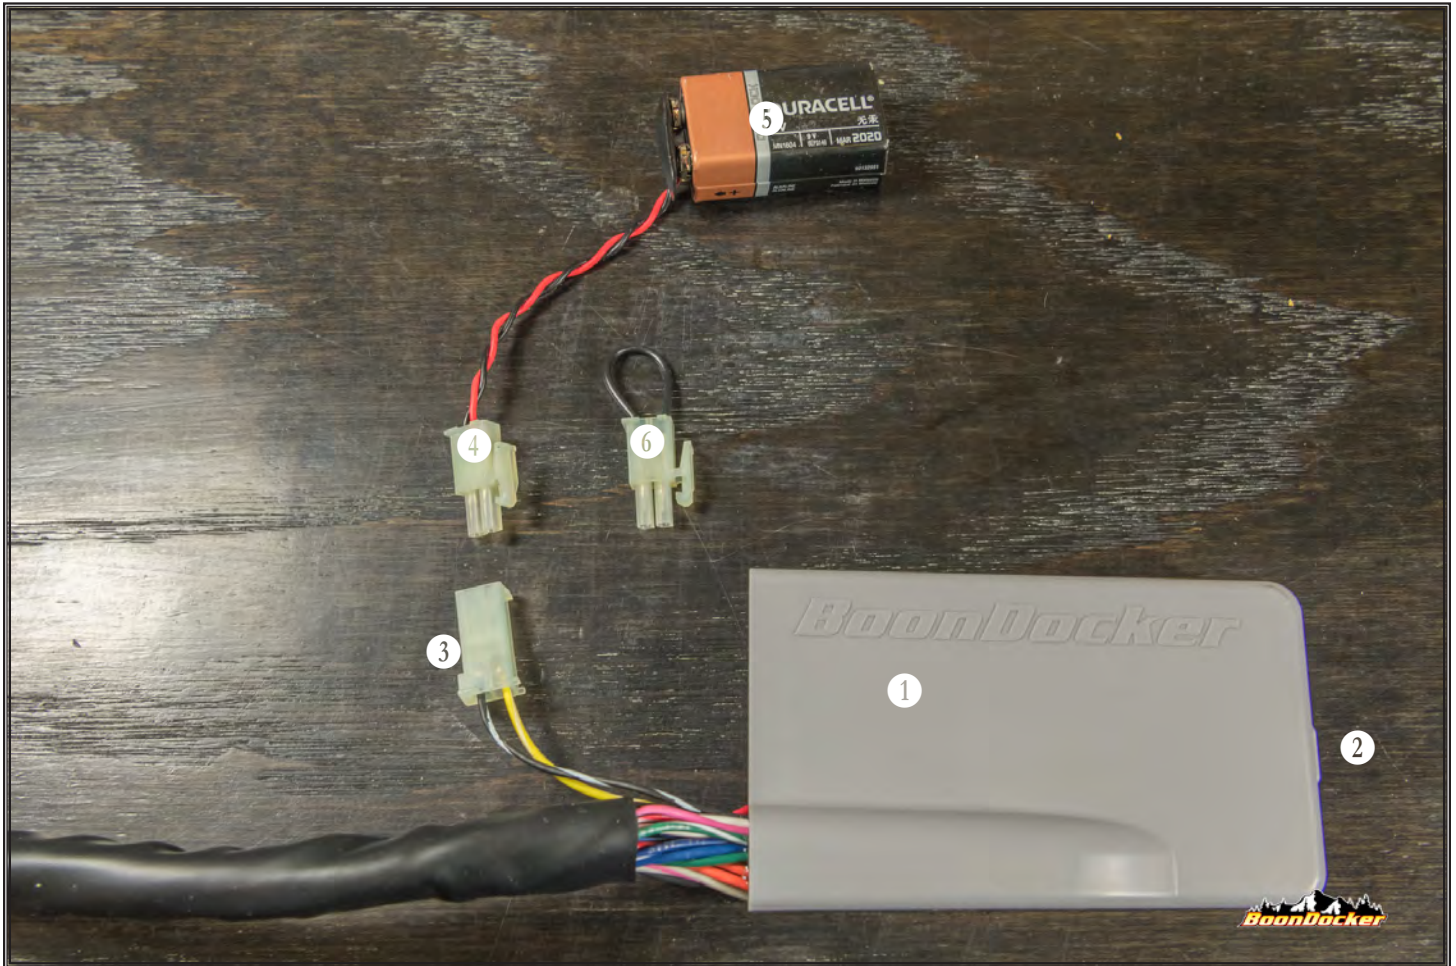

- ① Control Box
- ② USB “Update” Port (Micro-USB cable not included, required for update installation)
- ③ Control Box “Jumper” port
 - ④ “Battery Power” Jumper (required for update installation)
 - ⑤ 9V Battery (not included, required for update installation)
- ⑥ “Map” Jumper (leave unplugged, unless instructed by BoonDocker)

NOTE: During normal operation, nothing should be plugged into the ③ Jumper port, unless specifically requested by BoonDocker.

Control Box

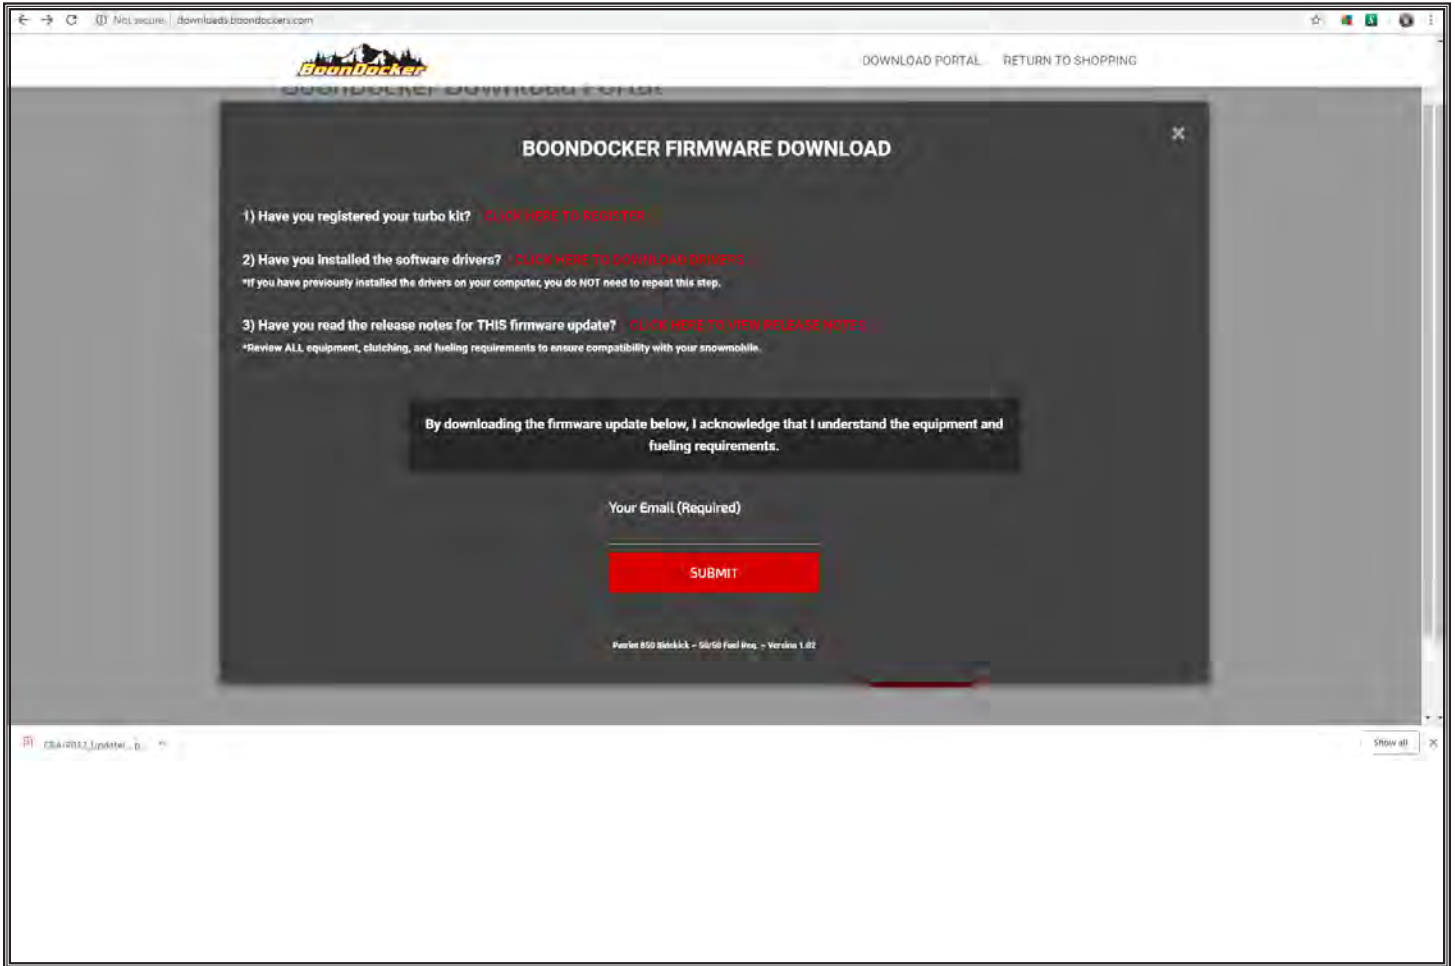

UPDATING your control box is required! DO NOT RUN your snowmobile without first updating your control box.

UPDATE YOUR CONTROL BOX: Please refer to Control Box Update Instructions, available at <http://downloads.boondockers.com/>

HAVE FUN



GO HAVE FUN!