

IONDON

Darby Handshower Rail Set 15-30

Installation Instructions









Tools You Will Need













Adjustable Wrench

Impact Drill

Adjustable Pliers

Screwdriver

Teflon Tape

For ease of installation you will need:


- To read the installation instructions completely before beginning.
- To read all warnings, care, and maintenance information.

Before beginning installation, check for any damage that may have occurred during transport.


Note: Damage claims cannot be made during or after installation.




Installation Instructions

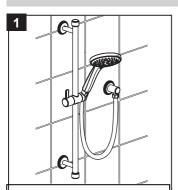


Determine the location of the sliding bar.

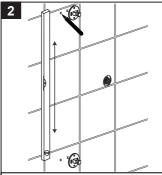


Align brackets and mark drill holes in desired location.

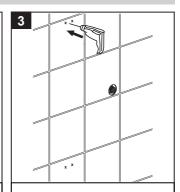


Drill 1/4" holes in marked locations.

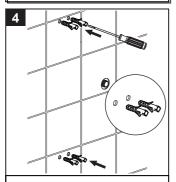


Drive the wall anchors into the drilled holes with a Phillips screwdriver.

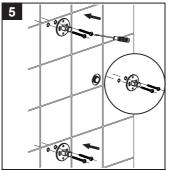


Place the mounting brackets over the wall anchors. Secure them to the wall using the supplied screws.

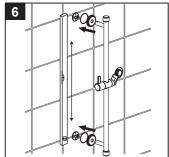


Temporarily place the slide bar on the mounting brackets to check alignment. If necessary, loosen the screws and realign the mounting brackets.

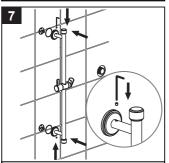

Place sliding bar assembly on the mounting brackets. Secure it to the wall using the top and bottom set screws.

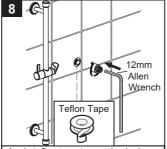



Apply teflon tape to supply nipple. Thread on supply nipple to 1/2" NPT water supply. Apply teflon tape to supply nipple and thread on bushing with 12mm allen wrench.

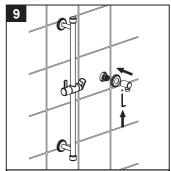

Slide on hand shower supply outlet trim assembly and secure with set screw.

15125867

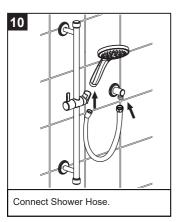

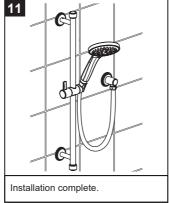

Cleaning Instructions

Rinse away any traces of soap and gently dry with a clean, soft cloth after each use. Rinse completely with water and dry any overspray. This will maintain the finish and avoid water spotting.


To remove mineral deposits, use a 50/50 solution of white vinegar and water. Do not allow the solution to soak on the product. Simichrome Polish® contains a protective film to enhance maintenance and is helpful in preventing water spot buildup. Follow instructions to ensure optimum results.


Never use an abrasive material such as a brush or scouring pad to clean the surface. The use of abrasive cleaners, cleansers or disinfectants will alter the surface finish and void the warranty.

Do not allow certain materials such as toothpaste, cologne, shaving cream, nail polish remover, vinegar, wine, drain and glass cleaners to remain on the surface. Prolonged contact will alter surface finishes and void the warranty.

We DO NOT recommend using any household cleaners as many can cause damage to the finish.

Please see the website for care instructions for specific finishes.



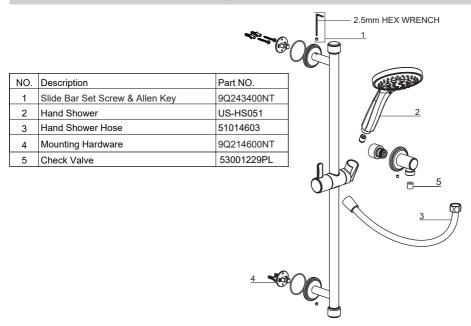

3

15125867



Applicable Standards/Codes

IAPMO certified to meet or exceed the following:

- ASME A112.18.1/CSA B125.1
- · Uniform Plumbing Code
- · National Plumbing Code of Canada
- EPA WaterSense
- ADA Compliant







Installation Dimensions

